


Service
Service
Service

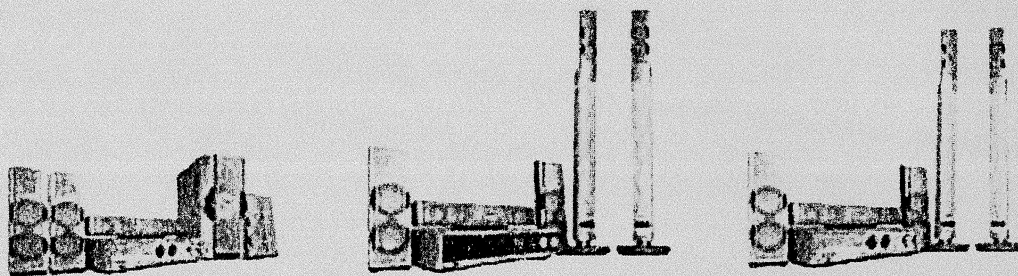

Service Manual



TABLE OF CONTENTS

	Page
Location of pc boards & Version variations	1-2
Technical Specifications	1-3
Measurement setup	1-4
Service Aids, Safety Instruction, etc.	1-5
Disassembly Instructions & Service positions	2-1
Service Test Programs	3-1
Region codes setting, software upgrades, etc	3-3
Set Block diagram & Wiring diagram	4
PCMCIA board	5
Front Board	6
ECO6 Tuner Board: System Non-Cenelec	7A
System Cenelec	7B
Power Module PWR207	8
AV Board	9
5DTC Module	10
CD222 FE (Front End) Board	11
CD222 BE (Back End) Board	12
Set Mechanical Exploded view & parts list	13
History	14

© Copyright 2003 Philips Consumer Electronics B.V. Eindhoven, The Netherlands
All rights reserved. No part of this publication may be reproduced, stored in a retrieval system or transmitted, in any form or by any means, electronic, mechanical, photocopying, or otherwise without the prior permission of Philips.

Published by KC 0329 Service Audio Printed in The Netherlands Subject to modification

CLASS 1
LASER PRODUCT




3139 785 30211

Version 1.1



PHILIPS

LOCATION OF PC BOARDS

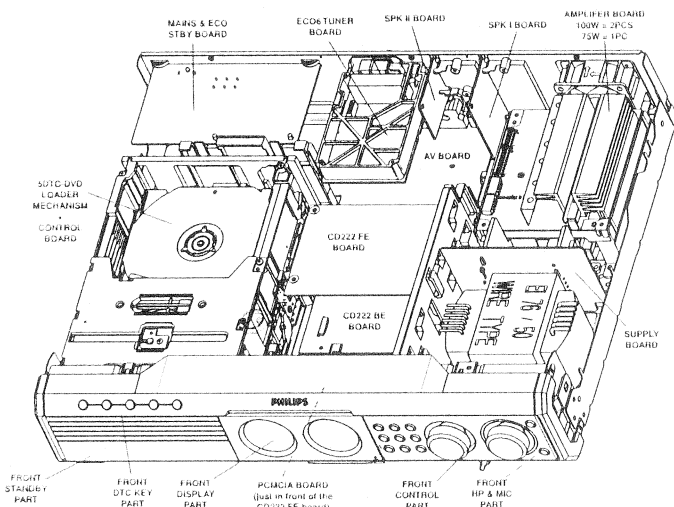

VERSION VARIATIONS:

Type /Versions:	MX5500D				MX5600D		MX5700D			
Features & Board in used:	/21S	/33S	/35S	/37		/37	/21R	/21S	/22S	/25S
Karaoke	-	X		-	-	X	X	-	-	
RDS + News	-	-		-	-	-	-	X	X	
Pro-Scan	X	X		X		X	X	X	-	-
PCMCIA (Media Slot)	X	X		X		X	X	X	X	X
Standby - Clock Display	X	X		X		X	X	X	X	X
ECO Standby - No Display	X	X		X		X	X	X	X	X
Voltage Selector	X	-		-		-	X	X	-	-
Digital In / Out	X	X		X		X	X	X	X	X
Aux Input	X	X		X		X	X	X	X	X
TV Input	X	X		X		X	X	X	X	X
Line Output	X	X		X		X	X	X	X	X
SCART output	-	-		-		-	-	-	X	X
Pr, Pb & Y Outputs	X	X		X		X	X	X	-	-
CVBS Output	X	X		X		X	X	X	X	X
S-Video Output	X	X		X		X	X	X	X	X
Headphone Socket	X	X		X		X	X	X	X	X
Mono BE board - CD222 P	-	-		-		-	-	-	-	-
Mono BE board - CD222 PM	-	-		X		X	-	-	X	X
Mono BE board - CD222 PMK	X	X		-		-	X	X	-	-
Tuner board - ECO6 System non-Cenelec	X	X		X		X	X	X	-	-
Tuner board - ECO6 System Cenelec	-	-		-		-	-	-	X	X
75W 6-Ch (Single SW) with 1x Amplifier pcb	X	X		-		-	-	-	-	-
75W 7-Ch (Twin SW) with 1x Amplifier pcb	-	-		-		X	-	-	-	-
100W 6-Ch (Single SW) with 2x Amplifier pcb	-	-		X		-	-	-	-	-
100W 7-Ch (Twin SW) with 2x Amplifier pcb	-	-		-		X	X	X	X	X

SPECIFICATIONS

GENERAL:

Mains voltage : 110-127V/220-240V Switchable for /21..
 120V for /37
 240V for /25S
 220-230V for /22S/33S
 Mains frequency : 50/60Hz
 Power consumption : < 0,5W at ECO Standby
 < 20W Standby (clock on, demo off)
 Clock accuracy : < 4 seconds per day
 Dimension centre unit : 435 x 100 x 360mm

TUNER:

FM
 Tuning range : 87.5-108MHz
 Grid : 50kHz for /21.. /22S/25S/33S
 100kHz for /21.. /37
 IF frequency : 10.7MHz ± 25kHz
 Aerial input : 75Ω coaxial
 Sensitivity at 26dB S/N : < 7μV
 Selectivity at 600kHz bandwidth : > 25dB
 Image rejection : > 25dB
 Distortion at RF=1mV, dev. 75kHz : < 3%
 -3dB Limiting point : < 8μV
 Crosstalk at RF=1mV, dev. 40kHz : > 18dB

MW

Tuning range : 531-1602kHz for /21.. /22S/25S/33S
 530-1700kHz for /21.. /37
 Grid : 9kHz for /21.. /22S/25S/33S
 10kHz for /21.. /37
 IF frequency : 450kHz ± 1kHz
 Aerial input : Frame aerial
 Sensitivity at 26dB S/N : < 4.0mV/M
 Selectivity at 18kHz bandwidth : > 18dB
 IF rejection : > 45dB
 Image rejection : > 28dB
 Distortion at RF=50mV, m=80% : < 5%

AMPLIFIER:

Output power for **75W versions** (MX5500D/21S/33S)
 Stereo mode (DIN) : 2 x 75W RMS ^{a)}
 Surround mode ^{a)} : 75W RMS/channel
 Output power for **100W versions** (other versions)
 Stereo mode (DIN) : 2 x 100W RMS ^{a)} / 2 x 80W FTC ^{a)}
 Surround mode ^{a)} : 100W RMS/channel
 Frequency response ±3dB : 20Hz-20kHz
 Hum (minimum volume) : 200nW
 Residue noise (min. volume) : 40nW
 Digital Sound Control : Stereo, 3D Sound, Multi modes ^{a)}
 Bass & Treble : -3 to +3 ^{a)}
 Input sensitivity
 TV-in : 350mV ± 3dB
 Aux-in : 880mV ± 2dB
 Output sensitivity
 Line out : 600mV ± 2dB at 47kΩ
 Headphone (vol. max.) : 660mV ± 2dB at 32Ω

COMPACT DISC/VCD/DVD:

Video Decoding : MPEG-2 / MPEG-1
 Video DAC : 10 Bits
 Signal System : PAL / NTSC
 Video Format : 4:3 / 16:9
 MP3-CD bit rate ^{a)} : 32-256 kbs, variable bitrates
 MP3-CD sampling frequencies ^{a)} : 32kHz, 44.1kHz, 48kHz
 CBVS out ^{a)}

CVBS level : $1.0 \pm 0.1 V_{pp}$

Luminance S/N ratio : > 45dB (unweighted)

YUV out ^{a)}

Amplitude : 714mV ± 7mV

S/N ratio : > 50dB (unweighted)

S-Video out ^{a)}

Y level : $1.0 \pm 0.1 V_{pp}$

Y S/N ratio : > 48dB (unweighted)

C level (burst) : 286mV V_{pp} +1/-4 dB

Digital Out : Coaxial acc IEC61937 / IEC60958

Digital In : Coaxial acc IEC60958

^{a)} with only channel(s) under measurement loaded, all other channels are unloaded.

^{a)} with 8Ω, 120Hz - 12.5kHz & 10% THD for /37

^{a)} with 8Ω, 1kHz & 10% THD for version other than /37


^{a)} Frequency response in each setting is software controlled.

^{a)} Recording format: ISO9660, UDF format is not supported.

^{a)} Output terminals terminated with 75Ω


MEASUREMENT SETUP

Tuner FM

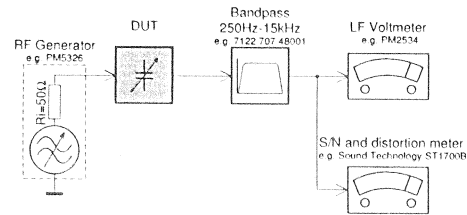

Use a bandpass filter to eliminate hum (50Hz, 100Hz) and disturbance from the pilotone (19kHz, 38kHz).


Tuner AM (MW, LW)

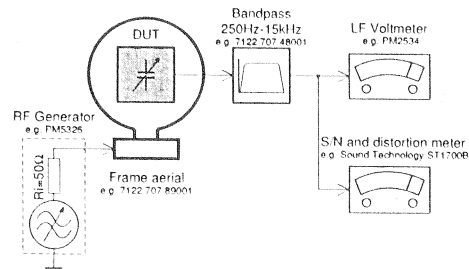

To avoid atmospheric interference all AM measurements have to be carried out in a Faraday's cage. Use a bandpass filter (or at least a high pass filter with 250Hz) to eliminate hum (50Hz, 100Hz).


CD

Use Audio Signal Disc SBC429 4822 397 30184 (replaces test disc 3)

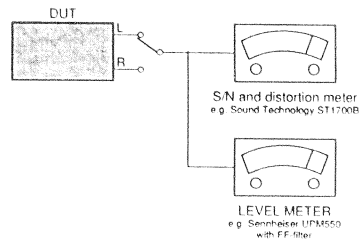

Recorder

Use Universal Test Cassette CrO2 SBC419 4822 397 30069
or Universal Test Cassette Fe SBC420 4822 397 30071

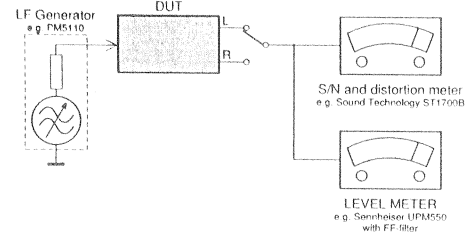

SERVICE AIDS

Service Tools:

Universal Torx driver holder	4822 395 91019
Torx bit T10 150mm	4822 395 50456
Torx driver set T6 - T20	4822 395 50145
Torx driver T10 extended	4822 395 50423
Allen key set (1.5, 2, 2.5, 3, 4, 5, 6, 8mm)	5322 395 10754


Compact Disc:

SBC426/426A Test disc 5 + 5A	4822 397 30096
SBC442 Audio Burn-in Test disc 1kHz	4822 397 30155
SBC429 Audio Signals disc	4822 397 30184
SBC444/444A	4822 397 30245
CD-RW Printed Audio Test Disc	7104 099 96611
Dolby Pro-logic Test Disc	4822 395 10216

ESD Equipment:

Anti-static table mat - large 1200x650x1.25mm	4822 466 10953
Anti-static table mat - small 600x650x1.25mm	4822 466 10958
Anti-static wristband	4822 395 10223
Connector box (1MΩ)	4822 320 11307
Extension cable (to connect wristband to conn. box)	4822 320 11305
Connecting cable (to connect table mat to conn. box)	4822 320 11306
Earth cable (to connect product to mat or box)	4822 320 11308
Complete kit ESD3 (combining all above products)	4822 320 10671
Wristband tester	4822 344 13999

HANDLING CHIP COMPONENTS

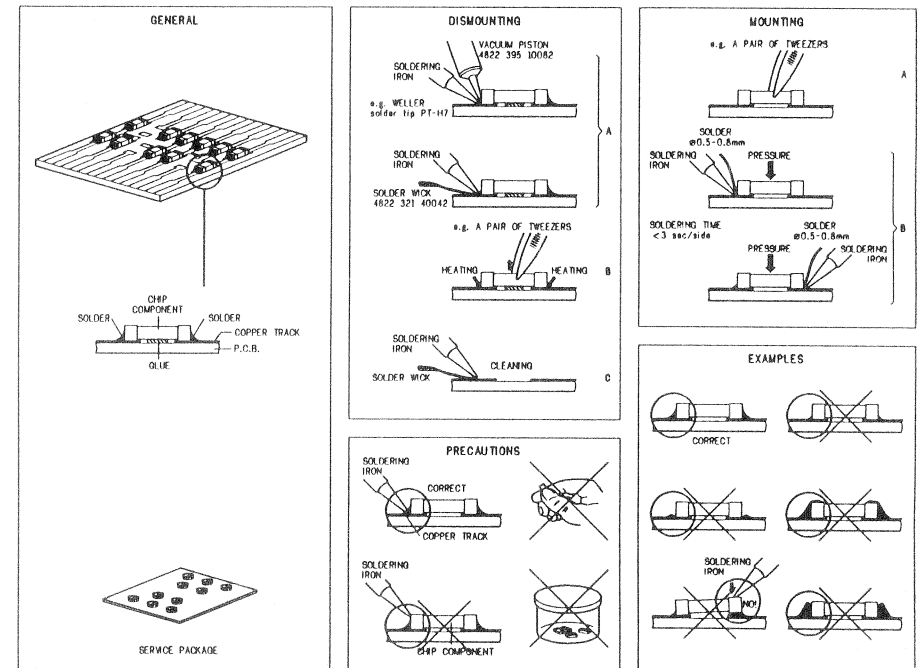

(GB) WARNING

All ICs and many other semi-conductors are susceptible to electrostatic discharges (ESD). Careless handling during repair can reduce life drastically.

When repairing, make sure that you are connected with the same potential as the mass of the set via a wrist wrap with resistance. Keep components and tools also at this potential.

ESD**(NL) WAARSCHUWING**

Alle IC's en vele andere halfgeleiders zijn gevoelig voor electrostatische ontladingen (ESD).
Onzorgvuldig behandelen tijdens reparatie kan de levensduur drastisch doen verminderen. Zorg ervoor dat u tijdens reparatie via een polsband met weerstand verbonden bent met hetzelfde potentiaal als de massa van het apparaat.
Houd componenten en hulpmiddelen ook op ditzelfde potentiaal.

(F) ATTENTION

Tous les IC et beaucoup d'autres semi-conducteurs sont sensibles aux décharges statiques (ESD). Leur longévité pourrait être considérablement écourtée par le fait qu'aucune précaution n'est prise à leur manipulation.

Lors de réparations, s'assurer de bien être relié au même potentiel que la masse de l'appareil et enfiler le bracelet muni d'une résistance de sécurité.

Veiller à ce que les composants ainsi que les outils que l'on utilise soient également à ce potentiel.

(D) WARNUNG

Alle ICs und viele andere Halbleiter sind empfindlich gegenüber elektrostatischen Entladungen (ESD).
Unvorsorgliche Behandlung im Reparaturfall kann die Lebensdauer drastisch reduzieren.
Veranlassen Sie, dass Sie im Reparaturfall über ein Pulsarmband mit Widerstand verbunden sind mit dem gleichen Potential wie die Masse des Gerätes.
Bauteile und Hilfsmittel auch auf dieses gleiche Potential halten.

(I) AVVERTIMENTO

Tutti IC e parecchi semi-conduttori sono sensibili alle scariche statiche (ESD). La loro longevità potrebbe essere fortemente ridotta in caso di non osservazione della più grande cauzione alla loro manipolazione. Durante le riparazioni occorre quindi essere collegato allo stesso potenziale che quello della massa dell'apparecchio tramite un braccialetto a resistenza.
Assicurarsi che i componenti e anche gli utensili con quali si lavora siano anche a questo potenziale.

(GB)

Safety regulations require that the set be restored to its original condition and that parts which are identical with those specified, be used.

"Pour votre sécurité, ces documents doivent être utilisés par des spécialistes agréés, seuls habilités à réparer votre appareil en panne".

(NL)

Veiligheidsbepalingen vereisen, dat het apparaat bij reparatie in zijn oorspronkelijke toestand wordt teruggebracht en dat onderdelen, identiek aan de gespecificeerde, worden toegepast.

(F)

Les normes de sécurité exigent que l'appareil soit remis à l'état d'origine et que soient utilisées les pièces de rechange identiques à celles spécifiées.


(D)

Bei jeder Reparatur sind die geltenden Sicherheitsvorschriften zu beachten. Der Originalzustand des Geräts darf nicht verändert werden; für Reparaturen sind Original-Ersatzteile zu verwenden.

(I)

Le norme di sicurezza esigono che l'apparecchio venga rimesso nelle condizioni originali e che siano utilizzati i pezzi di ricambio identici a quelli specificati.

"After servicing and before returning set to customer perform a leakage current measurement test from all exposed metal parts to earth ground to assure no shock hazard exist. The leakage current must not exceed 0.5mA."

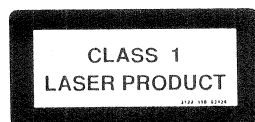**(GB) Warning !**

Invisible laser radiation when open.
Avoid direct exposure to beam.

(S) Varning !

Osynlig laserstrålning när apparaten är öppnad och spårren är utkopplad. Beträkta ej strålen.

(SF) Varoitus !

Avatussa laitteessa ja suojalukituksen ohitettaessa olet alttiina näkymättömälle lasersäteilylle. Älä katso säteeseen!

(DK) Advarse !

Usynlig laserstrålning ved åbning når sikkerhedsafbrydere er ude af funktion. Undgå udsættelse for stråling.

DISMANTLING INSTRUCTIONS

Dismantling of the Front Panel assembly

- 1) Loosen the 9 screws to dismantle the Top Cover (pos 252)
 - 2 screws on each side
 - 5 screws on the Rear Panel (pos 251).
- 2) Loosen 5 screws A and 8 catches C1 to slide the Front Panel assembly (pos 101, 102, 103, etc) as per figure 1.

Note: To remove the Source / Volume control pc board (pos 1105B) 2 nuts hidden below the control knob assembly (pos 133, 134 and 135) must first be removed.

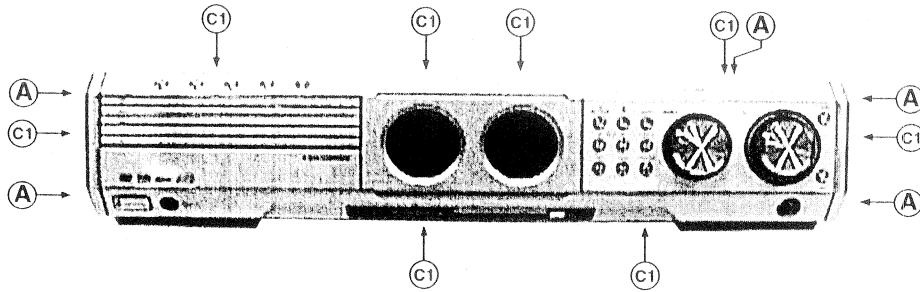


Figure 1

Hints for re-assembly of Top Cover

Due to appearance design the Top cover (pos 252) is sandwiched between the Front panel (pos 101) and the 2 side covers (pos 102 & 103), this make it necessary to remove the 2 side covers before re-assembly of Top cover.

- 1) To remove the side cover use a small screw driver with marking 16mm from the tip end.
- 2) Insert the screw driver into slot (as shown in figure 2) and push the tip outwards to release the side cover catch. The side cover can be pull outwards as soon as the top catch is released.

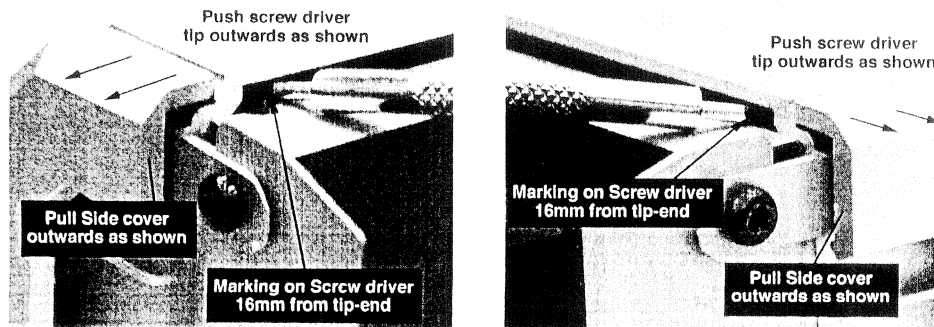


Figure 2

Dismantling the Tuner, Mains and AV boards

- 1) Loosen 3 screws D and 2 catches C2 on the Rear panel (pos 251) to remove the Tuner board assembly (pos 1101) as per figure 3.
- 2) Loosen 1 screws E and 2 catches C3 to unslot the Mains board (pos 1102-A) out of the Rear panel as per figure 4.
- 3) Loosen bracket (pos 254) by turning a catch, sliding towards the outside and lifting it upwards as per figure 5.
- 4) Loosen 7 screws F (8 screws for Scart version) and 2 C5 to separate Rear Plate assembly (pos 251 + 227) from the Bottom plate as per figure 3.
- 5) Uncatch C4 to remove the AV board (pos 1104) from the Bottom & Rear Plate assembly (pos 251 + 227) as per figure 5.

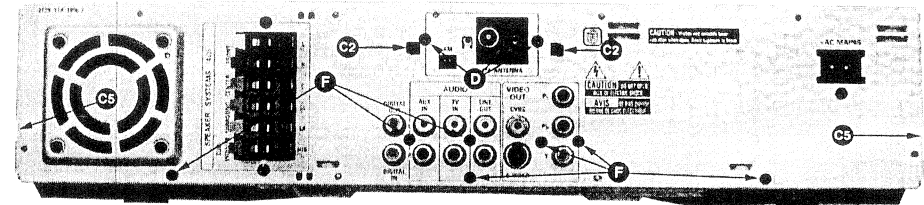


Figure 3

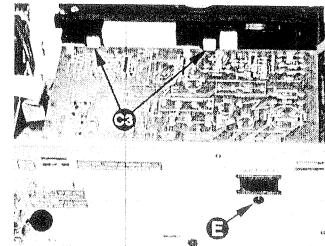


Figure 4

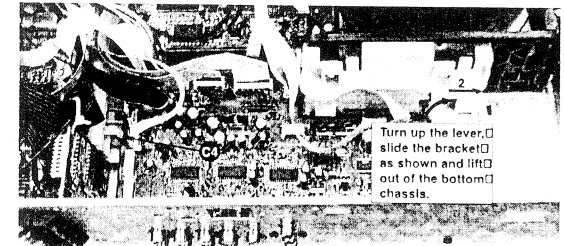


Figure 5

Dismantling the 5DTC Module

- 1) Loosen 1 screws E and 2 catches C3 to remove the Mains board as per figure 4.
- 2) Loosen bracket (pos 254) by turning a catch, sliding towards the outside and lifting it upwards as per figure 5.
- 3) Loosen 3 screws G, lift up the 5DTC Module's (pos 1103-A) rear and pull the module out towards the rear as per figure 6.

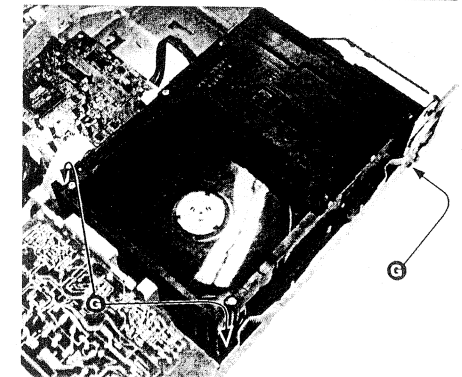


Figure 6

Dismantling the Mono FE and BE boards

- 1) Loosen 2 screws and 2 catches to remove the Mono BE board (pos 1103-B).
- 2) Loosen 2 screws and 2 catches to remove the Mono FE board (pos 1103-C).
- 3) Loosen 2 screws to remove the PCMCIA board (pos 1106).

Dismantling the Supply & Power Amplifier boards

- 1) Loosen 2 screws B mounting the Supply board's (pos 1102-B) heatsink to the Bottom Plate (pos 227) as per figure 7.

Note: During re-assembly care must be taken to ensure the Mains Transformer wires to the Supply board is routed properly below the board.

- 2) Loosen 4 screws C (8 screws for 100W version with 2 pcs of Amplifier boards) to dismantle the Power Amplifier board (pos 1102-D) from the Bottom Plate as per figure 7.


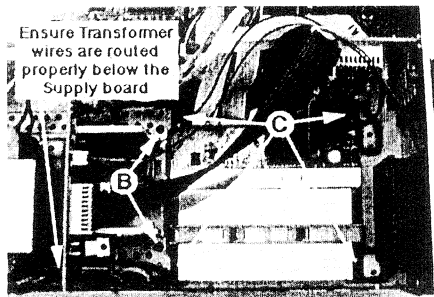



Figure 7

Service positions

Service position A (Top cover removed)

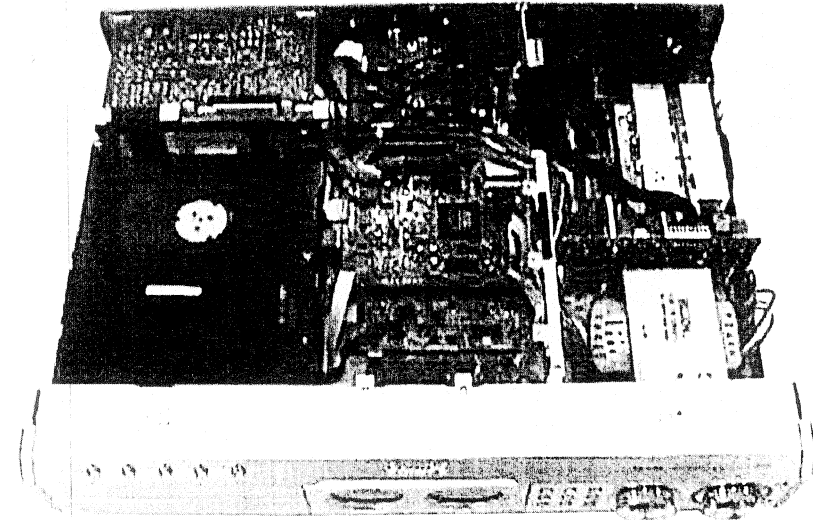


Service position B (Front Panel loosen)

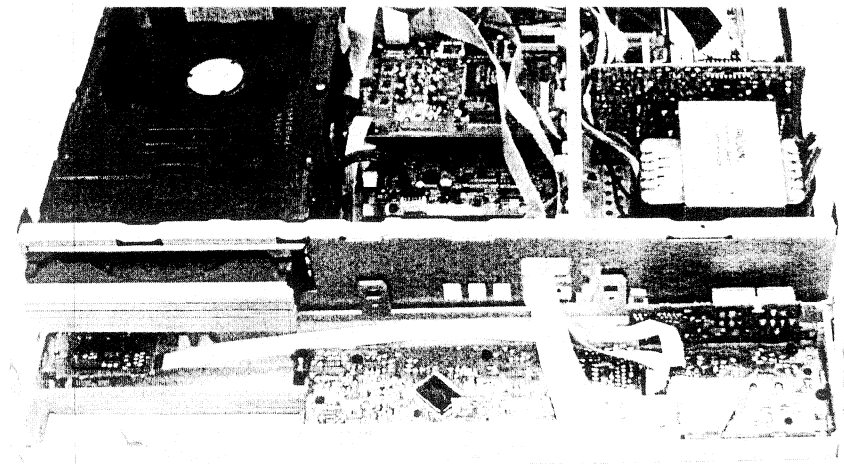

Service positions

Service position C (Supply and Amplifier boards loosen)

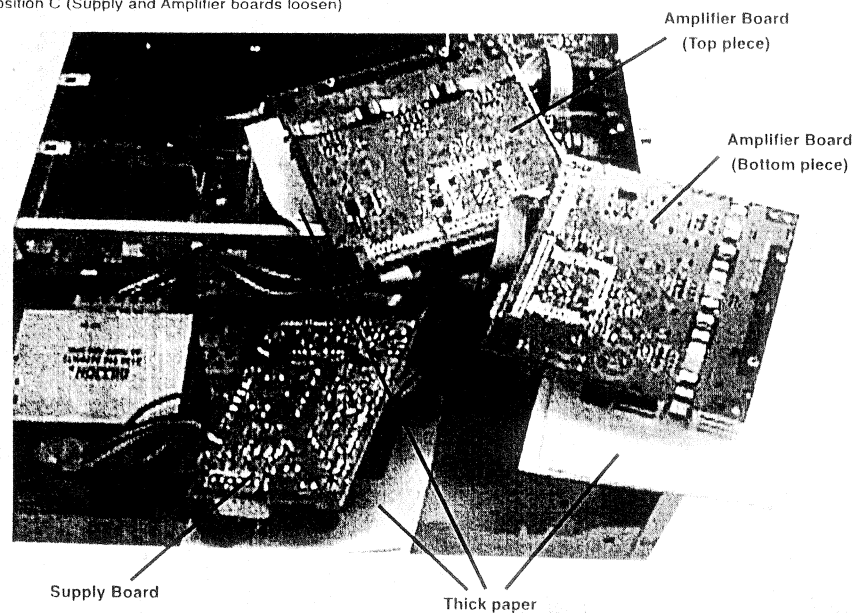


Caution:

- 1) In some of the service positions the Mains supply is exposed, therefore service technicians have to exercise care to prevent electric shock.
- 2) The copper pattern on the Mains board should be covered with non-conductive insulation during fault-finding on other parts of the set.
- 3) Insulation sheet (eg. thick paper or cardboard) should be used during fault-finding to prevent short-circuiting of copper patterns to metallic surroundings.


Note:

The ground connection between AV board stoko pin 1100 and Amplifier board stoko pin 1320 must be connected during Service pos C and D in order to have sound output at the Loudspeakers.


Service position D (Mains & AV boards loosen)

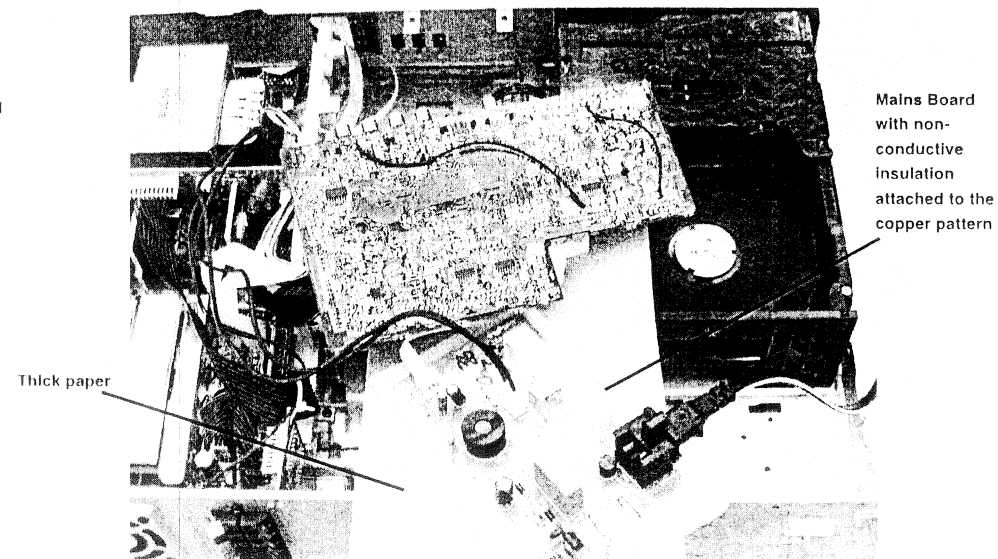

Service position E (5DTC Mechanism, Mono FE and Mono BE boards loosen)

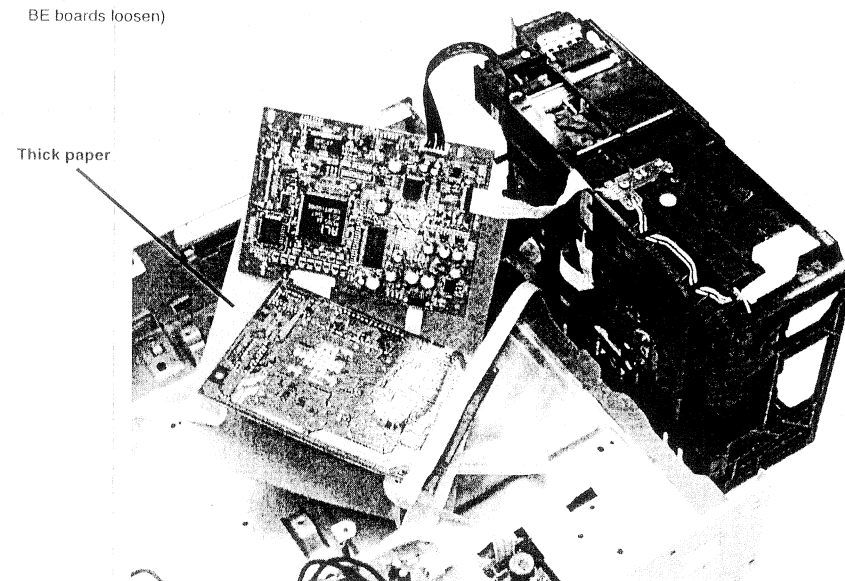

SERVICE TEST PROGRAM I

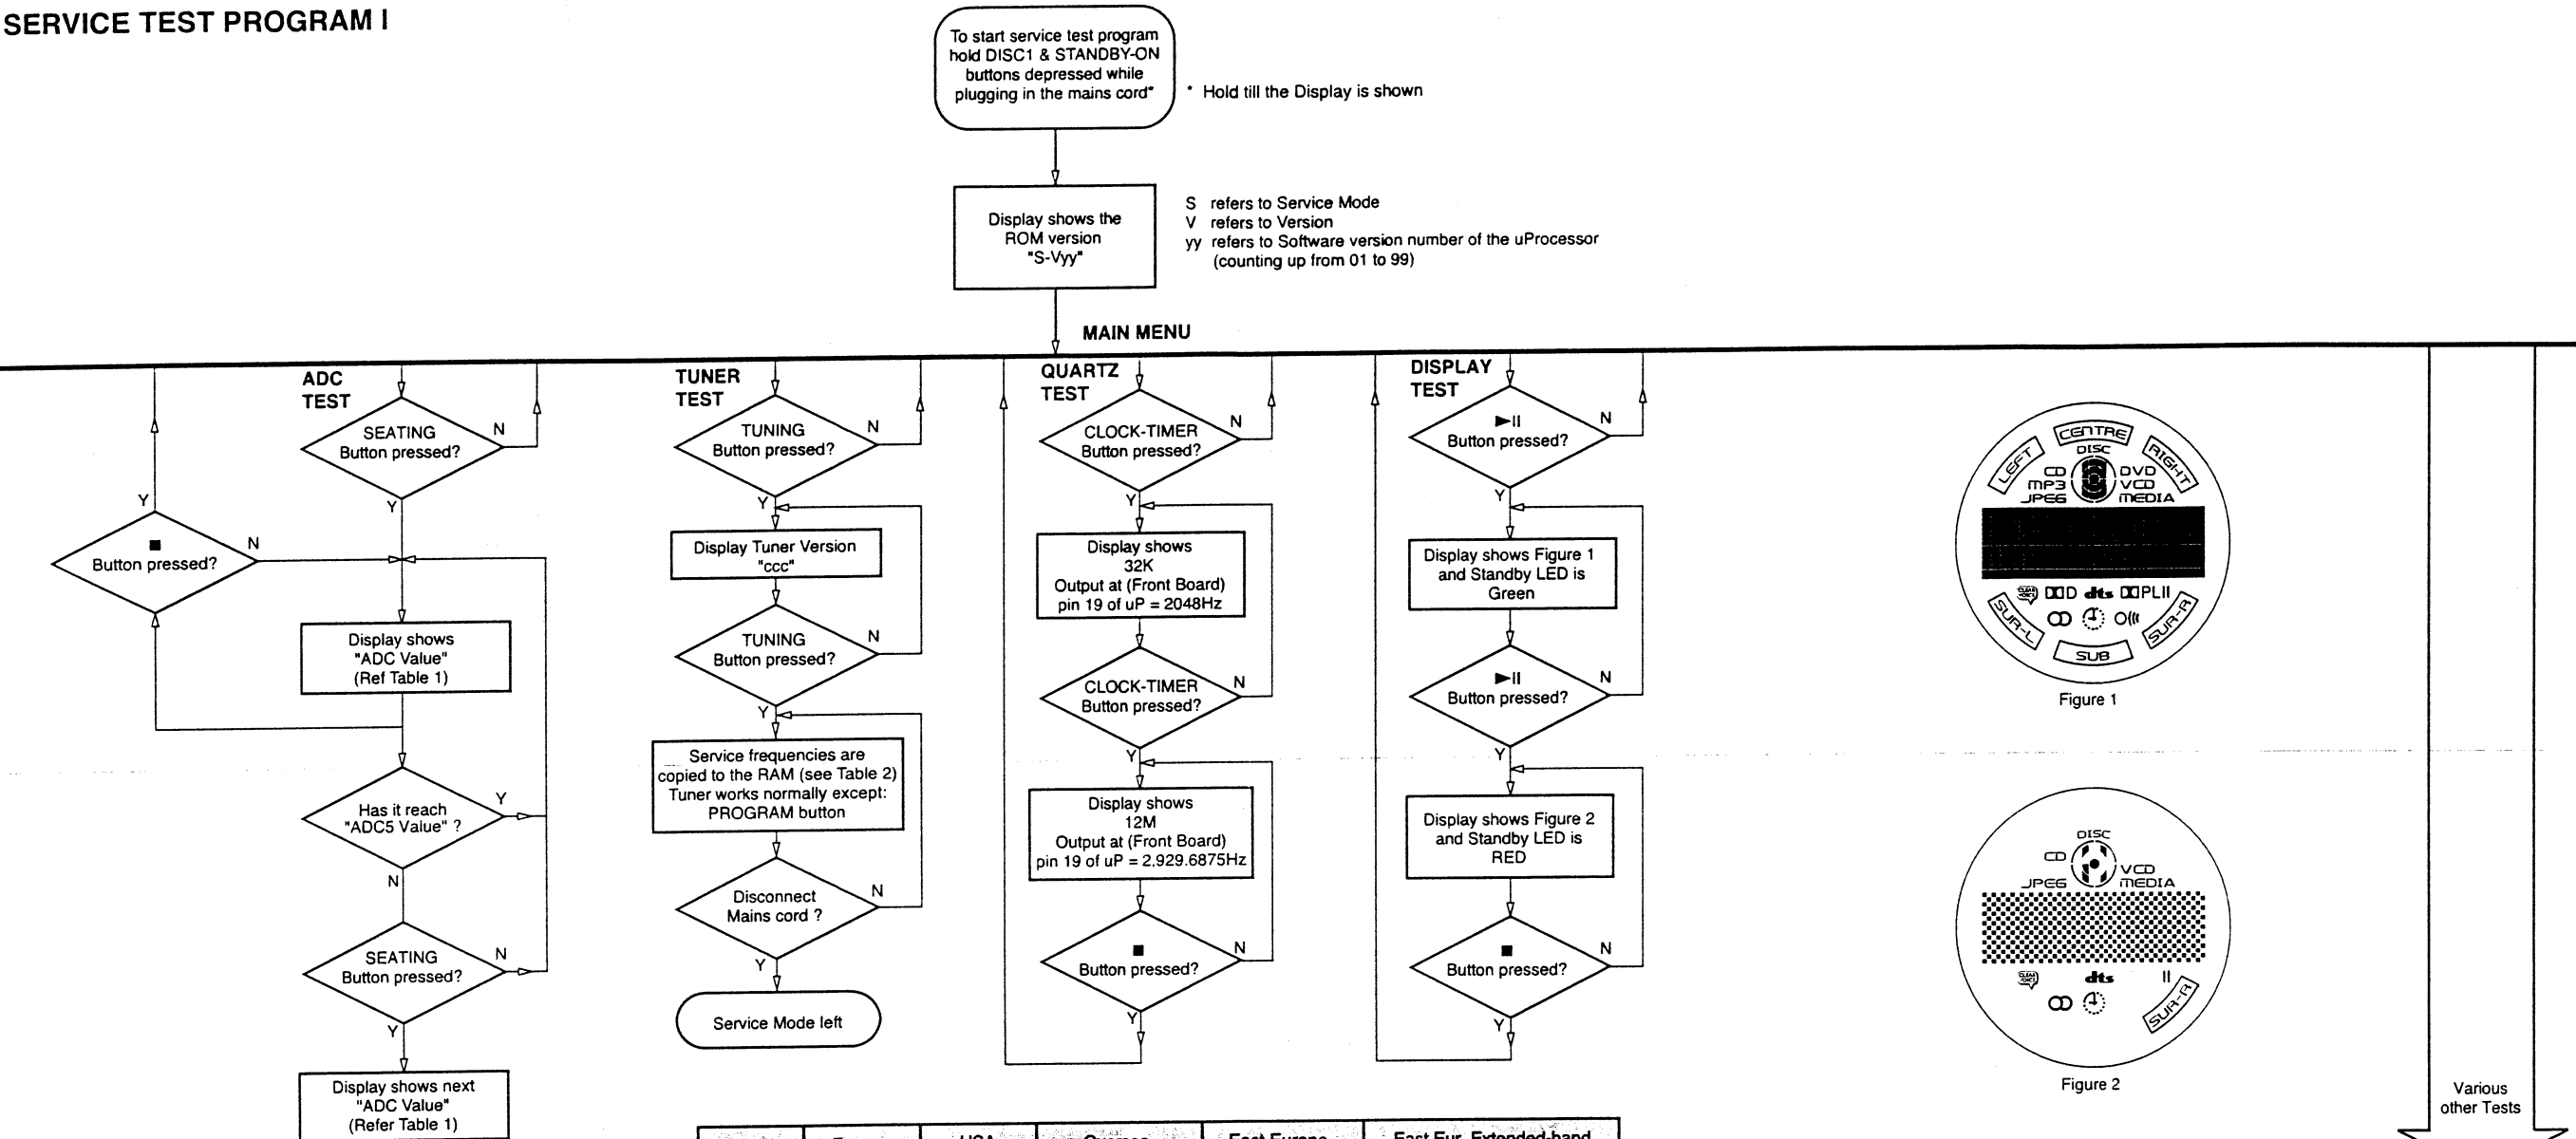

Name	Input line to uProcessor IC	Remarks
ADC1	Key0	Return the value assign for each key button.
ADC2	Key1	Return the value assign for each key button.
ADC3	VU_IN	Varies according to the signal dc level
ADC4	MUX_DET	The set temperature is measured via this NTC line, if lower than 69 the set goes into Standby.
ADC5	Options	Return the value assign for the different possible options

Table 1

Note:
ADC Test is used for checking the ADC inputs to the microprocessor. The display shows an ADC value between 0 and 255 for an input signal between 0 and 5V.


PRESET	Europe "EUR"	USA "USA"	Oversea "OSE"	East Europe "EAS"	East Eur. Extended-band "EAS"
1	87.5MHz	87.5MHz	87.5MHz	87.5MHz	65.81MHz
2	108MHz	108MHz	108MHz	108MHz	108MHz
3	531kHz	530kHz	530/531kHz*	531kHz	74MHz
4	1602kHz	1700kHz	1700/1602kHz*	1602kHz	87.5MHz
5	558kHz	560kHz	560/558kHz*	558kHz	531kHz
6	1494kHz	1500kHz	1500/1494kHz*	1494kHz	1602kHz
7	87.5MHz	98MHz	98/87.5MHz*	87.5MHz	558kHz
8	87.5MHz	87.5MHz	87.5MHz	87.5MHz	1494kHz
9	87.5MHz	87.5MHz	87.5MHz	87.5MHz	98MHz
10	87.5MHz	87.5MHz	87.5MHz	87.5MHz	70.01MHz
11	98MHz	87.5MHz	87.5/98MHz*	98MHz	65.81MHz

Table 2

Note: * Depending on the selected grid frequency (9 or 10kHz).
By holding the "DISC5" and "STANDBY-ON" buttons depressed while switching on the Mains supply, one of the undermentioned features will be activated:
- the tuning grid frequency is toggled between 9kHz and 10kHz for the Oversea (/21) version.

TEST	Activated with	ACTION
EEPROM TEST	►► ■ to Exit	Some test patterns will be sent to the EEPROM. "PASS" is displayed if the uProcessor read back the test patterns correctly, otherwise "FAIL" will be displayed.
EEPROM FORMAT TEST	◄◄	Load default data. Display shows "NEW" for 1 second. Caution! All presets from the customer will be lost!!
AUTO STANDBY TOGGLE	SUBW + (Remote Control)	Pressing this button will toggle between the status "AUTO STANDBY ON" and "AUTO STANDBY OFF". The status will scroll once across the Display.
ROTARY ENCODER TEST	SOURCE / VOLUME Knob	Display shows value for 2 seconds. Values increases or decreases in steps of 1 until 0 (Min.) or 40 (Max.) is reached.
LEAVE SERVICE TEST PROGRAM	Disconnect mains cord	

SERVICE TEST PROGRAM II

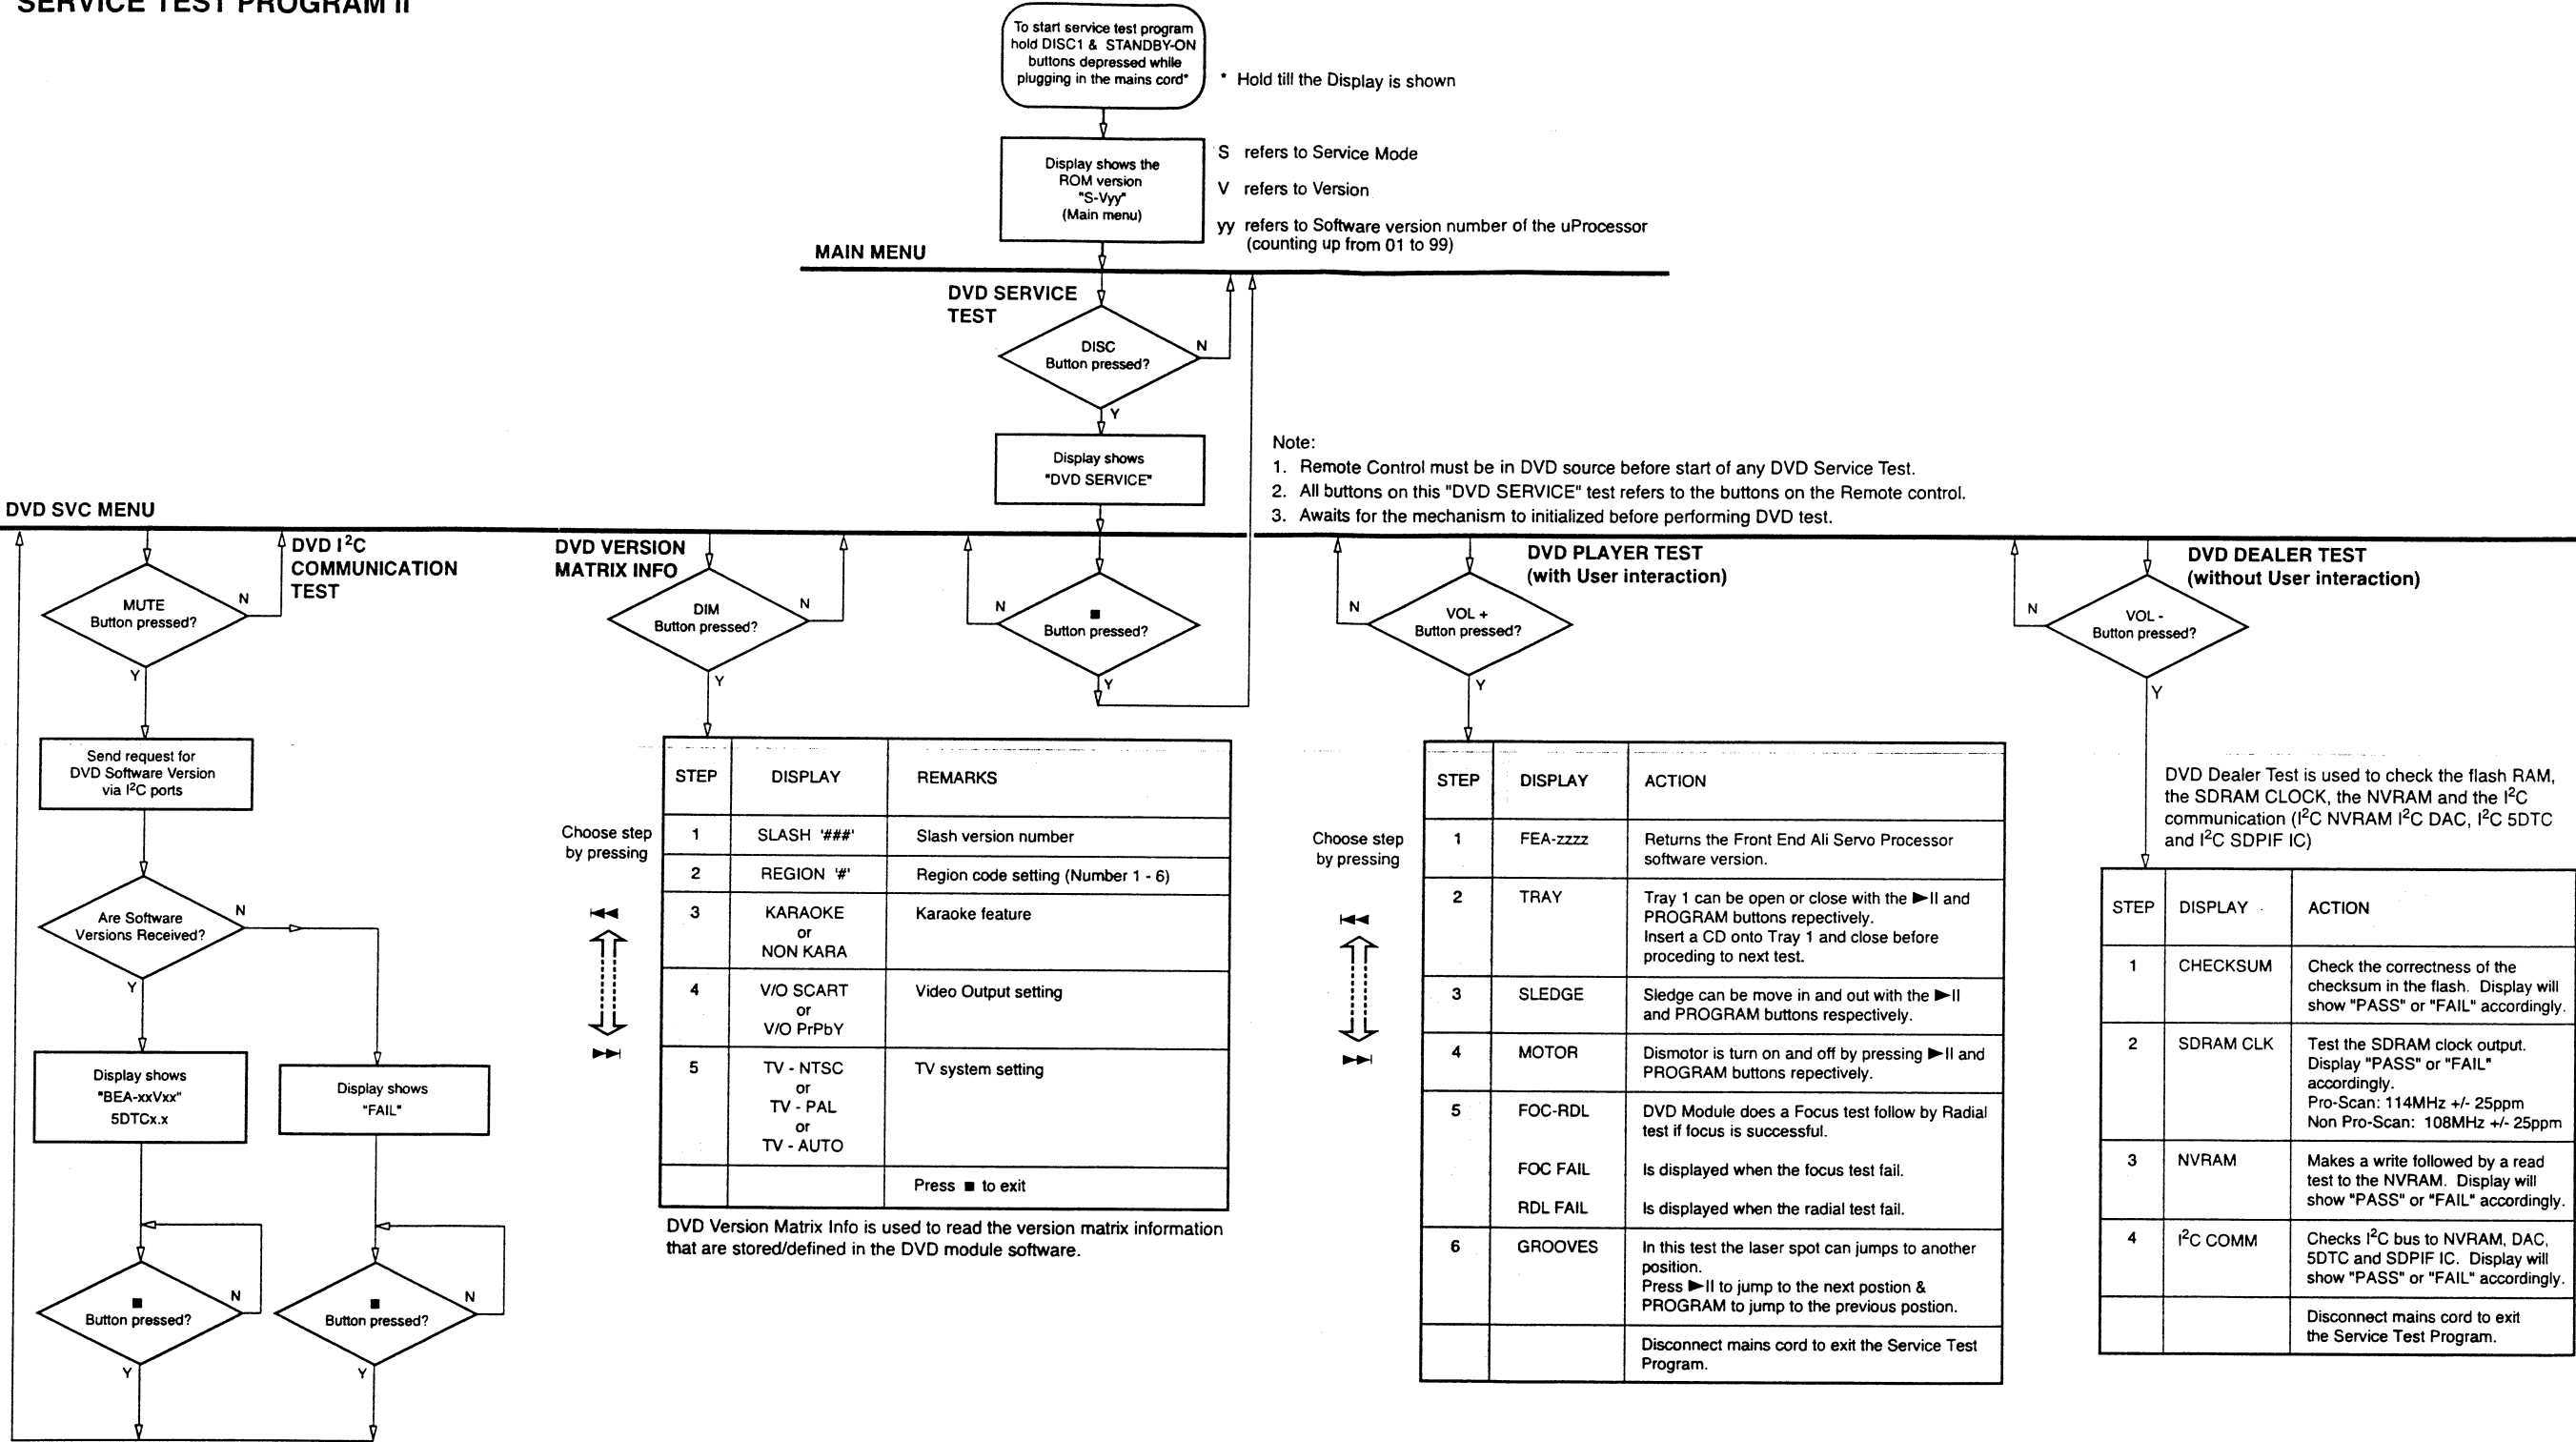

DVD I²C Communication Test is used to test the I²C communication port between the DVD module and the microprocessor of the set.

where: BEA-xxVxx is the Back End Application software version
5DTCx.x is the 5DTC software version

Reprogramming of DVD version matrix

Caution:
This information is confidential and may not be distributed. Only a qualified service person should reprogram the mono BE board.

After replacement/repair of the Mono BE board, the customer settings and also the region code may be lost. Reprogramming will put the set back in the state in which it has left the factory, i.e. with the default settings and the allowed region code.

Reprogramming will be done by way of the Remote Control.
Put the player in stop mode, Disc 1 with no disc loaded.

Do the following steps with the Remote Control:
1) Press <DISC MENU> followed by numerical keys <1> <5> <9>
The set display shows: "- 0 - 0 - 0 - 0 -"

- 2) Press now successively the following numerical keys :
- | | | | | | |
|-----------------|---|-----------|-----------|--------|------------|
| for MX5500D/21S | : | <3><2><4> | <0><1><1> | <0><0> | AP |
| for MX5500D/33S | : | <3><5><4> | <0><1><2> | <0><0> | AP - Korea |
| for MX5500D/35S | : | <6><5><4> | <0><1><1> | <0><0> | AP - China |
| for MX5500D/37 | : | <1><1><4> | <0><1><3> | <0><0> | US |
| | | | | | |
| for MX5600D/37 | : | <1><1><4> | <0><1><3> | <0><0> | US |
| | | | | | |
| for MX5700D/21R | : | <3><2><4> | <0><1><1> | <0><0> | AP |
| for MX5700D/21S | : | <3><2><4> | <0><1><1> | <0><0> | AP |
| for MX5700D/22S | : | <2><2><4> | <0><1><4> | <0><0> | Europe |
| for MX5700D/25S | : | <2><2><4> | <0><1><4> | <0><0> | UK |

3) Press <DISC MENU> again. The set display will show: "DONE".
Caution: The set needs about 3 seconds to reset to required setting.

4) Disconnect mains to ensure proper reset.

Procedure for check Software version

- 1) Select Disc with the Remote Control
- 2) Press <SYSTEM MENU>
- 3) Use the down key move all the way down (4x) to bottom of "Setup Menu".
- 4) Use the right key move to the sub-menu.
- 5) Use the down key move down (3x) to "Default" and down one more time to see the software version.
- 6) The TV screen will shows:
R1000 BEA3131PV08 R2812 V72
where 1000 = DVD version matrix (Region, Karaoke
Yes/No, Default Video O/P, Default TV system)
31V08 = BE software version
2812 = FE software version
72 = 5DTC servo version

7) Press <OK> three times to exit.

Procedure to upgrade software

- 1) Power up the set and open tray Disc 1.
- 2) Place upgrade CD-ROM onto tray and close.
- 3) The set will display "DOWNLOAD" while the TV screen will shows:
Reading --> Update BEA --> Writing --> Done -->
Update FEA --> FEA Finish --> Unload Disc 1
- 4) Tray Disc 1 should then open.
- 5) The whole process should last for less than 2 minutes.
Remove the upgrade CD-ROM and unplug the Mains supply.

DVD Module

The DVD Module includes a DVD processor (ES60X8), DVD rom controller (M5705), Karaoke ADC (UDA1361), DAC (CS4362), and various regulators (8V, 2V7, 3V3, 5V). It also features a microprocessor (IMP87C405M), memory (8Mbit flash, 64Mbit sdram), and a DVD processor (ES60X8). The module is connected to a DVD processor (ES60X8) and a DVD rom controller (M5705).

Front Display

The Front Display section includes a microprocessor (IMP87C405M), memory (8Mbit flash, 64Mbit sdram), and a DVD processor (ES60X8). It also features a DVD processor (ES60X8) and a DVD rom controller (M5705).

Mains and Regulator

The Mains and Regulator section includes a transformer, rectifier, and various regulators (L7812CP, L4941, LM2576). It also features a microprocessor (IMP87C405M) and memory (8Mbit flash, 64Mbit sdram).

Power Amplifier

The Power Amplifier section includes a TDA8920, TDA7468, and various regulators (L7812CP, L4941, LM2576). It also features a microprocessor (IMP87C405M) and memory (8Mbit flash, 64Mbit sdram).


ECO Standby

The ECO Standby section includes a transformer, rectifier, and various regulators (L7812CP, L4941, LM2576). It also features a microprocessor (IMP87C405M) and memory (8Mbit flash, 64Mbit sdram).


Note: All others are in the AV board.

Note: All others are in the AV board.□

WIRING DIAGRAM - POWER MODULE DETAILS

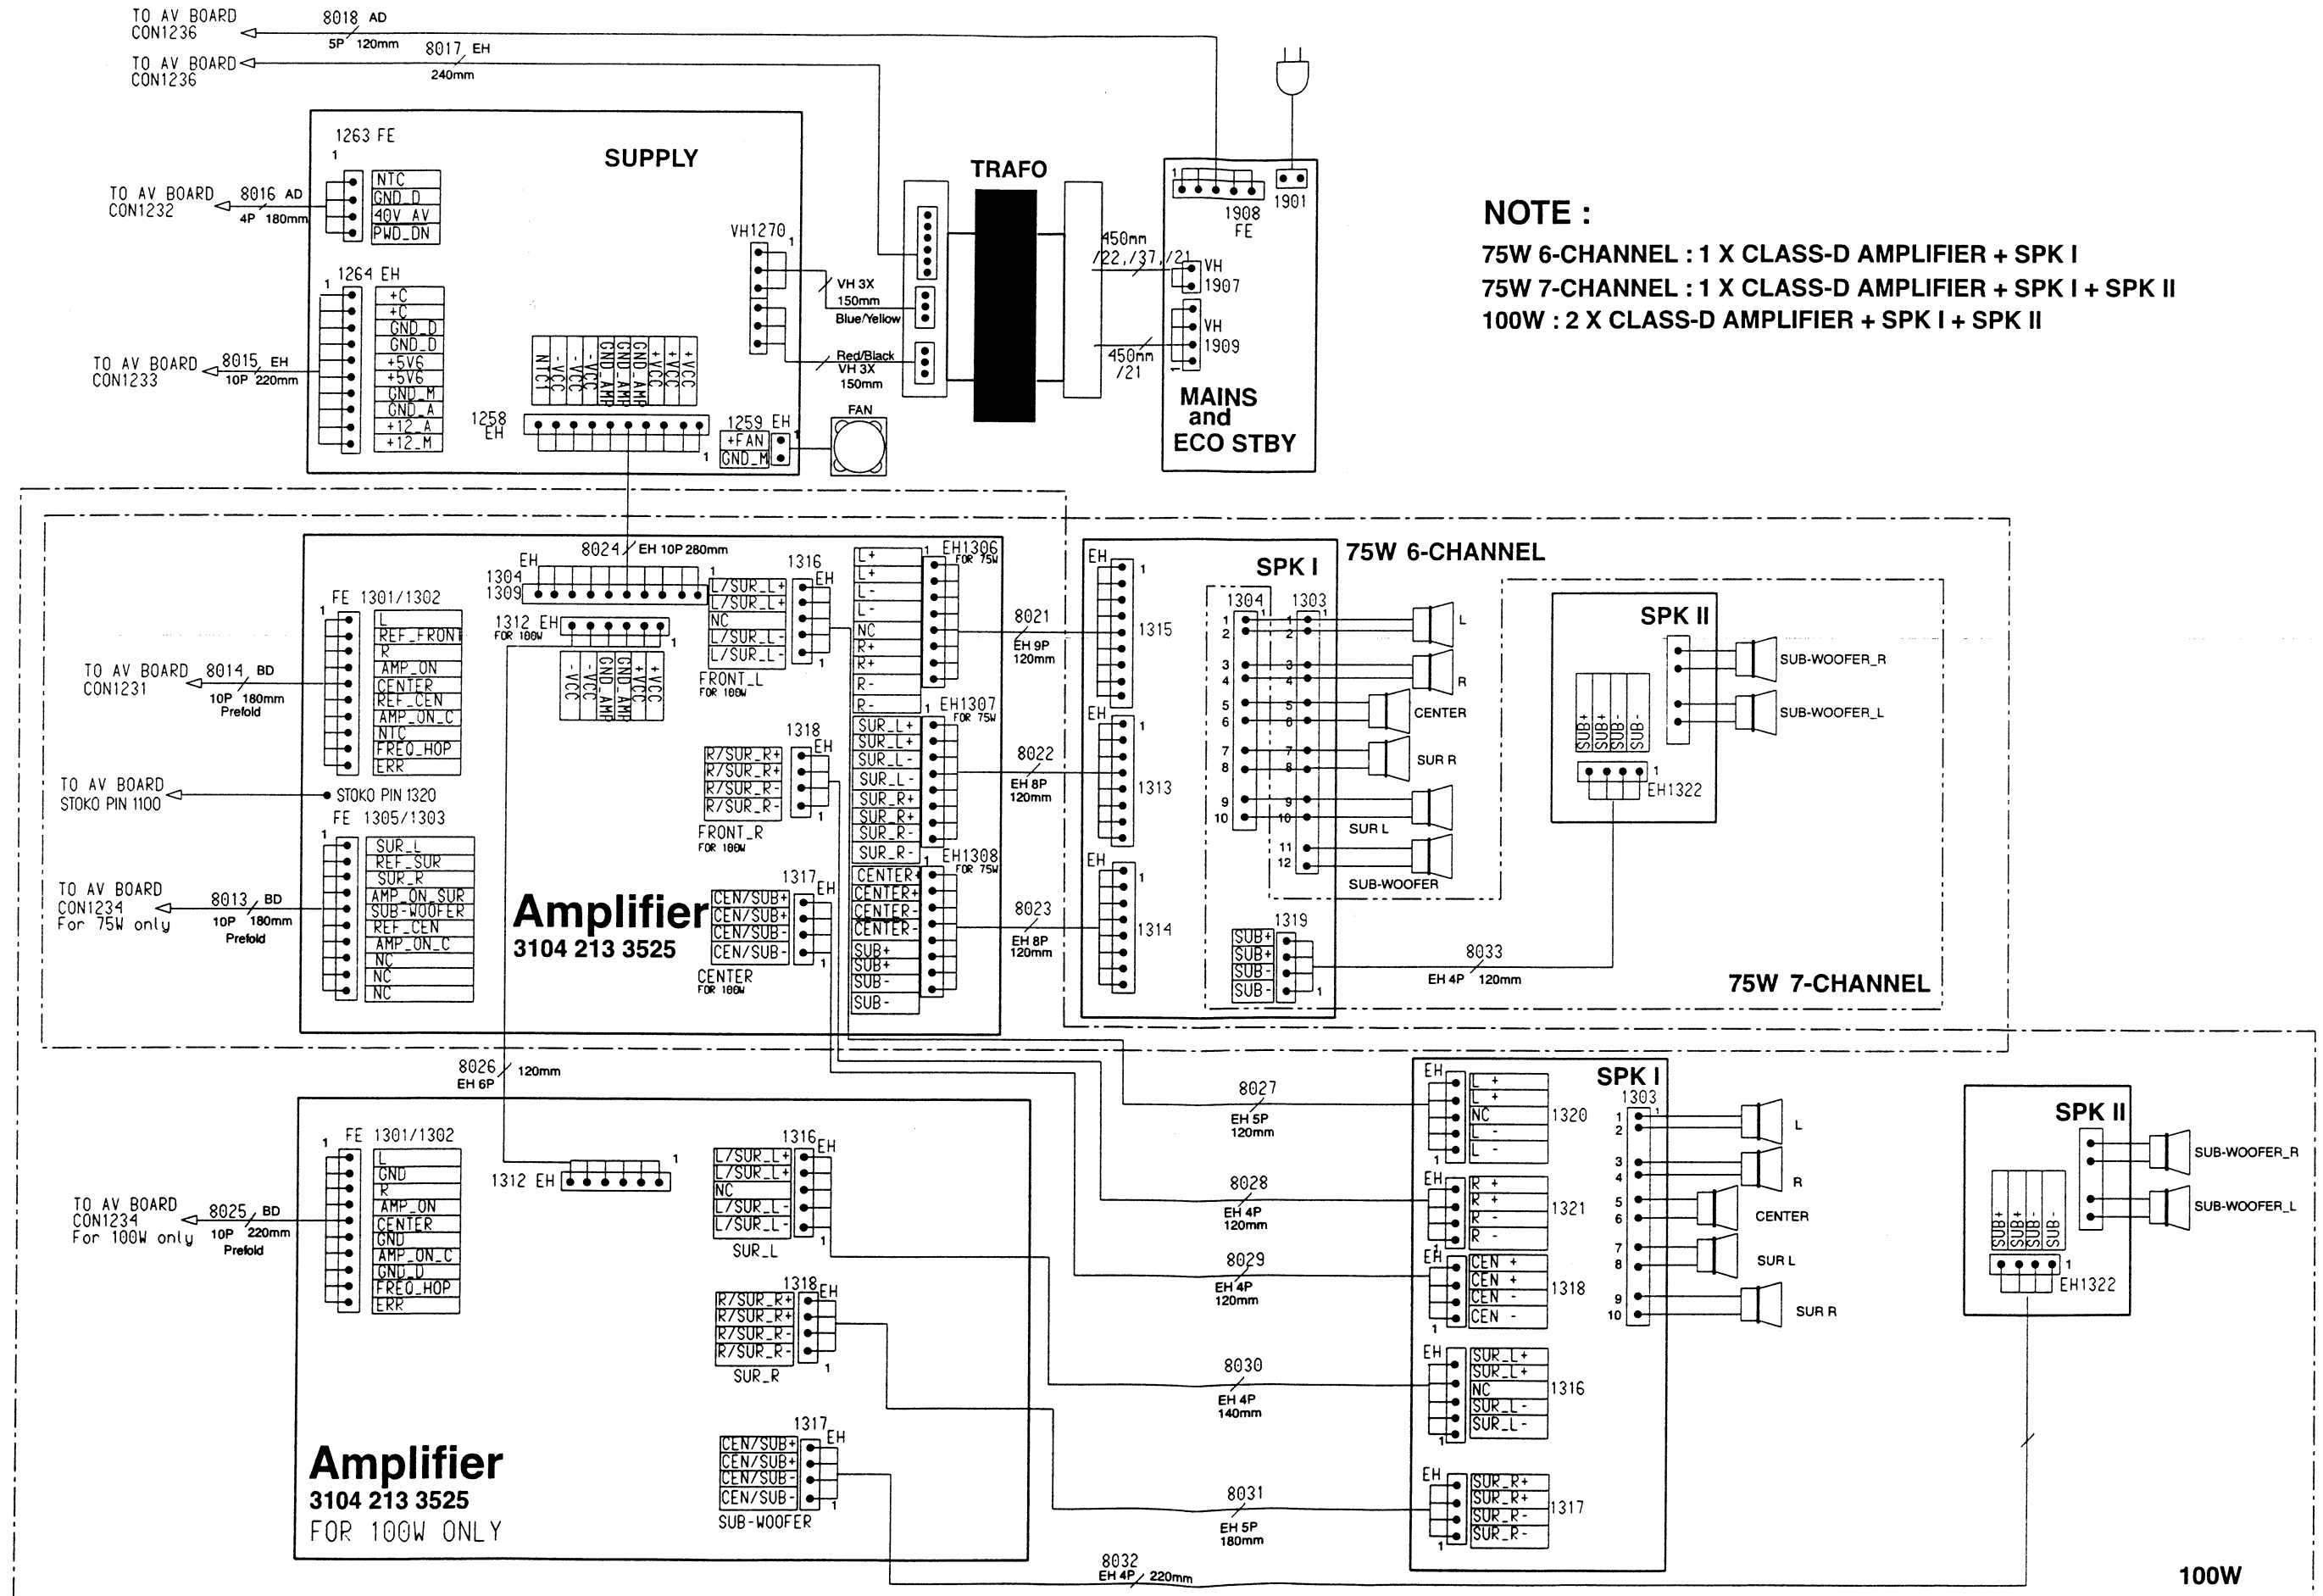

WIRING DIAGRAM - DVD MODULE DETAILS

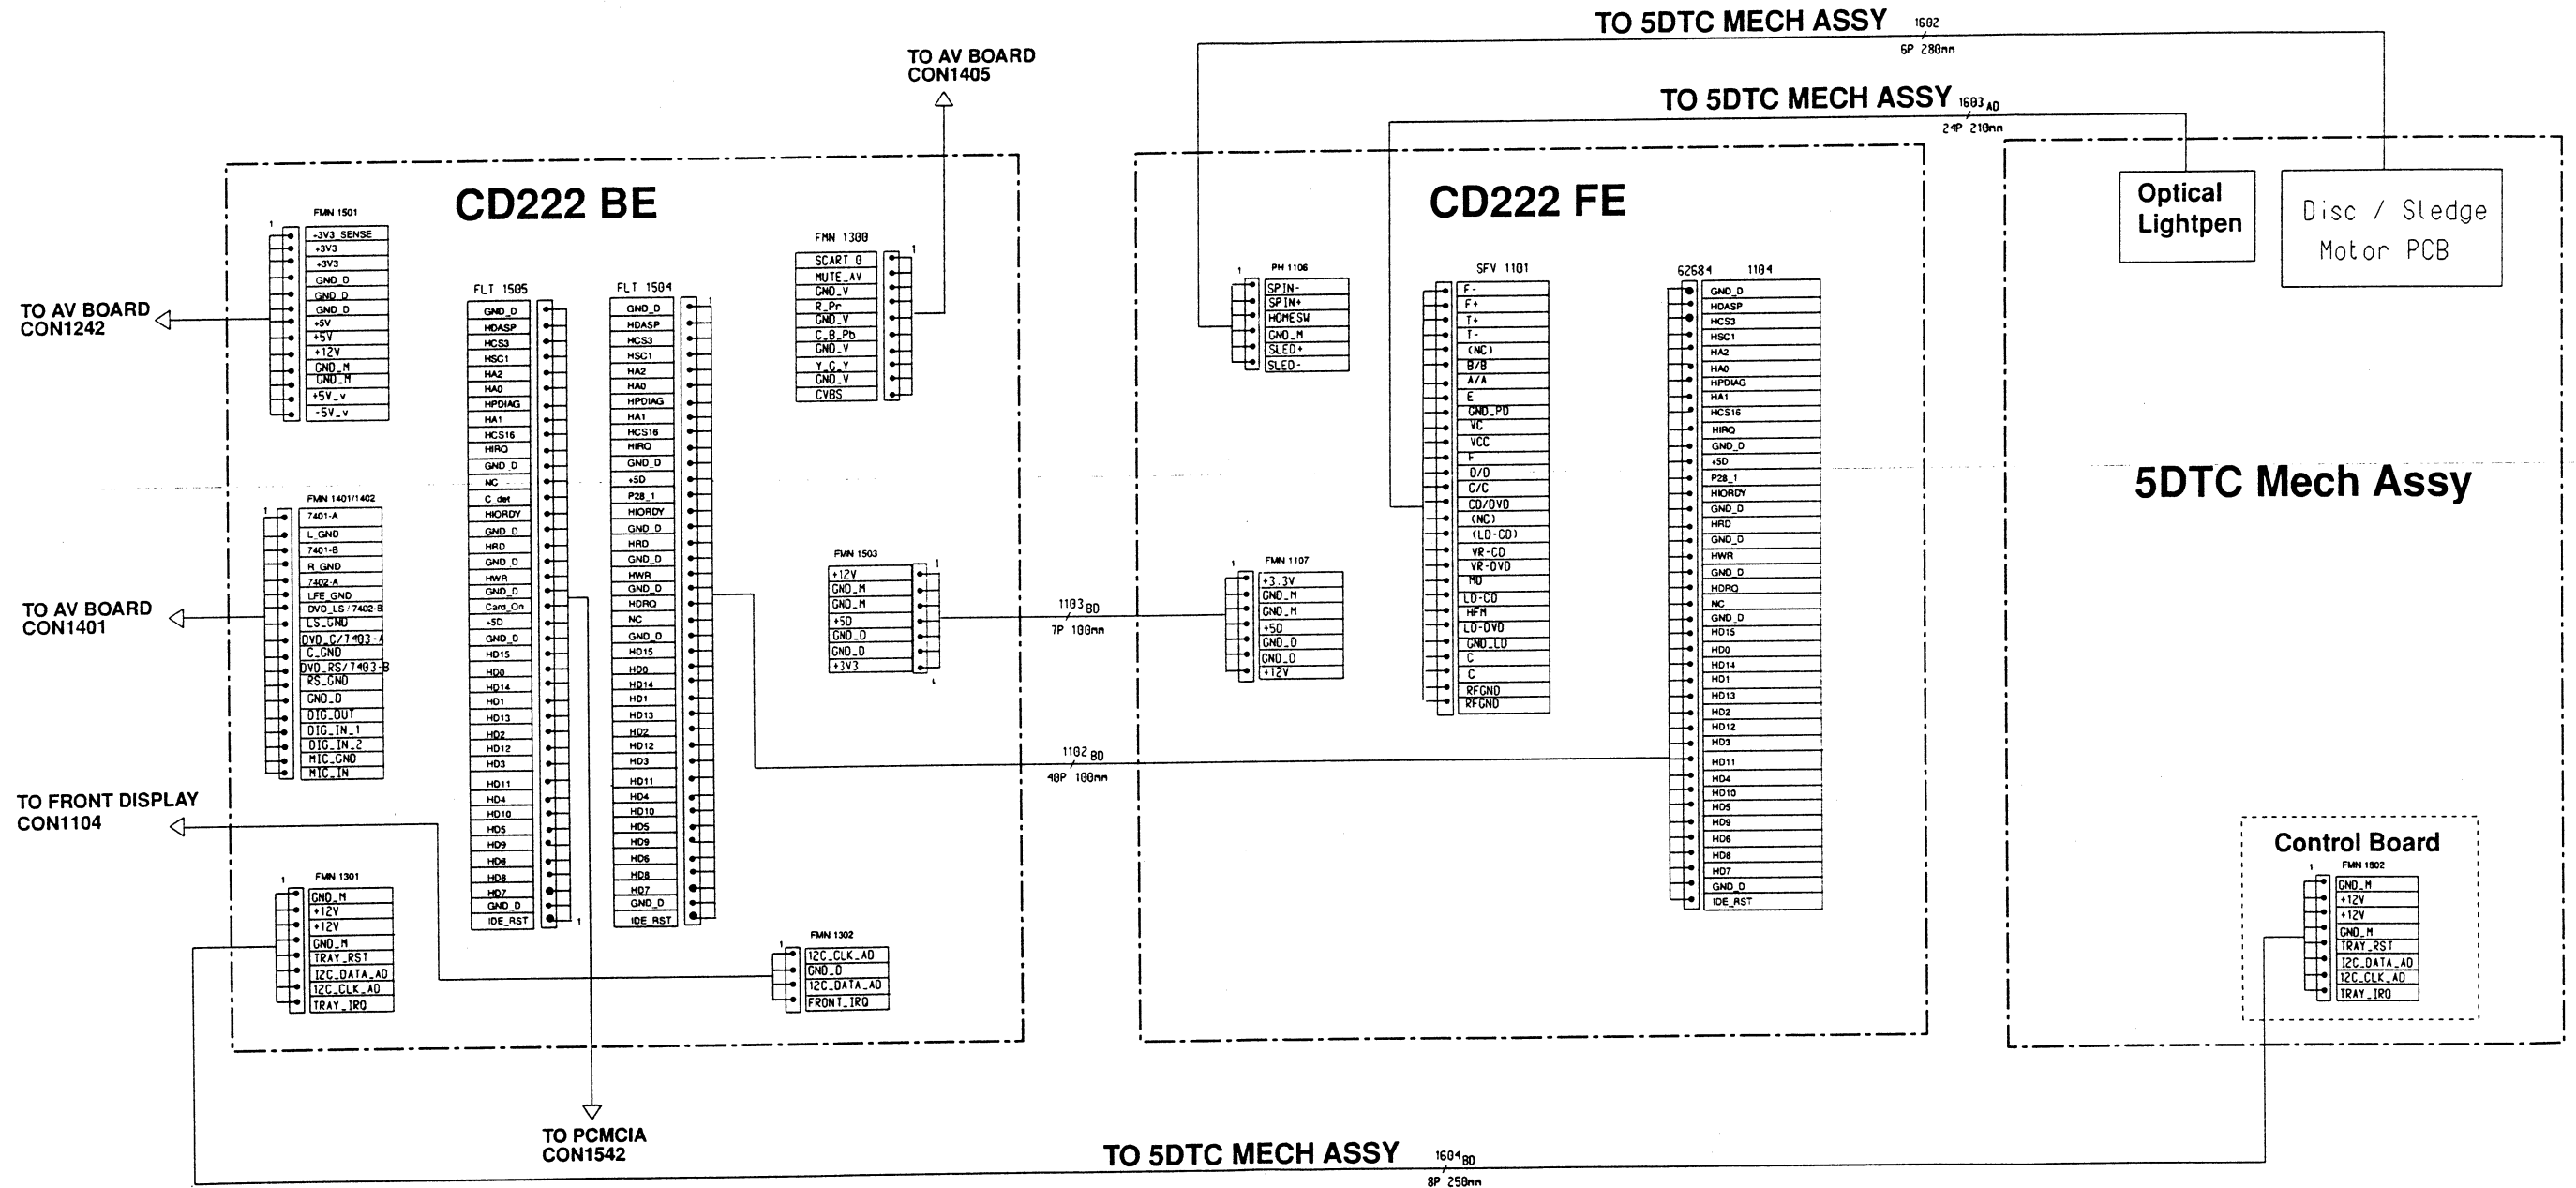

Notes:


PCMCIA BOARD

TABLE OF CONTENTS




Circuit Diagram	5-2
Component & Chips Layout	5-3
Electrical parts list	5-4

CIRCUIT DIAGRAM

1500 A7	2510 E2	2513 F6	3500 C3	3503 B3	3506 A3	3509 A3	3512 B3	3515 C3	3522 C3	3525 D3	3528 D3	3531 E3	3545 B9	3550 F9	3553 F8	3556 E7	3559 E5	3562 E4	3570 A3	4520 B6	4570 E1	7502 F9	7505 F5
1542 F1	2511 F5	2514 F6	3501 C3	3504 B3	3507 A3	3510 B3	3513 C3	3516 A2	3523 D3	3526 D3	3529 D3	3532 E3	3546 C9	3551 F9	3554 F7	3557 F6	3560 F5	3563 F4	4500 C8	4550 D1	4580 E1	7503 F8	7510 B6
2502 B8	2512 F5	2515 F4	3502 B3	3505 B3	3508 A3	3511 B3	3514 C3	3521 C3	3524 D3	3527 D3	3530 E3	3540 C6	3548 E2	3552 E7	3555 F7	3558 F6	3561 E3	3564 F4	4510 E8	4560 D1	7501 E8	7504 E6	

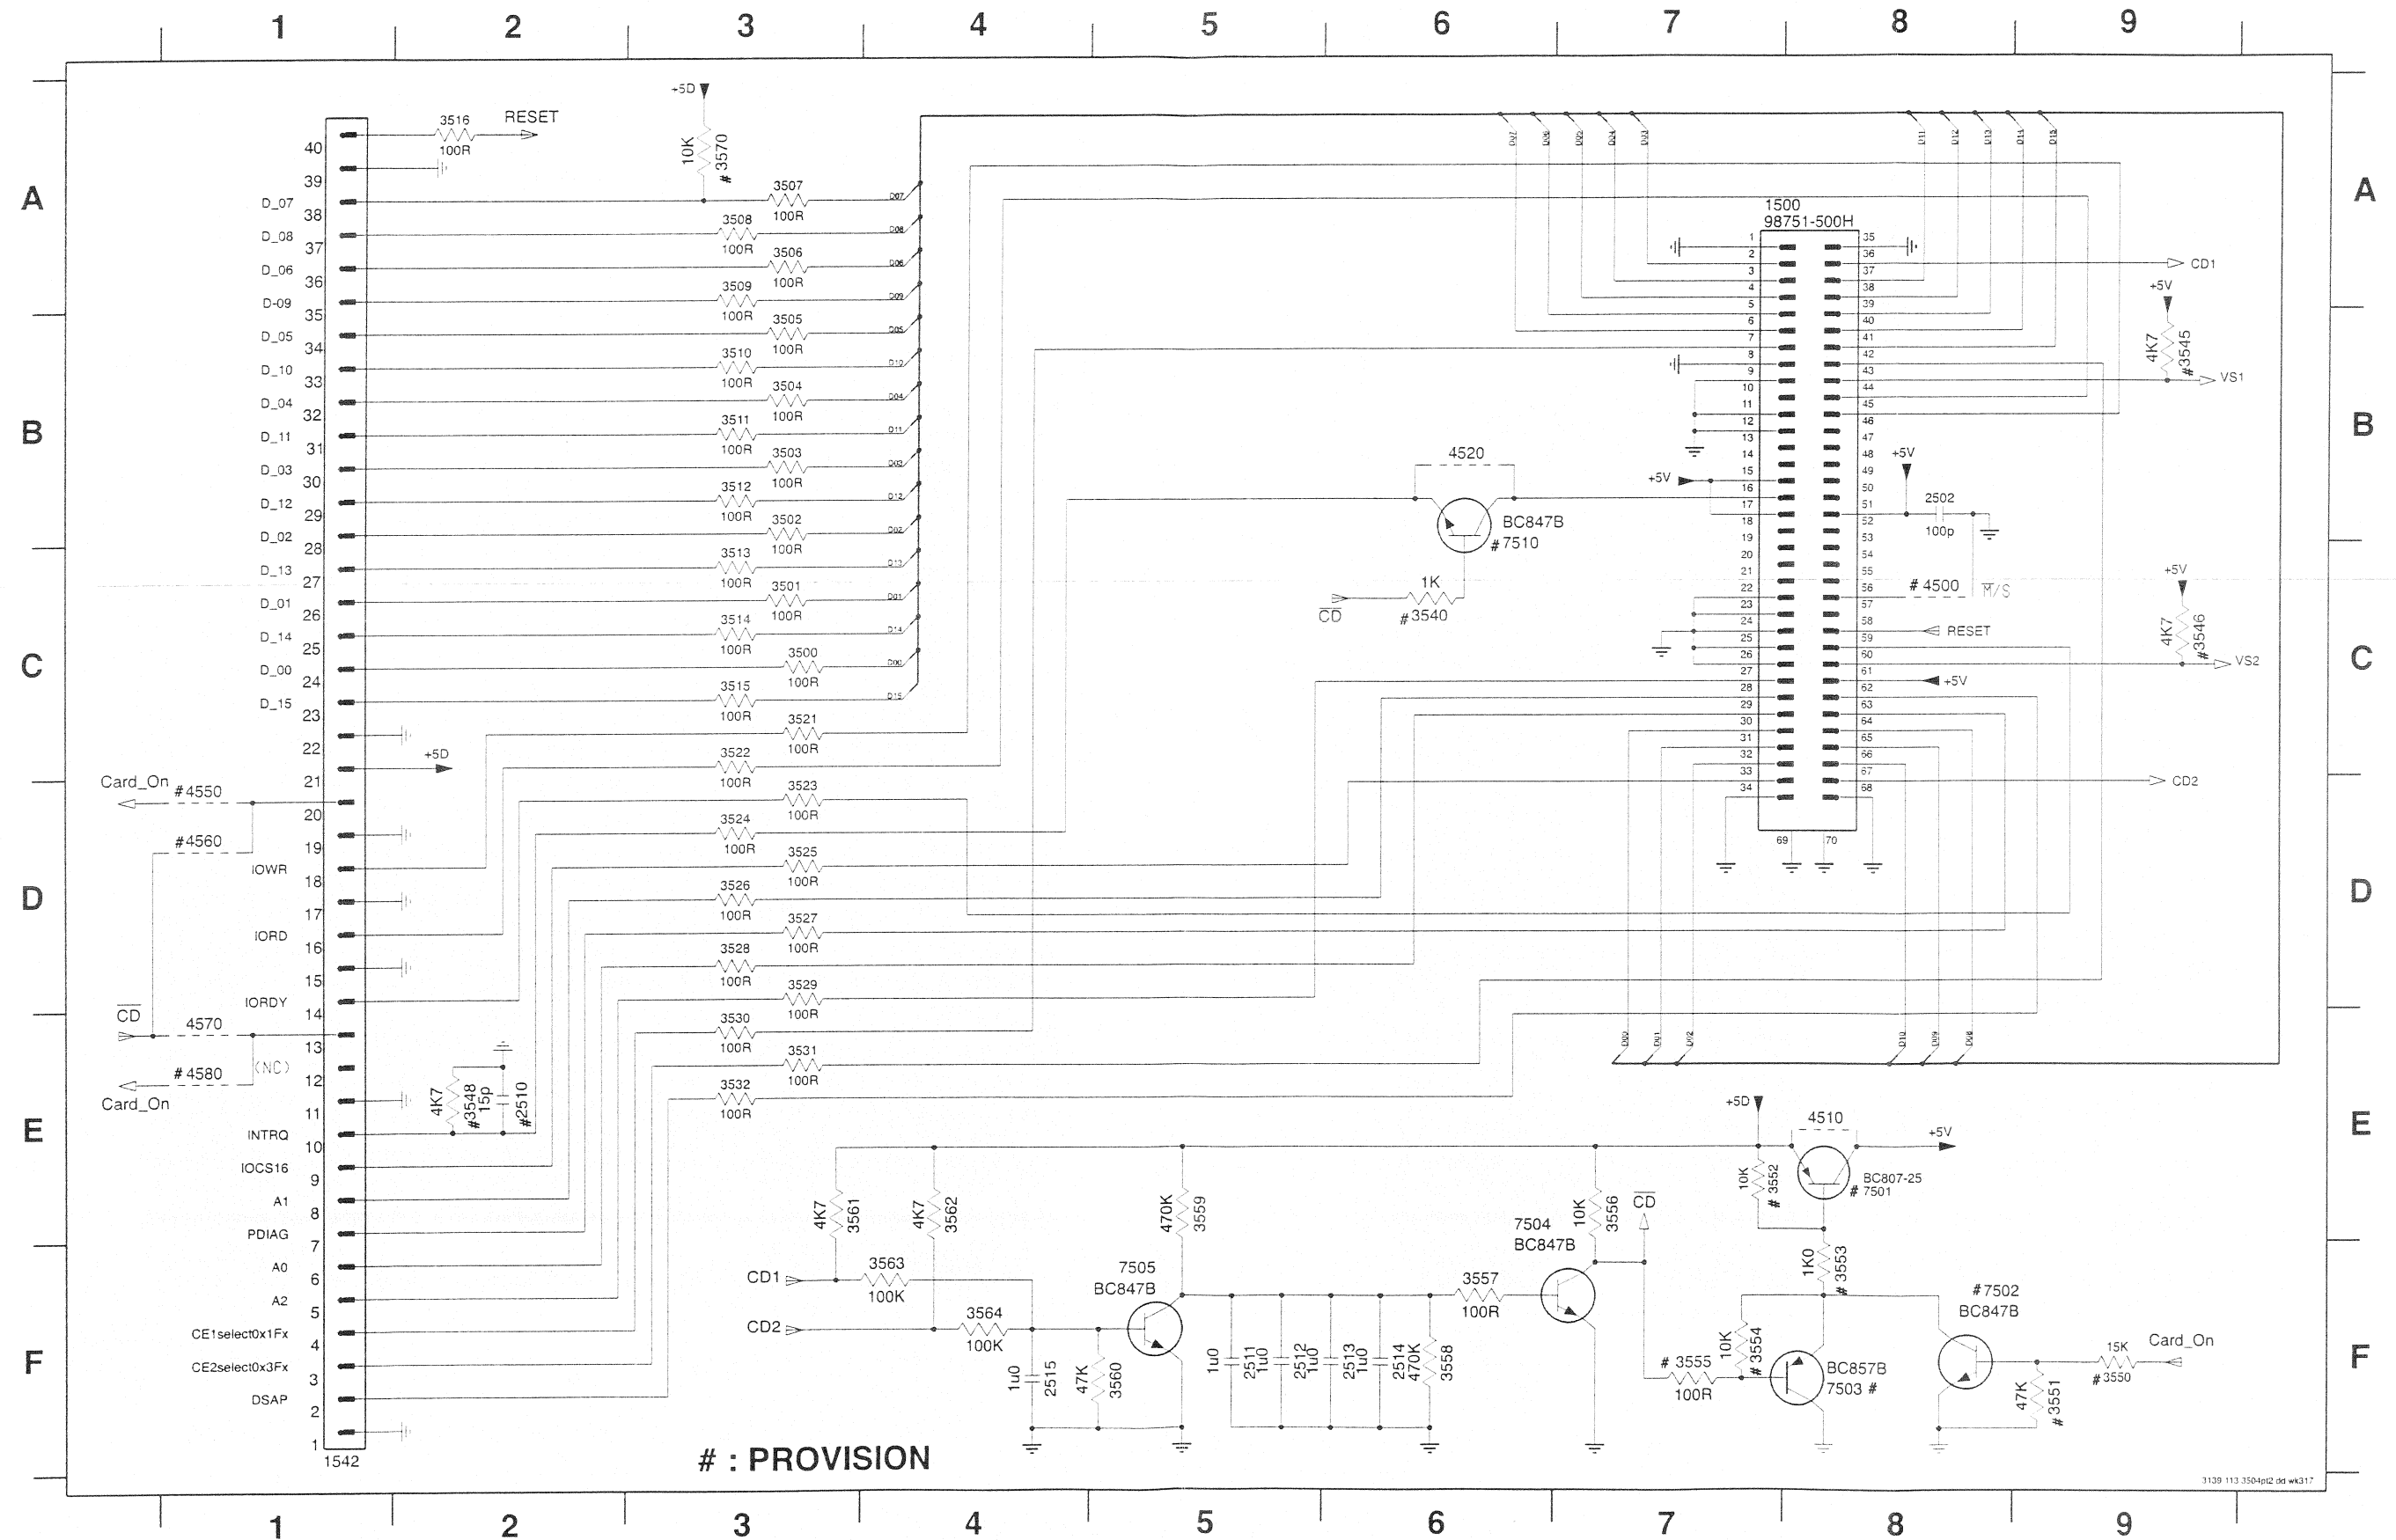

1500 A2 1542 A1

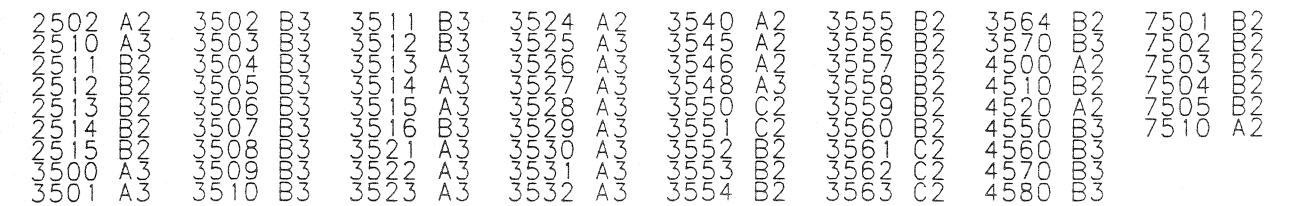

ELECTRICAL PARTS LIST - PCMCIA BOARD

MISCELLANEOUS

3139	118 56571	PCMCIA Board Assembly
1500	2422 025 18005	Socket PCMCIA 68P
1542	2422 025 17371	Flex Socket 40P

CAPACITORS

2502	2020 552 94427	100pF 5% 50V
2511	3198 017 41050	1uF 10V
2512	3198 017 41050	1uF 10V
2514	3198 017 41050	1uF 10V
2515	3198 017 41050	1uF 10V

RESISTORS

3500	4822 051 30101	100R 5% 0,062W
3501	4822 051 30101	100R 5% 0,062W
3502	4822 051 30101	100R 5% 0,062W
3503	4822 051 30101	100R 5% 0,062W
3504	4822 051 30101	100R 5% 0,062W
3505	4822 051 30101	100R 5% 0,062W
3506	4822 051 30101	100R 5% 0,062W
3507	4822 051 30101	100R 5% 0,062W
3508	4822 051 30101	100R 5% 0,062W
3509	4822 051 30101	100R 5% 0,062W
3510	4822 051 30101	100R 5% 0,062W
3511	4822 051 30101	100R 5% 0,062W
3512	4822 051 30101	100R 5% 0,062W
3513	4822 051 30101	100R 5% 0,062W
3514	4822 051 30101	100R 5% 0,062W
3515	4822 051 30101	100R 5% 0,062W
3516	4822 051 30101	100R 5% 0,062W
3521	4822 051 30101	100R 5% 0,062W
3522	4822 051 30101	100R 5% 0,062W
3523	4822 051 30101	100R 5% 0,062W
3524	4822 051 30101	100R 5% 0,062W
3525	4822 051 30101	100R 5% 0,062W
3526	4822 051 30101	100R 5% 0,062W
3527	4822 051 30101	100R 5% 0,062W
3528	4822 051 30101	100R 5% 0,062W
3529	4822 051 30101	100R 5% 0,062W
3530	4822 051 30101	100R 5% 0,062W
3531	4822 051 30101	100R 5% 0,062W
3532	4822 051 30101	100R 5% 0,062W
3552	4822 051 30103	10k 5% 0,062W
3553	4822 051 30102	1k 5% 0,062W
3554	4822 051 30103	10k 5% 0,062W
3555	4822 051 30101	100R 5% 0,062W
3556	4822 051 30103	10k 5% 0,062W
3557	4822 051 30101	100R 5% 0,062W
3558	4822 051 30474	470k 5% 0,062W
3559	4822 051 30474	470k 5% 0,062W
3560	4822 117 12925	47k 1% 0,063W
3561	4822 051 30472	4k7 5% 0,062W
3562	4822 051 30472	4k7 5% 0,062W

3563	4822 117 13632	100k 1% 0,62W
3564	4822 117 13632	100k 1% 0,62W
4501	4822 051 30008	0R Jumper 0603
4502	4822 051 30008	0R Jumper 0603
4510	4822 051 30008	0R Jumper 0603
4520	4822 051 30008	0R Jumper 0603
4570	4822 051 30008	0R Jumper 0603

TRANSISTORS

7501	5322 130 60845	BC807-25
7503	4822 130 60373	BC857B
7504	5322 130 60159	BC847B
7505	5322 130 60159	BC847B

Note: Only the parts mentioned in this list are normal service spare parts.


FRONT BOARDS

TABLE OF CONTENTS

FTD Display Module pin configuration	6-1
Front Display part - Circuit diagram	6-2
Front Display part - Component & Chip layouts	6-3
Front Display part - Chip layout Part A	6-4
Front Display part - Chip layout Part B	6-5
Front Control part - Chip layout	6-6
Front Control part - Component layout	6-7
Front Control part - Circuit diagram	6-8
DTC Key part - Component & Chip layouts	6-9
DTC Key part - Circuit diagram	6-10
Power Switch part - Circuit diagram	6-10
Power Switch part - Component & Chip layouts	6-11
HDPH & Mic part - Circuit diagram (Non-Karaoke version)	6-12
HDPH & Mic part - Comp. & Chip layouts (Non-Karaoke version)	6-13
HDPH & Mic part - Circuit diagram (Karaoke version)	6-14
HDPH & Mic part - Comp. & Chip layouts (Karaoke version)	6-15
Electrical parts list	6-16

FTD DISPLAY PIN CONFIGURATION


BLOCK DIAGRAM

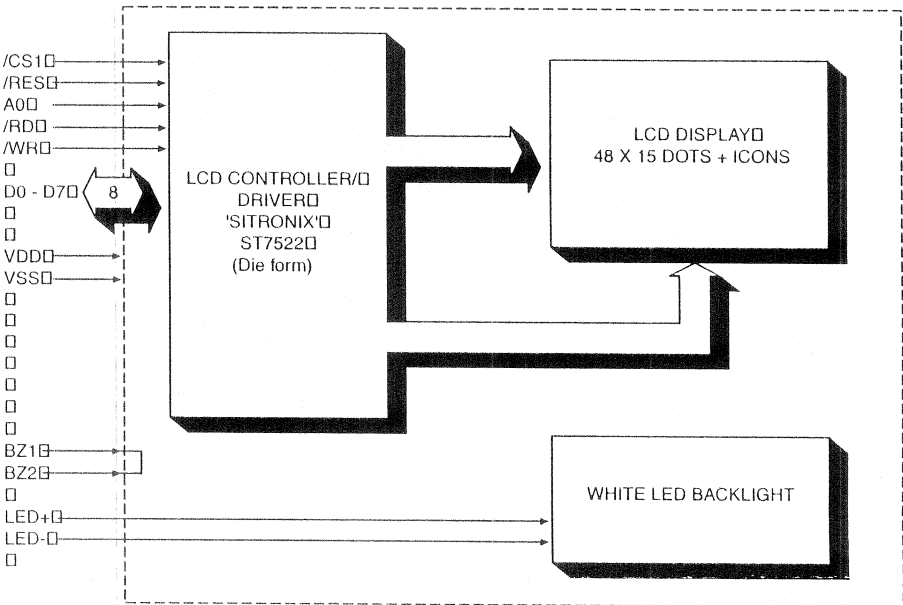

PIN CONFIGURATION


Pin No	Symbol	Description
1	VDD	Power supply for logic circuit (+5V)
2	VSS	Ground (0V)
3	/CS1	Input, when /CS1 = 0, the chip select become active
4	/RES	Input low active, System reset
5	A0	Usually connected to the low-order bit of the MPU address bus and used to identify the data or a command
6		A0=1: D0 - D7 are display data
7		A0=0: D0 - D7 are display control data
8	/RD	For the connection of 80-series MPU
9		Input, Active low
10		The /RD signal of the 80-series MPU is entered in this pin. When this signal is kept low, the ST7522 data bus is in the output status
11	/WR	For the connection of 80-series MPU
12		Input, Active low
13		The /WR signal of the 80-series MPU is entered in this pin. A signal on the data bus is fetched at the rising edge of /WR signal
14	D0	Data input/output (LSB)
15	D1	Data input/output
16	D2	Data input/output
17	D3	Data input/output
18	D4	Data input/output
19	D5	Data input/output
20	D6	Data input/output
21	D7	Data input/output (MSB)
22	LED+	Anode of backlight
23	LED-	Cathode of backlight
24	BZ1	Bezel ground (connected together)
25	BZ2	Bezel ground (connected together)

1101 C2	2101 F4	2106 H1	2111 F8	2116 H7	2121 G12	2128 G1	3100 B2	3106 F5	3111 H3	3116 F8	3125 H5	3135 A4	3143 B5	3160 F10	3165 G11	3175 D4	5102 E6	6105 F4	6119 F3	7106 C2
1102 A3	2102 F2	2107 H2	2112 F6	2117 H5	2122 G10	2130 B8	3101 B2	3107 F2	3112 H3	3117 F8	3130 H5	3136 A3	3144 A5	3161 F12	3170 A12	3176 D4	5103 E6	6106 H7	7101 A3	7107 C3
1105 B13	2103 G3	2108 F6	2113 G5	2118 H5	2123 G10	2131 B8	3102 B3	3108 F1	3113 H2	3118 F5	3131 H6	3137 D9	3145 B5	3162 F12	3171 A12	3177 E4	5104 F7	6108 B9	7103 F7	
1106 E13	2104 G1	2109 F6	2114 H4	2119 H7	2124 G11	2132 B9	3103 B3	3109 G3	3114 H2	3119 G8	3132 H5	3141 B5	3158 F10	3163 G12	3172 A12	5100 B9	5105 H2	6113 B9	7104 F6	
1107 A7	2105 G3	2110 F5	2115 H7	2120 H7	2125 G11	2141 F5	3105 F4	3110 G3	3115 F8	3122 H6	3134 A3	3142 A5	3159 F10	3164 G11	3173 B12	5101 C10	6104 A3	6118 F4	7105 H5	



FRONT DISPLAY PART - CHIPS LAYOUT PART A

This assembly drawing shows a summary of all possible versions. For components used in a specific version

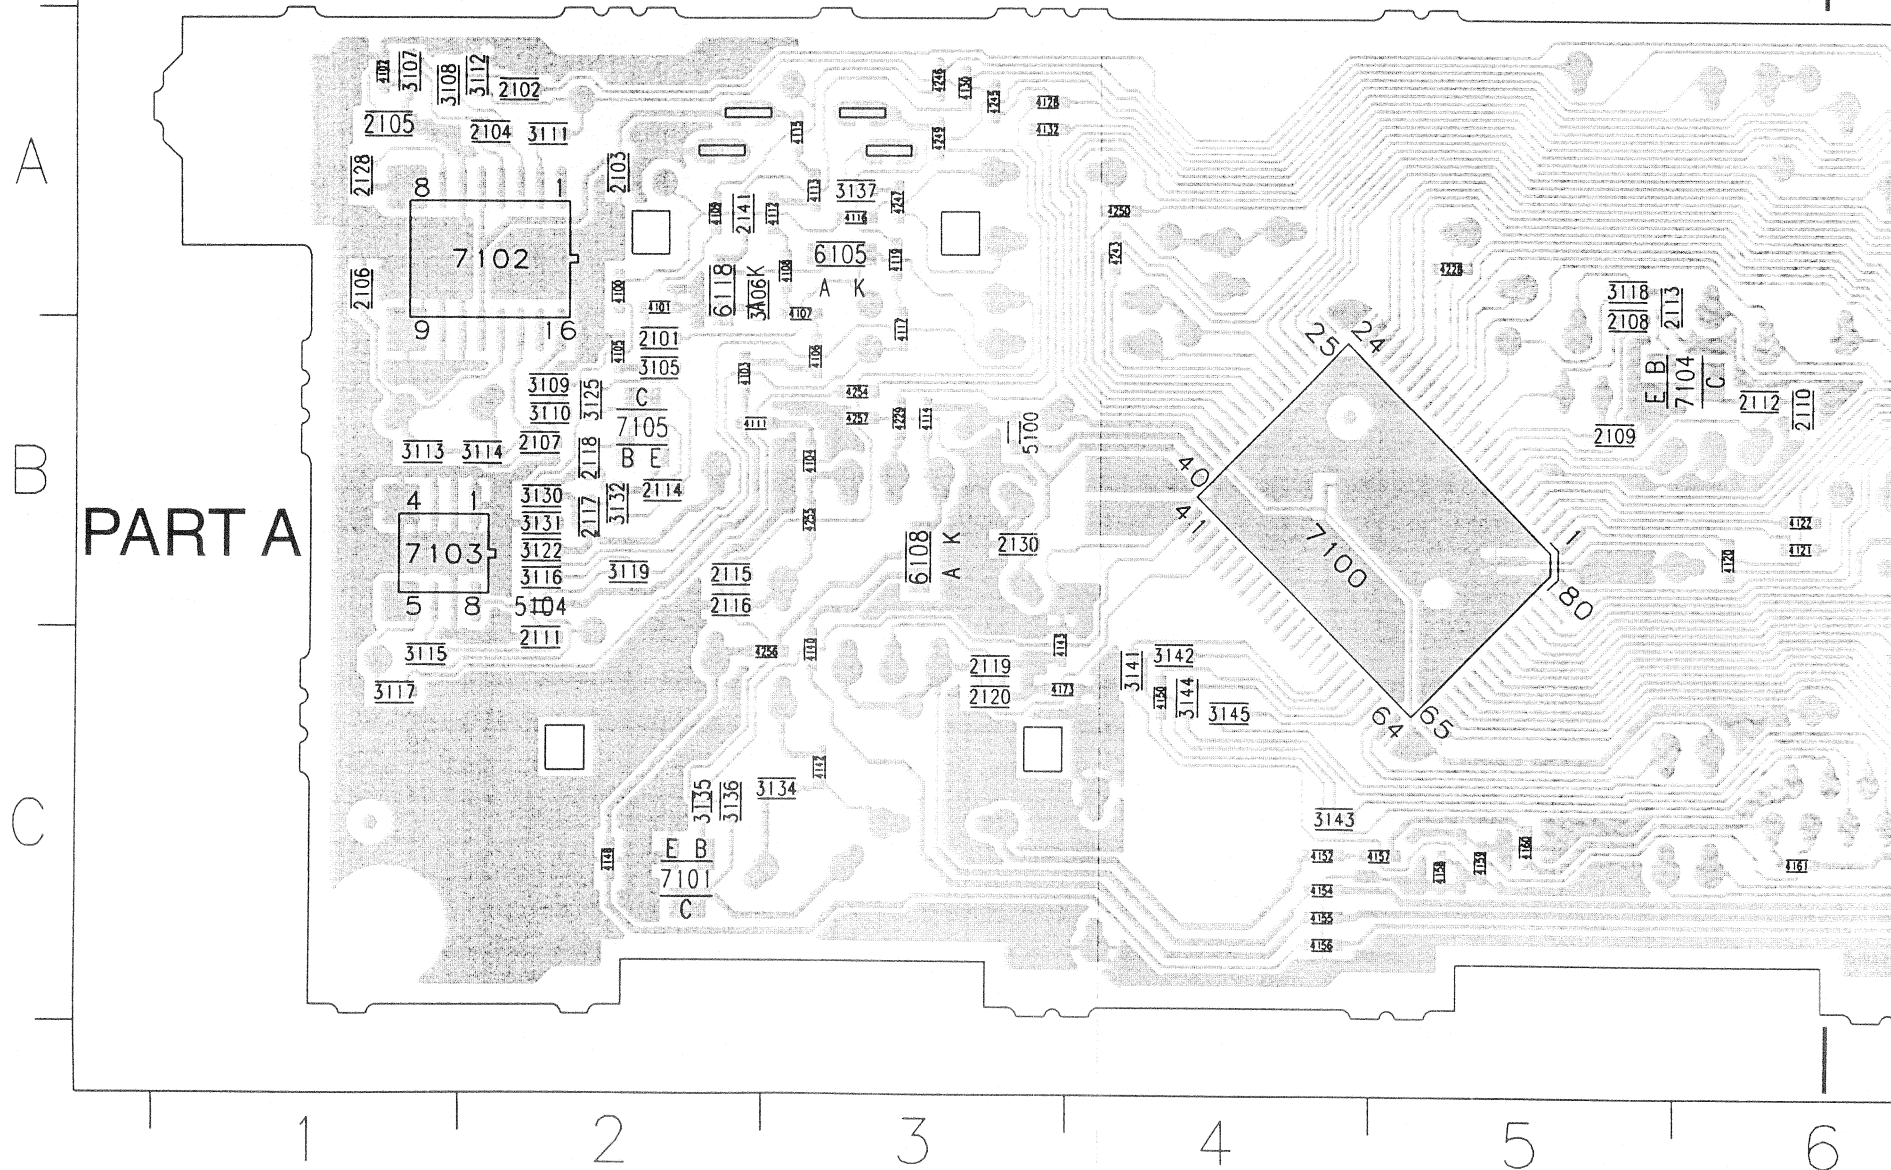


6-3

[illegible]

6-3


[illegible]

specific version see schematic and respective parts list.




FRONT CONTROL PART - CHIPS LAYOUT

2304	B2	3304	A5	3312	B1	3337	A2	3345	A2	4301	B2	4309	A1	4317	A2	4325	A2	4337	B3	7303	A1
2305	B2	3305	A5	3330	A4	3338	A2	3346	A2	4302	A4	4310	A3	4318	A2	4326	A2	4338	A3	7304	B2
2306	B4	3306	A5	3331	A2	3339	A2	3347	A1	4303	A3	4311	B1	4319	A3	4327	A1	4339	A3	7305	B2
2307	B3	3307	A4	3332	A2	3340	A1	3348	B1	4304	A1	4312	B1	4320	A2	4328	A1	4342	B2	7306	B1
2308	B3	3308	B4	3333	A2	3341	B1	3349	B2	4305	A3	4313	A3	4321	A2	4329	A4	4343	A2	7307	B2
2309	B3	3309	B4	3334	B3	3342	B2	3350	B2	4306	A1	4314	A3	4322	A2	4330	A2	7300	B3	7308	B2
2310	A4	3310	B5	3335	B4	3343	B2	3351	B2	4307	A1	4315	A3	4323	A2	4331	A5	7301	A2		
2303	A4	3311	B5	3336	B3	3344	B2	3352	B1	4308	A3	4316	A3	4324	A2	4334	A3	7302	A1		

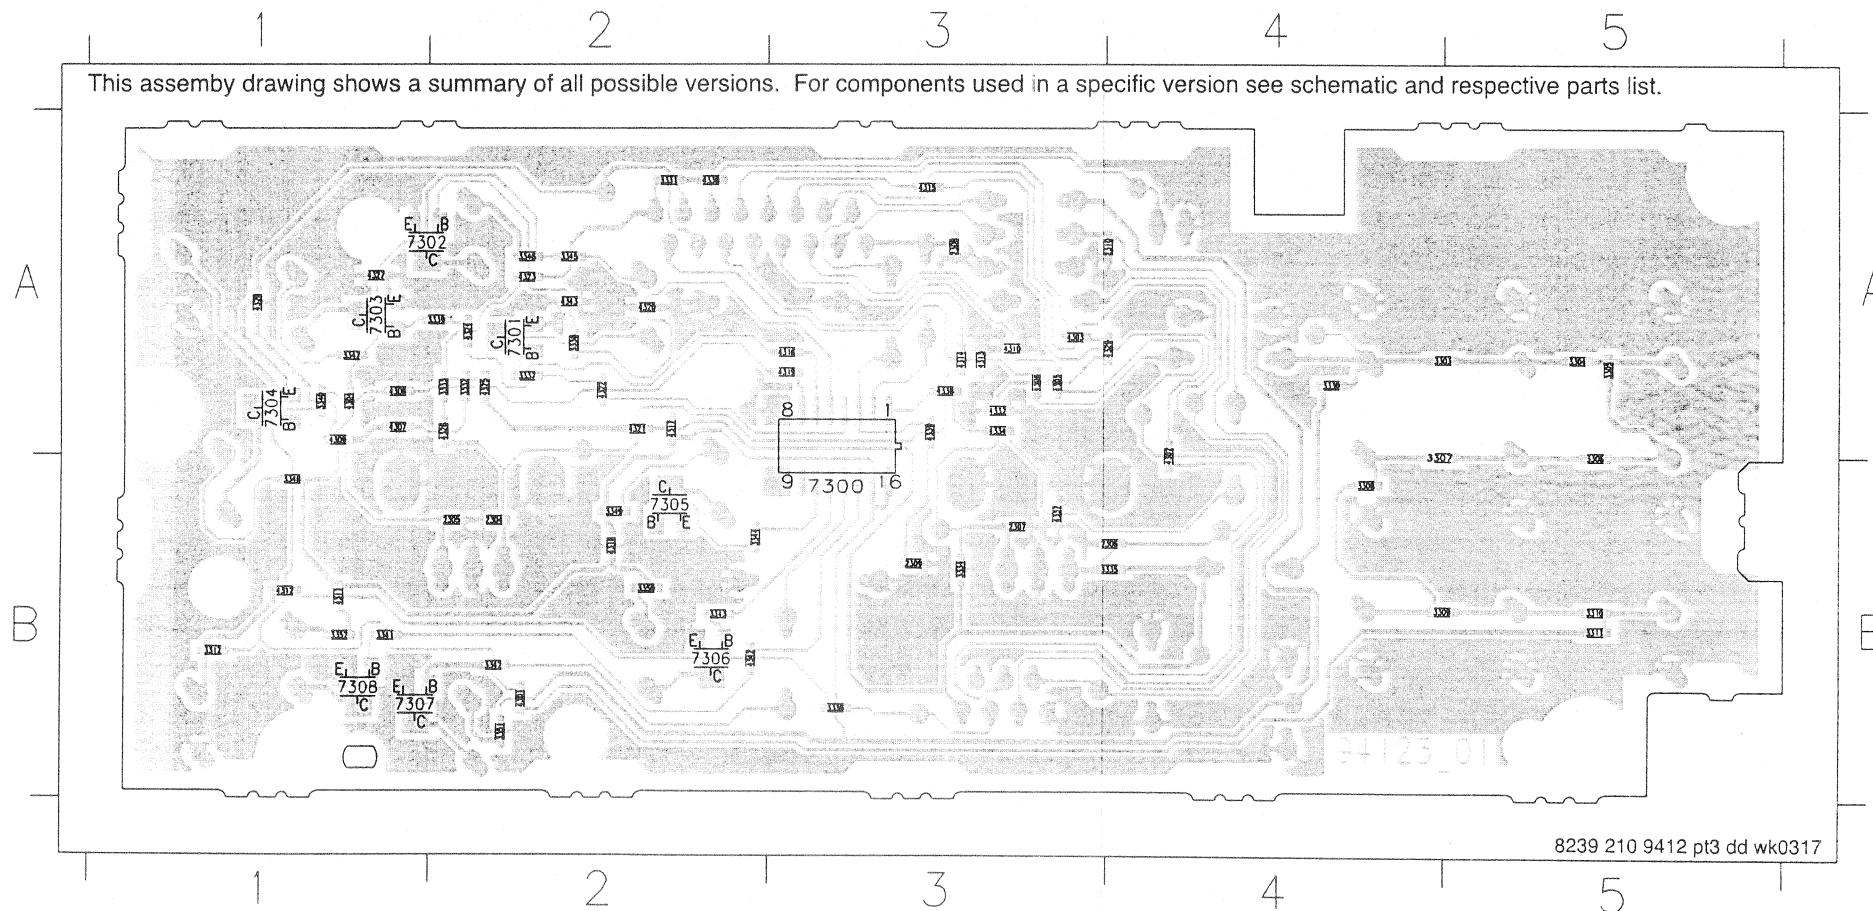


FRONT CONTROL PART - COMPONENT LAYOUT

1300 A4	1304 B1	1308 B1	1313 B3	6300 A4	6304 B4	9301 B2	9305 A2	9309 A2	9313 A3
1301 A2	1305 B1	1309 B1	1314 B4	6301 A4	6305 B4	9302 B2	9306 A3	9310 B3	9314 A3
1302 A1	1306 B2	1310 A5	1315 A3	6302 A5	6306 B4	9303 A3	9307 B2	9311 B3	9315 A4
1303 A1	1307 B2	1311 B5	1316 A2	6303 B5	6307 B5	9304 A3	9308 A2	9312 A3	

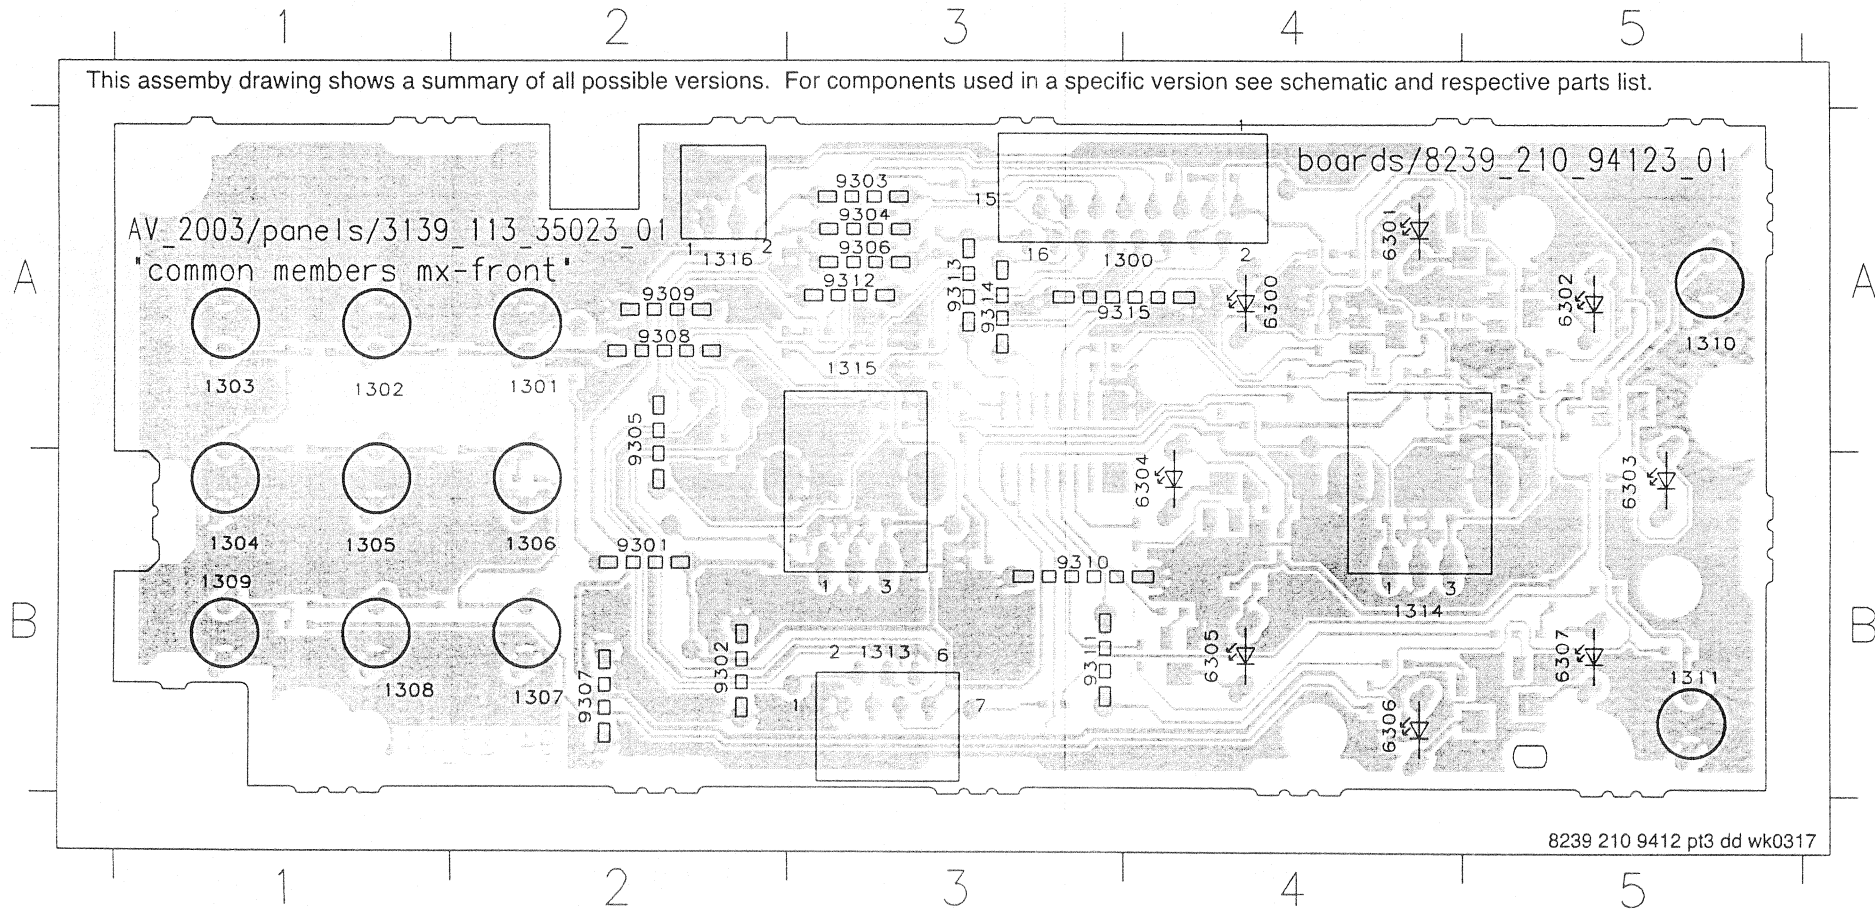


1300 A1	1304 A5	1308 A6	1313 C1	2304 B5	2308 D3	3304 A4	3308 A5	3312 A7	3333 A1	3337 D5	3341 D5	3345 C6	3349 E6	6300 C6	6304 E6	7300 C5	7304 C8	7308 E8
1301 A3	1305 A5	1309 A6	1314 B4	2305 B5	2309 D3	3305 A4	3309 A6	3330 A1	3334 A1	3338 D5	3342 D5	3346 C7	3350 E7	6301 C7	6305 E7	7301 C6	7305 E6	
1302 A4	1306 A5	1310 A7	1315 B3	2306 B4	2310 D4	3306 A5	3310 A6	3331 A1	3335 A1	3339 D5	3343 D5	3347 C7	3351 E7	6302 C8	6306 E8	7302 C7	7306 E7	
1303 A4	1307 A6	1311 A7	1316 E1	2307 B4	3303 A4	3307 A5	3311 A7	3332 A1	3336 A7	3340 D5	3344 E5	3348 C8	3352 E8	6303 C8	6307 E8	7303 C7	7307 E7	

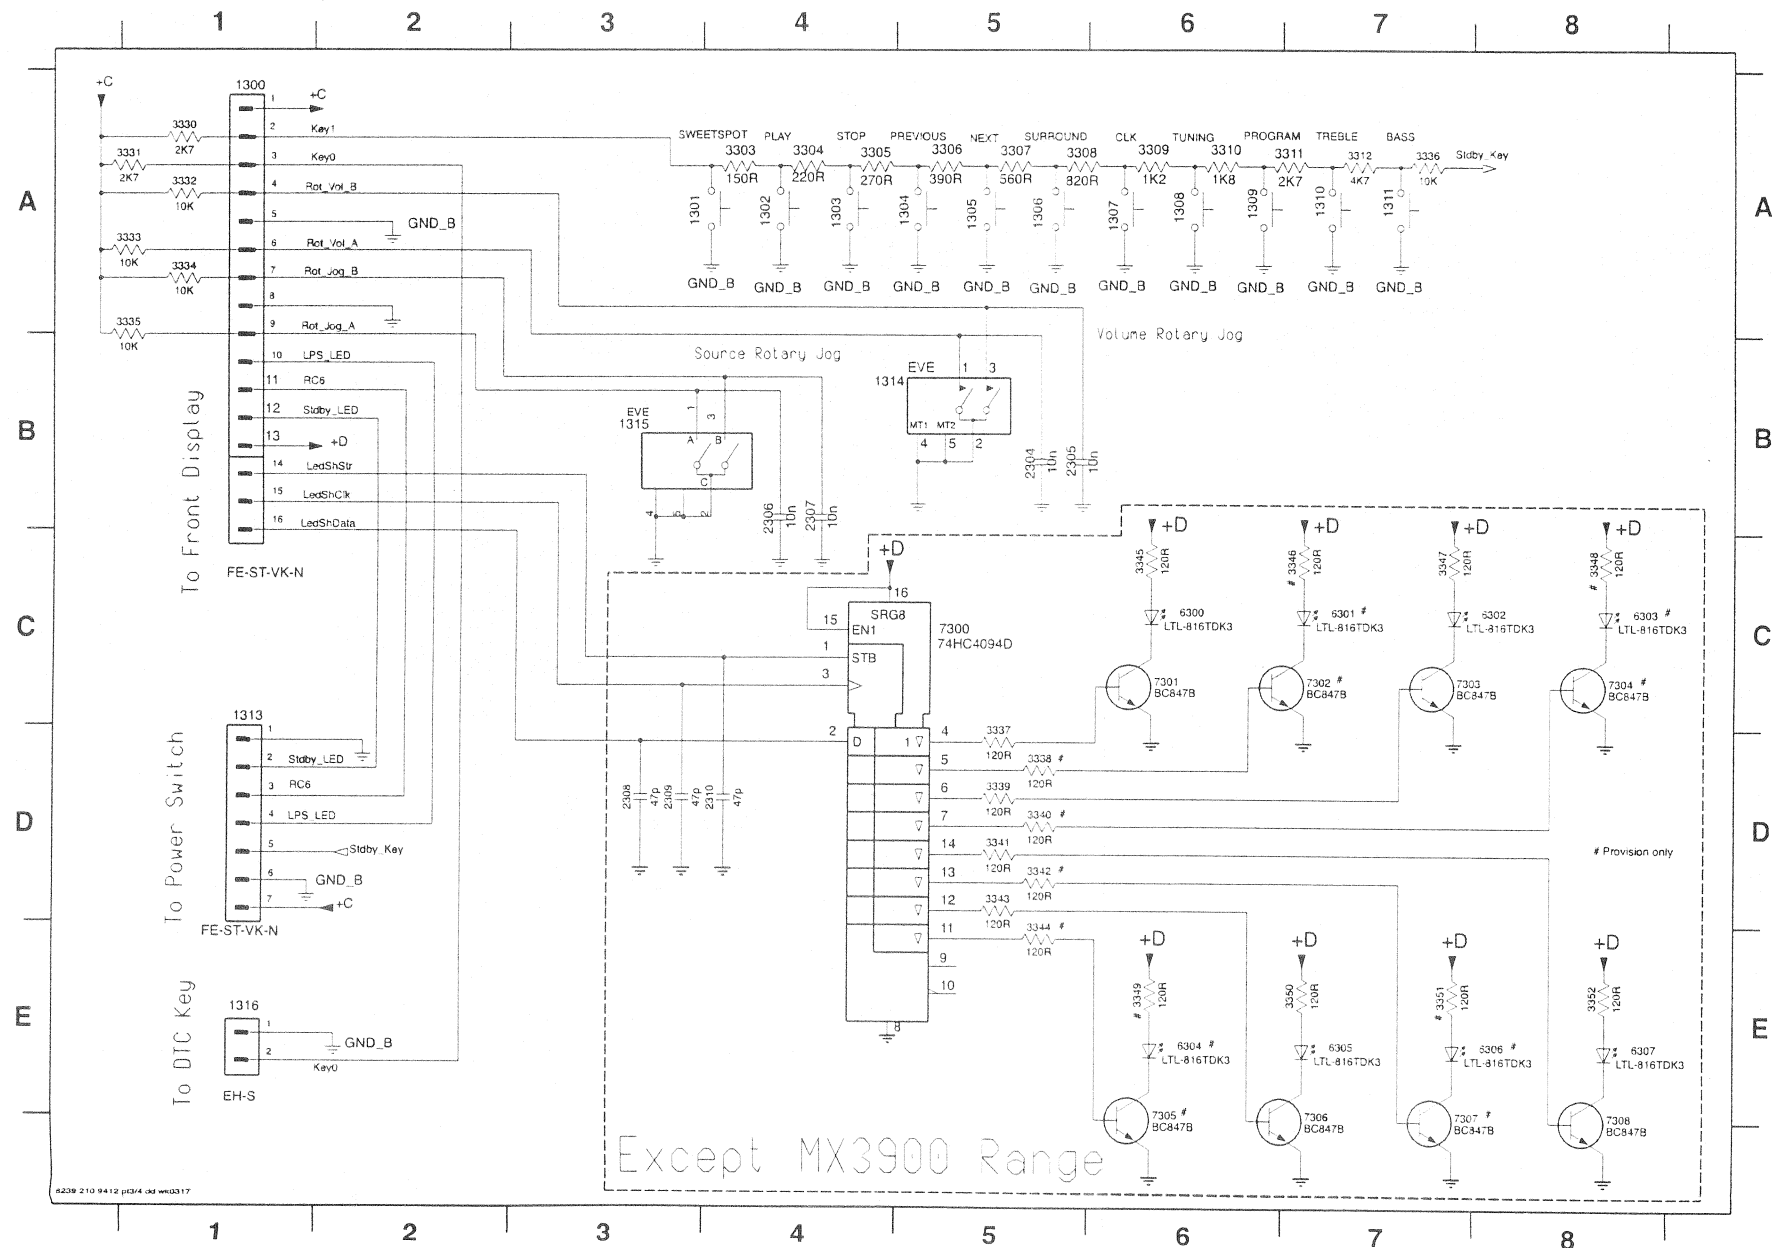


DTC KEY PART - COMPONENT & CHIP LAYOUTS


1400 A12 1401 A2 1402 A3 1403 A5 1404 A7 1405 A10

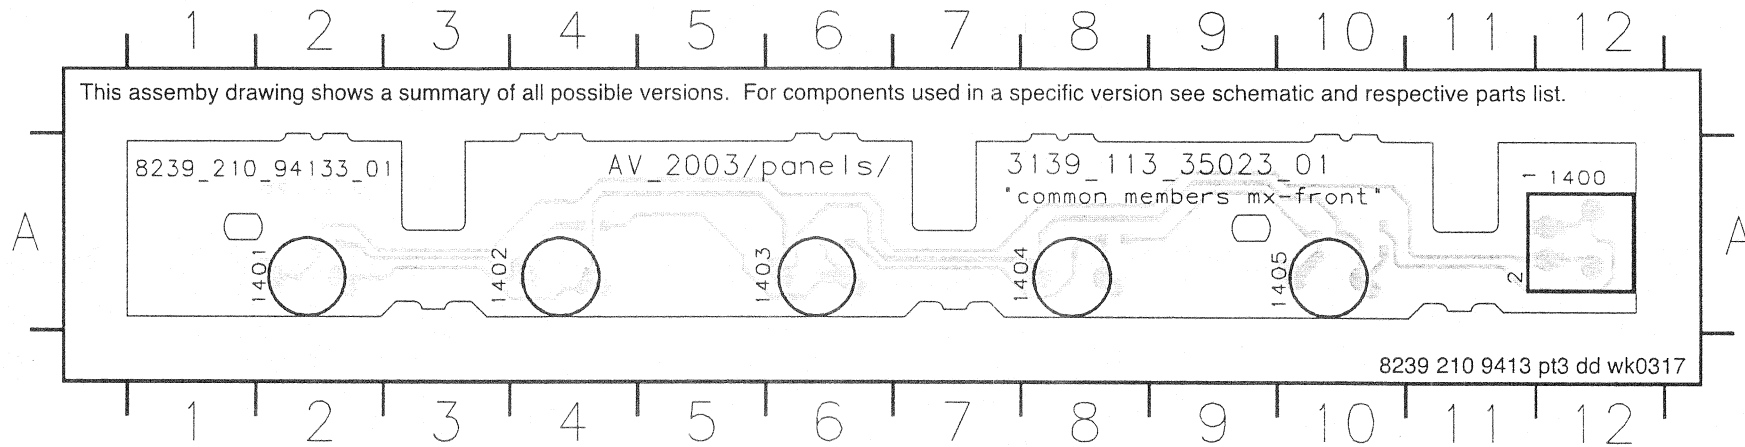


2400 A10 3400 A2 3401 A4 3402 A6 3403 A8 4400 A10

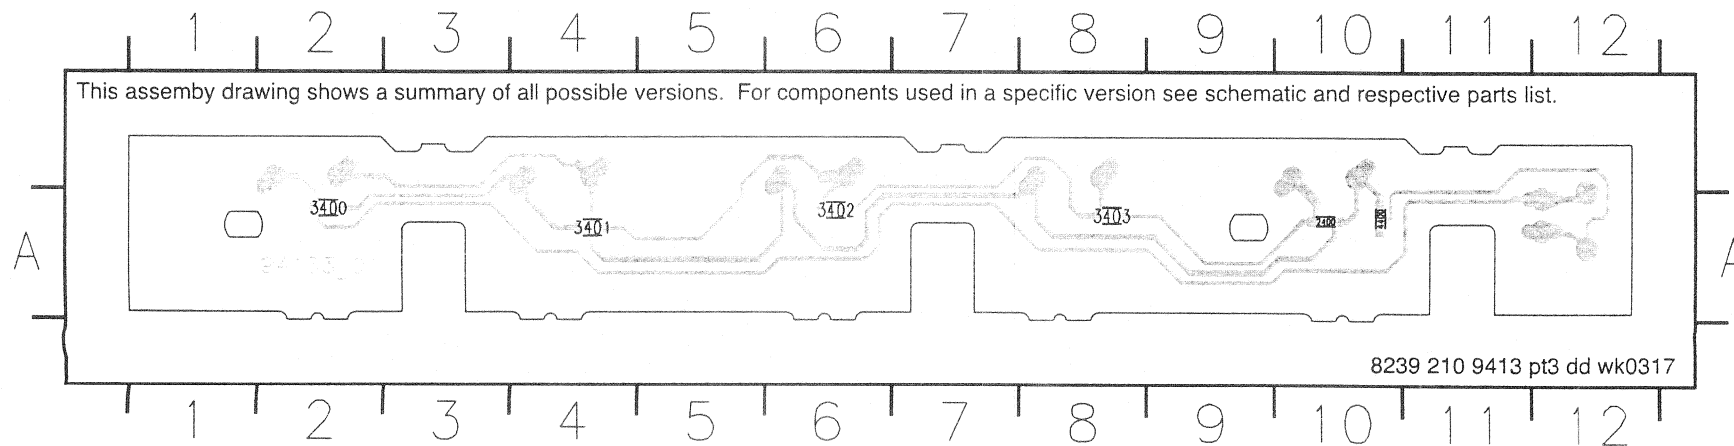

DTC KEY PART - CIRCUIT DIAGRAM

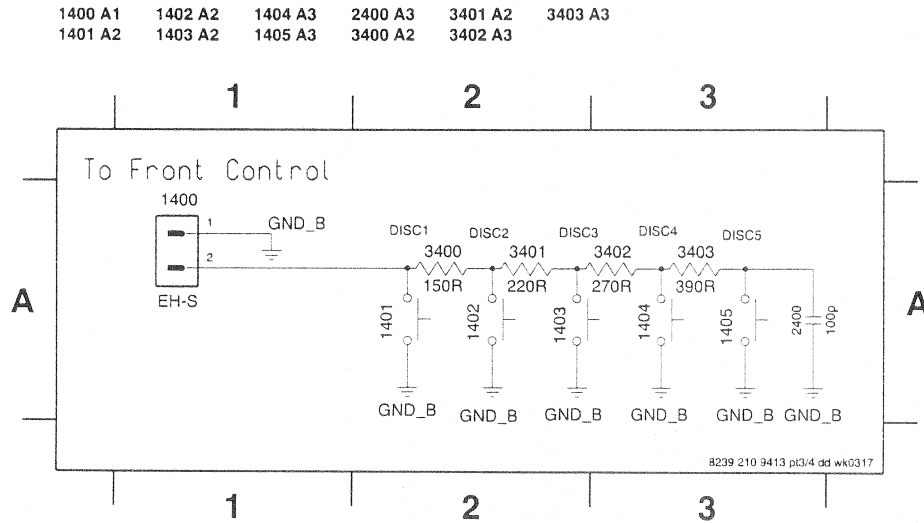


POWER SWITCH PART - CIRCUIT DIAGRAM

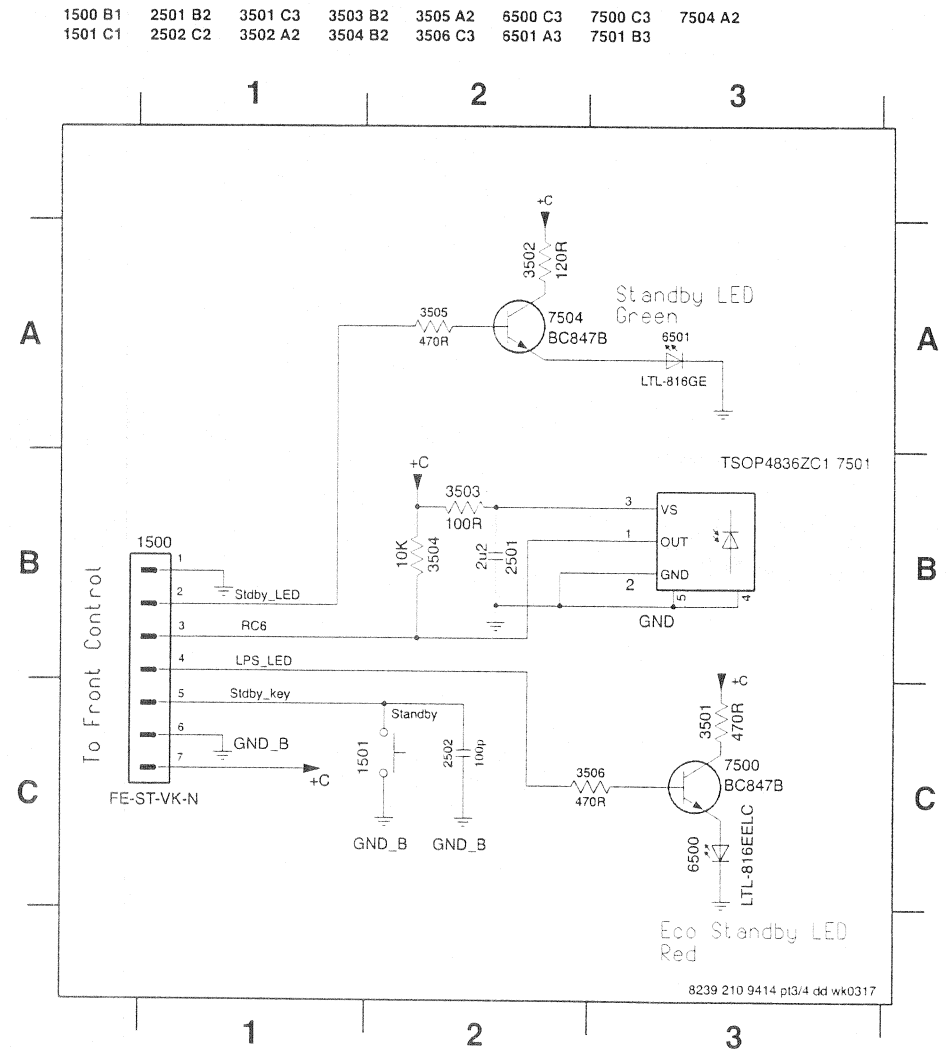


POWER SWITCH PART - COMPONENT & CHIPS LAYOUT

1500 A1 6500 C1 7501 B2 9501 A1
 1501 C2 6501 C2 9500 A1 9502 B1

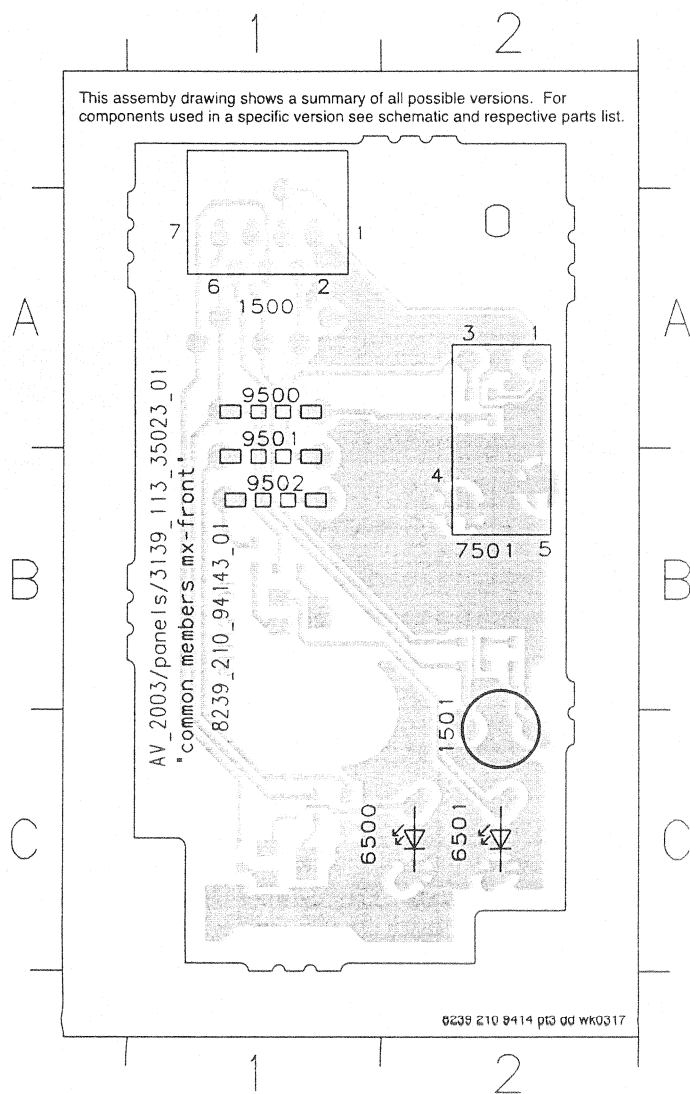


2501 C2 3502 B2 3505 B2 4501 B1
 2502 B1 3503 A1 3506 C2 7500 C2
 3501 C2 3504 A1 4500 B1 7504 B2

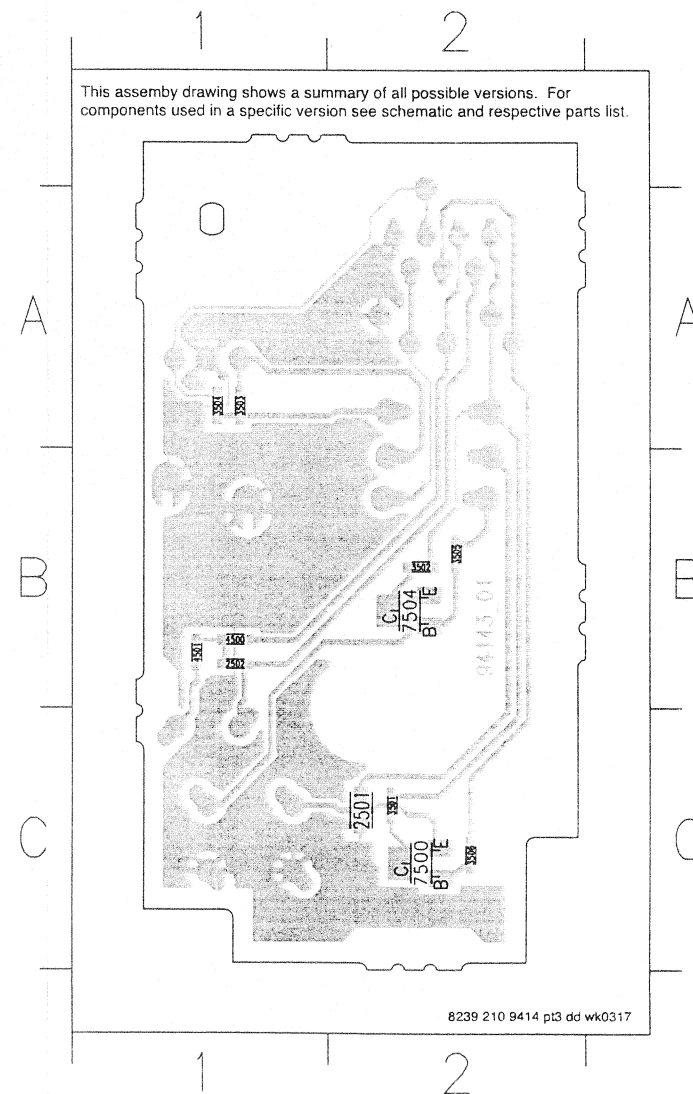


HDPH & MIC PART - CIRCUIT DIAGRAM (For non-Karaoke version pt 3 pcb only)

1600 A3 1602 A6 1604 B5 2600 A4 2602 A5 2604 B4 2606 C3 2608 C4 2610 C4 3605 C4 3607 B5 3609 B5 3611 C5 3613 C2 3615 C5 5603 B5 5605 A6 7600 C3
 1601 A6 1603 C1 1605 B4 2601 A5 2603 B4 2605 C5 2607 C3 2609 C2 2611 A4 3606 B3 3608 C3 3610 C3 3612 C4 3614 C3 5600 A6 5604 A6 5606 A6 7601 C5

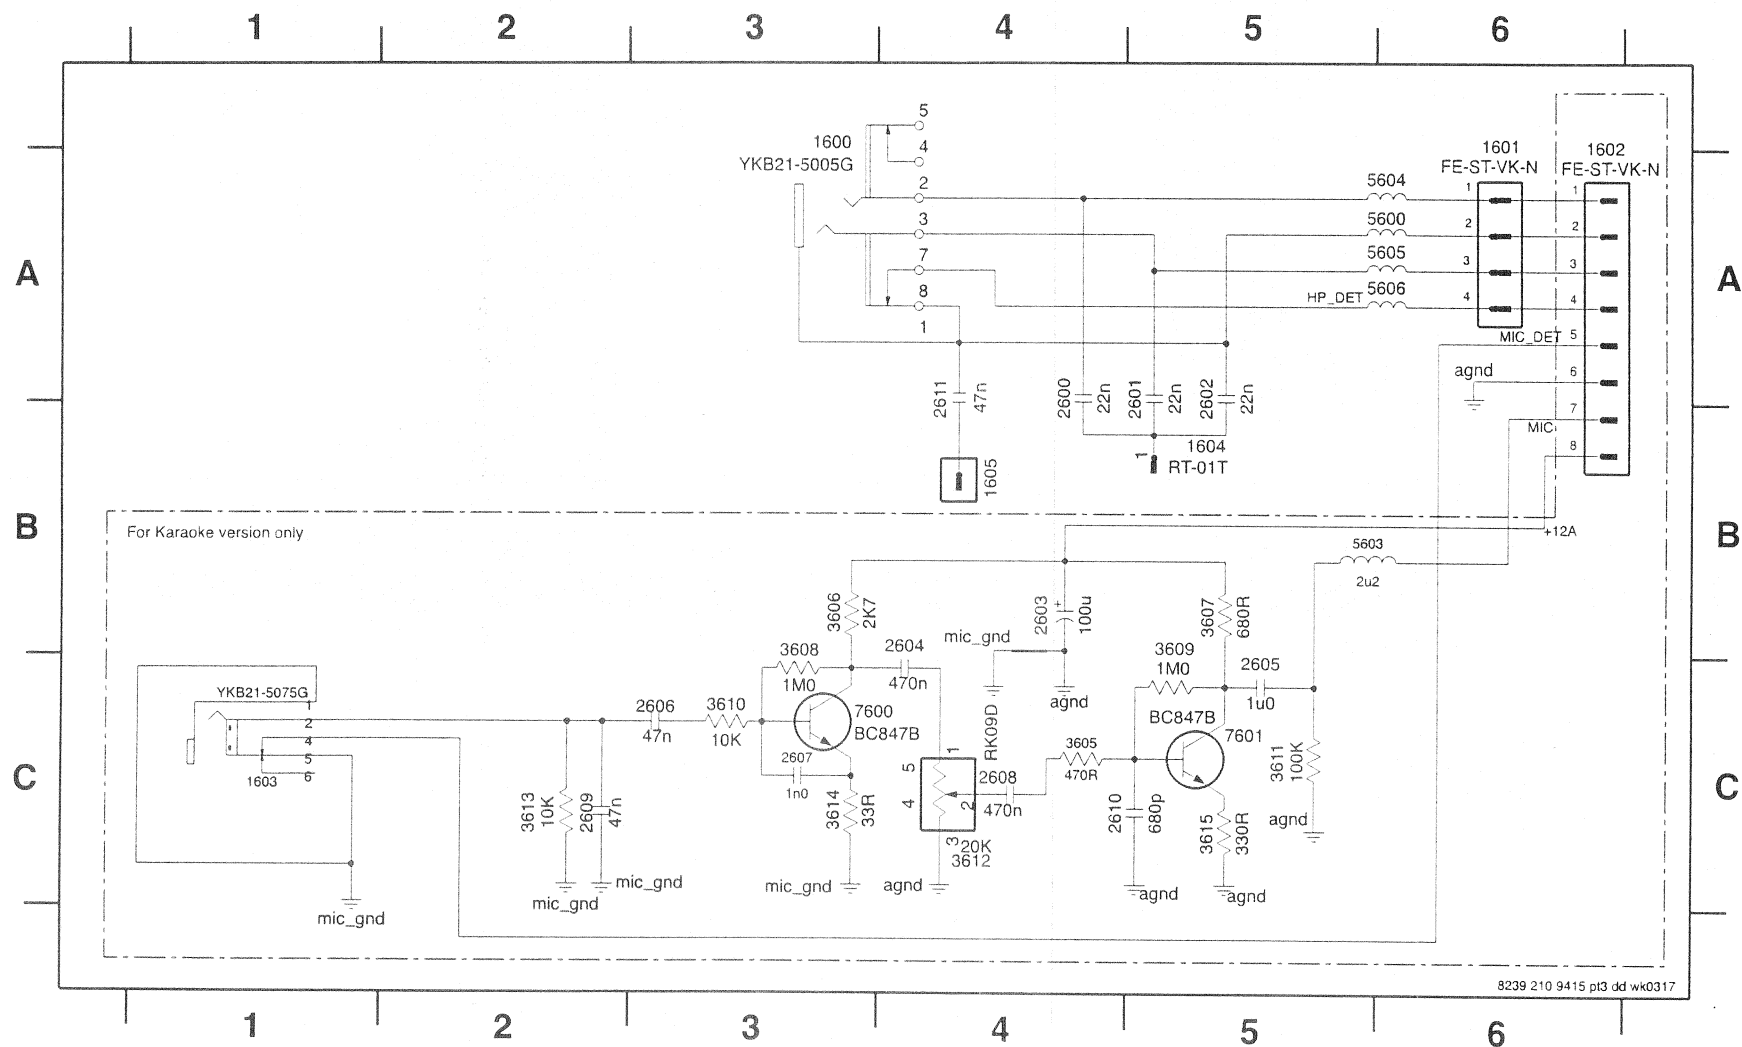


6-13

This assembly drawing shows a summary of all possible versions. For components used in a specific version see schematic and respective parts list.

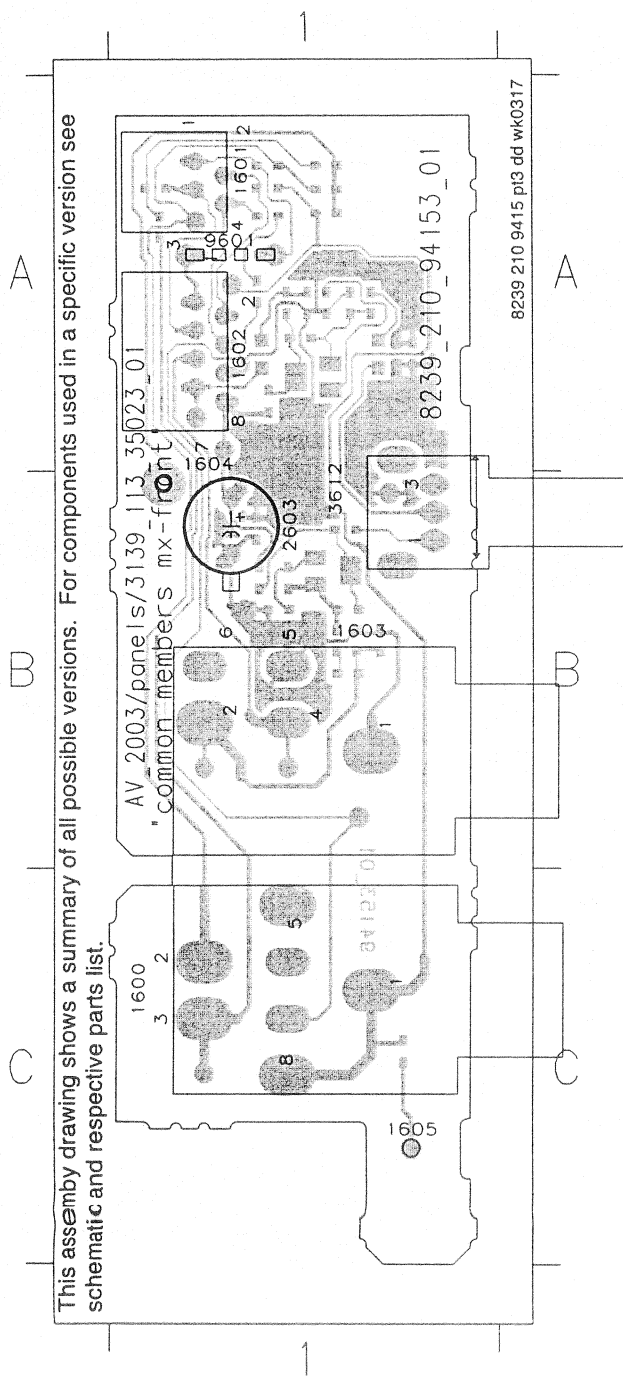

1600	C1
1601	A1
1602	A1
1603	B1
1604	A1
1605	C1
2603	B1
3612	B1
9601	A1


This assembly drawing shows a summary of all possible versions. For components used in a specific version see schematic and respective parts list.

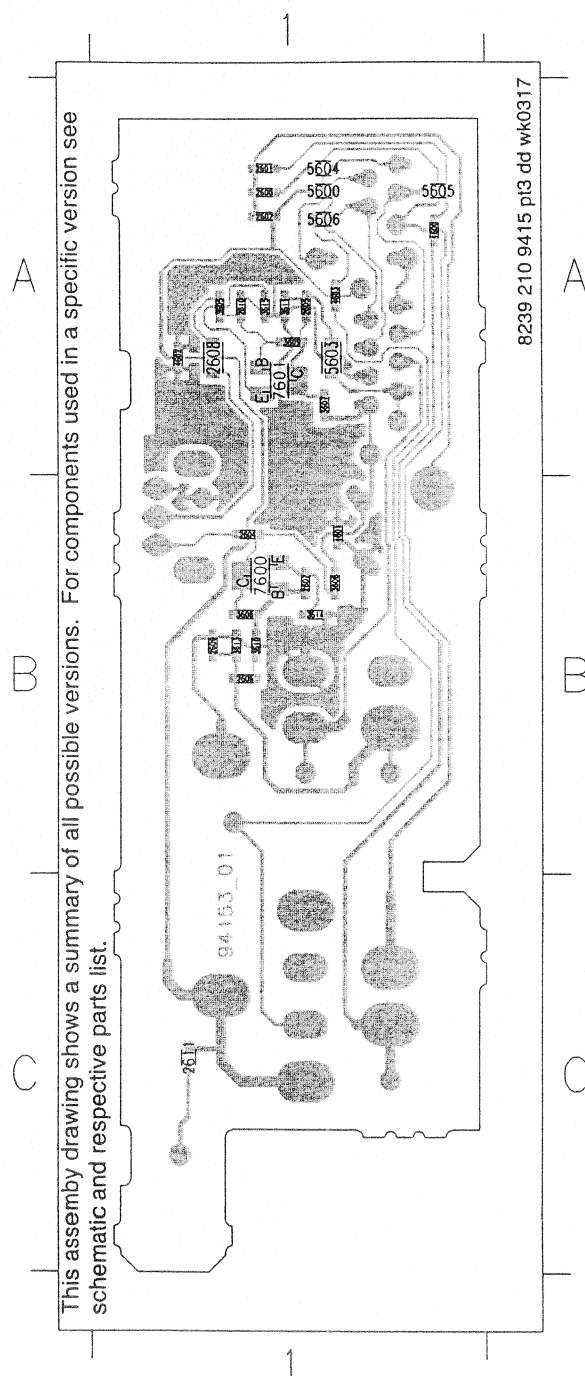


0	A
1	A
2	A
3	A
4	A
5	A
6	A
7	A
8	A
9	A
10	A
11	C
12	A
13	B
14	B
15	A
16	B
17	B
18	A
19	A
20	A
21	A
22	A
23	A
24	A
25	A
26	A
27	A
28	A
29	A
30	A
31	A
32	A
33	A
34	A
35	A
36	A
37	A
38	A
39	A
40	A
41	A
42	A
43	A
44	A
45	A
46	A
47	A
48	A
49	A
50	A
51	A
52	A
53	A
54	A
55	A
56	A
57	A
58	A
59	A
60	A
61	A
62	A
63	A
64	A
65	A
66	A
67	A
68	A
69	A
70	A
71	A
72	A
73	A
74	A
75	A
76	A
77	A
78	A
79	A
80	A
81	A
82	A
83	A
84	A
85	A
86	A
87	A
88	A
89	A
90	A
91	A
92	A
93	A
94	A
95	A
96	A
97	A
98	A
99	A
100	A


HDPH & MIC PART - CIRCUIT DIAGRAM (For all versions pt 4 pcb)

1600 A3	1602 A6	1604 B5	2600 B5	2602 B5	2604 C4	2606 C3	2608 C4	2610 C4	3605 C4	3607 B5	3609 C5	3611 C5	3613 C2	3615 C5	5603 B5	5605 A4	7600 C3
1601 A6	1603 C1	1605 B4	2601 B5	2603 B4	2605 C5	2607 C3	2609 C2	2611 B4	3606 B3	3608 C3	3610 C3	3612 C4	3614 C3	5600 A4	5604 A4	5606 A4	7601 C5

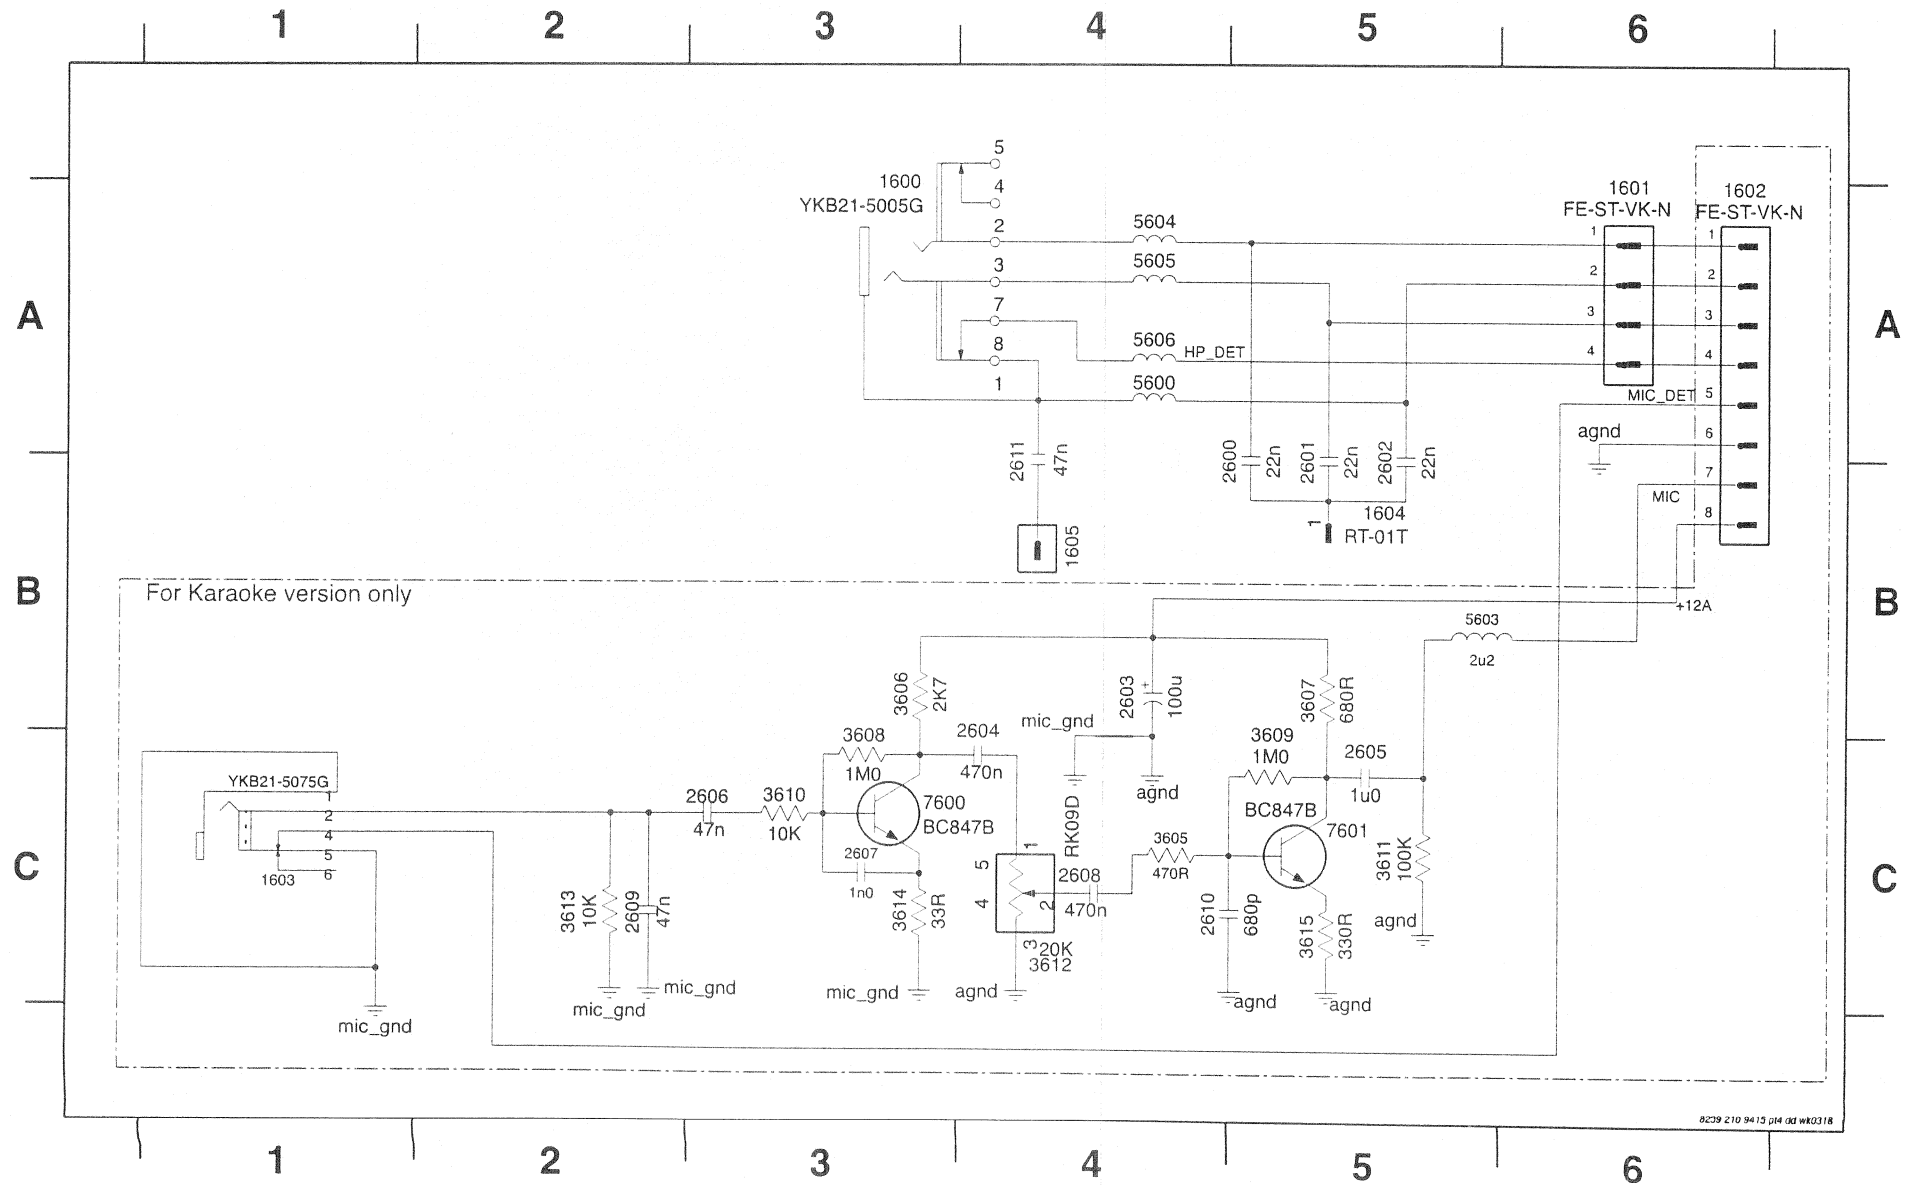

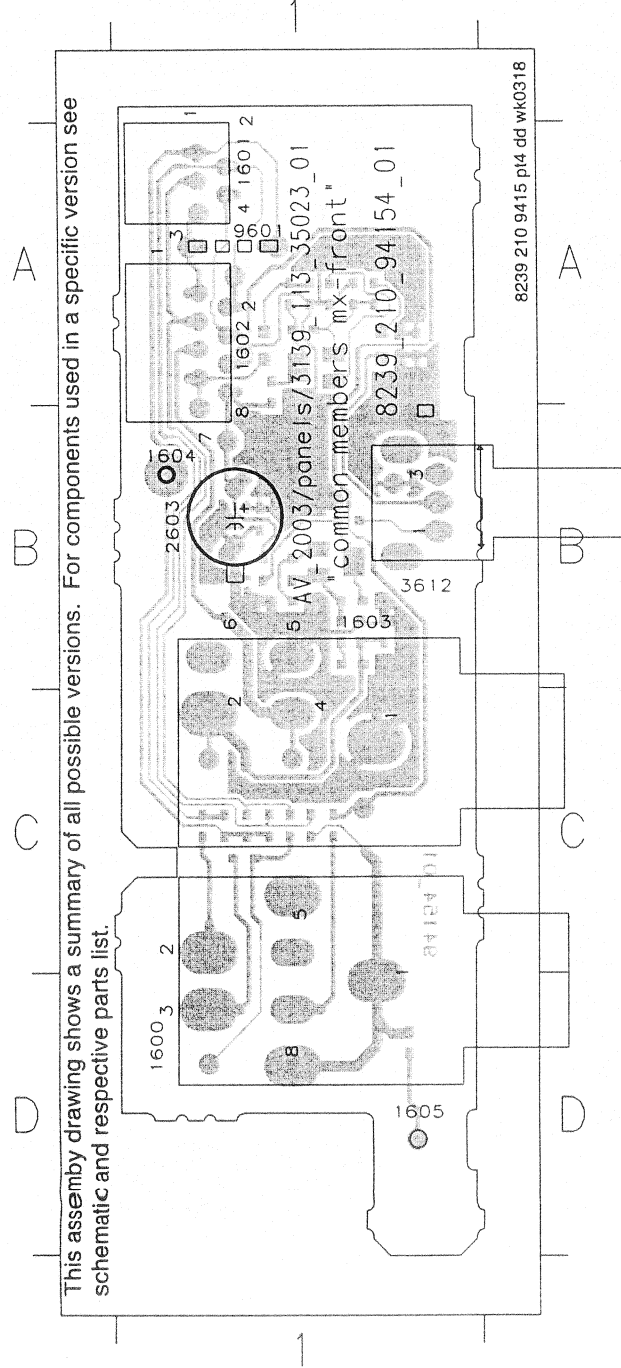

1600	D
1601	A
1602	A
1603	B
1604	B
1605	D
2603	B
3612	B
9601	A

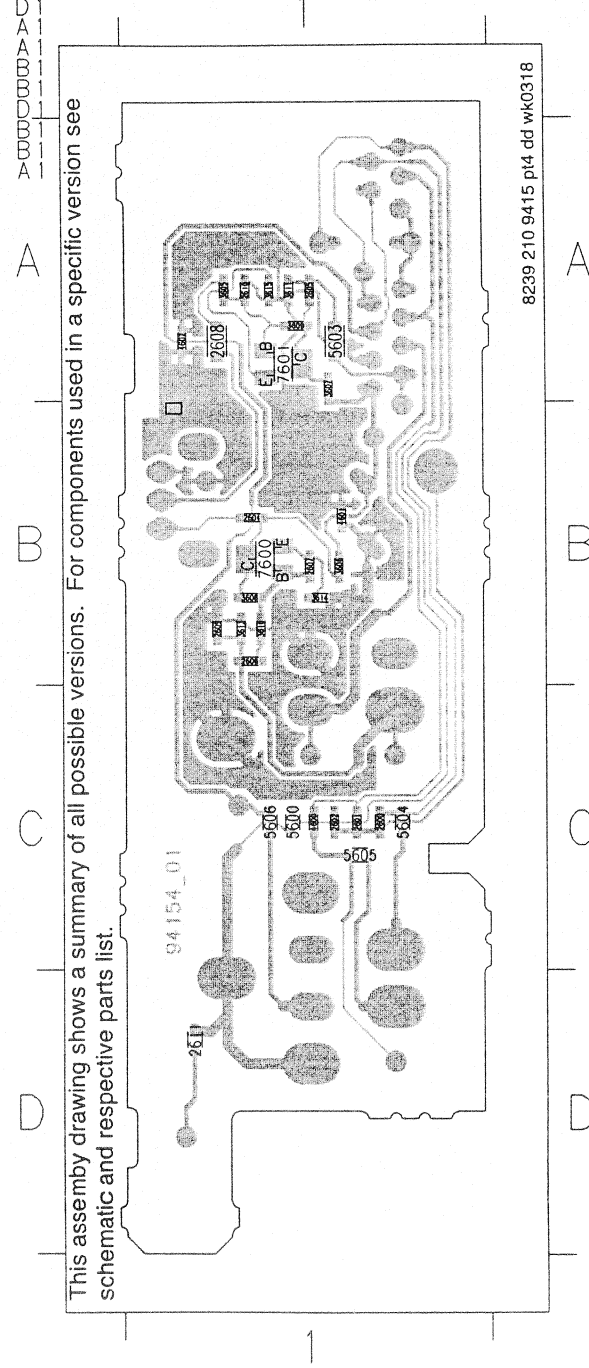

660001	C
660002	C
660003	C
660004	B
660005	B
660006	A
660007	B
660008	B
660009	A
660010	A
660011	D
660012	A
660013	A
660014	B
660015	B
660016	A
660017	B
660018	B
660019	A
660020	B
660021	B
660022	B
660023	B
660024	B
660025	B
660026	B
660027	B
660028	B
660029	B
660030	B
660031	B
660032	B
660033	B
660034	B
660035	B
660036	B
660037	B
660038	B
660039	B
660040	B
660041	B
660042	B
660043	B
660044	B
660045	B
660046	B
660047	B
660048	B
660049	B
660050	B
660051	B
660052	B
660053	B
660054	B
660055	B
660056	B
660057	B
660058	B
660059	B
660060	B
660061	B
660062	B
660063	B
660064	B
660065	B
660066	B
660067	B
660068	B
660069	B
660070	B
660071	B
660072	B
660073	B
660074	B
660075	B
660076	B
660077	B
660078	B
660079	B
660080	B
660081	B
660082	B
660083	B
660084	B
660085	B
660086	B
660087	B
660088	B
660089	B
660090	B
660091	B
660092	B
660093	B
660094	B
660095	B
660096	B
660097	B
660098	B
660099	B
660100	B

ELECTRICAL PARTS LIST - FRONT BOARDS

MISCELLANEOUS

3139	119 00831	LCD Module MX5500D-01	
1101	2422 025 14548	Flex Socket 16P	
1104	2422 025 16979	Flex Socket 4P	
1105	2422 025 14544	Flex Socket 14P	
1106	4822 267 10756	Flex Socket 13P	
1107	4822 265 11545	Flex Socket 19P	
1300	2422 025 14546	Flex Socket 16P	
1301	4822 276 13775	Tact Switch	
1302	4822 276 13775	Tact Switch	
1303	4822 276 13775	Tact Switch	
1304	4822 276 13775	Tact Switch	
1305	4822 276 13775	Tact Switch	
1306	4822 276 13775	Tact Switch	
1307	4822 276 13775	Tact Switch	
1308	4822 276 13775	Tact Switch	
1309	4822 276 13775	Tact Switch	
1310	4822 276 13775	Tact Switch	
1311	4822 276 13775	Tact Switch	
1313	4822 267 10956	Flex Socket 7P	
1314	2422 129 16975	Rot Encoder 12P EVEMC2F2512B B	
1315	2422 129 16974	Rot Encoder 12P EVEGC1F2512B B	
1401	4822 276 13775	Tact Switch	
1402	4822 276 13775	Tact Switch	
1403	4822 276 13775	Tact Switch	
1404	4822 276 13775	Tact Switch	
1405	4822 276 13775	Tact Switch	
1500	4822 267 10956	Flex Socket 7P	
1501	4822 276 13775	Tact Switch	
1600	2422 026 05192	Headphone Socket	
1601	4822 265 11183	Flex Socket 4P	non-kara
1602	4822 265 11535	Flex Socket 8P	kara
1603	2422 026 05372	Mic Socket	kara

CAPACITORS

2101	4822 126 13879	220nF +80/-20% 16V	
2102	3198 016 31020	1nF 25V	RDS
2103	2238 586 59812	100nF +80/-20% 50V	RDS
2104	4822 126 14249	560pF 25V	RDS
2105	4822 126 14491	2,2uF 10V	RDS
2106	4822 126 14226	82pF 50V	RDS
2107	4822 126 11785	47PF 50V	RDS
2108	4822 122 33761	22pF 5% 50V	
2109	4822 122 33761	22pF 5% 50V	
2110	4822 126 14223	2,2pF +/-0,25pF 50V	
2111	3198 017 41050	1uF 10V	
2112	4822 122 33761	22pF 5% 50V	
2113	2222 867 15339	33pF 5% 50V	
2114	5322 126 11583	10nF 10% 50V	
2115	2238 586 59812	100nF +80/-20% 50V	
2116	2238 586 59812	100nF +80/-20% 50V	
2117	3198 017 44740	470nF 10V	
2118	5322 126 11583	10nF 10% 50V	

2119	2238 586 59812	100nF +80/-20% 50V	
2120	2238 586 59812	100nF +80/-20% 50V	
2121	2020 552 94427	100pF 5% 50V	
2122	2020 552 94427	100pF 5% 50V	
2123	2020 552 94427	100pF 5% 50V	
2124	2020 552 94427	100pF 5% 50V	
2125	2020 552 94427	100pF 5% 50V	
2128	4822 126 14249	560pF 25V	RDS
2130	2238 586 59812	100nF +80/-20% 50V	
2131	4822 124 80483	47uF 20% 6,3V	
2132	4822 124 80483	47uF 20% 6,3V	
2141	3198 017 41050	1uF 10V	
2304	5322 126 11583	10nF 10% 50V	
2305	5322 126 11583	10nF 10% 50V	
2306	5322 126 11583	10nF 10% 50V	
2307	5322 126 11583	10nF 10% 50V	
2308	4822 126 11785	47pF 5% 50V	
2309	4822 126 11785	47pF 5% 50V	
2310	4822 126 11785	47pF 5% 50V	
2400	2020 552 94427	100pF 5% 50V	
2501	4822 126 14491	2,2uF 10V 0805	
2502	2020 552 94427	100pF 5% 50V	
2600	2238 916 15641	22nF 10% 25V	
2601	2238 916 15641	22nF 10% 25V	
2602	2238 916 15641	22nF 10% 25V	
2603	4822 124 41643	100uF 20% 16V	kara
2604	3198 017 44740	470nF 10V	kara
2605	3198 017 41050	1uF 10V	kara
2606	3198 017 34730	47nF 16V	kara
2607	3198 016 31020	1nF 25V	kara
2608	4822 126 13482	470nF +80/-20% 16V	kara
2609	3198 017 34730	47nF 16V	kara
2610	3198 016 36810	680pF 25V	kara
2611	3198 017 34730	47nF 16V	

RESISTORS

3100	4822 051 30102	1k 5% 0,062W	
3101	4822 051 30689	68R 5% 0,063W	
3102	4822 051 30689	68R 5% 0,063W	
3103	4822 051 30102	1k 5% 0,062W	
3105	4822 051 30474	470k 5% 0,062W	
3106	4822 051 30103	10k 5% 0,062W	
3107	4822 051 30103	10k 5% 0,062W	RDS
3108	4822 051 30152	1k5 5% 0,062W	RDS
3109	4822 051 30102	1k 5% 0,062W	RDS
3110	4822 051 30103	10k 5% 0,062W	non-RDS
3111	4822 051 30102	1k 5% 0,062W	RDS
3112	4822 051 30103	10k 5% 0,062W	non-RDS
3113	4822 117 12891	220k 5% 0,062W	RDS
3114	4822 051 30222	2k2 5% 0,062W	RDS
3115	4822 051 30103	10k 5% 0,062W	
3116	4822 051 30103	10k 5% 0,062W	

ELECTRICAL PARTS LIST - FRONT BOARDS

3117	4822 051 30102	1k 5% 0,062W	
3118	4822 051 30472	4k7 5% 0,062W	
3119	4822 051 30102	1k 5% 0,062W	
3122	4822 051 30272	2k7 5% 0,062W	
3125	4822 051 30102	1k 5% 0,062W	
3130	4822 051 30684	680k 5% 0,062W	
3131	4822 117 11817	1k2 5% 0,062W	see circuit
3131	4822 051 30392	3k9 5% 0,062W	see circuit
3131	4822 051 30273	27k 5% 0,062W	see circuit
3132	4822 051 30684	680k 5% 0,062W	
3134	4822 051 30101	100R 5% 0,062W	
3135	4822 051 30102	1k 5% 0,062W	
3136	4822 051 30689	68R 5% 0,063W	
3137	4822 051 30472	4k7 5% 0,062W	
3141	4822 051 30102	1k 5% 0,062W	
3142	4822 051 30102	1k 5% 0,062W	
3143	4822 051 30102	1k 5% 0,062W	
3144	4822 051 30102	1k 5% 0,062W	
3145	4822 051 30102	1k 5% 0,062W	
3158	4822 051 30103	10k 5% 0,062W	
3159	4822 051 30103	10k 5% 0,062W	
3160	4822 051 30103	10k 5% 0,062W	
3161	4822 051 30102	1k 5% 0,062W	
3162	4822 051 30102	1k 5% 0,062W	
3163	4822 051 30102	1k 5% 0,062W	
3164	4822 051 30223	22k 5% 0,062W	
3165	4822 117 13632	100k 1% 0,62W	
3170	4822 051 30103	10k 5% 0,062W	
3171	4822 051 30103	10k 5% 0,062W	
3172	4822 051 30103	10k 5% 0,062W	
3173	4822 051 30103	10k 5% 0,062W	
3175	4822 051 30103	10k 5% 0,062W	
3176	4822 051 30103	10k 5% 0,062W	
3177	4822 051 30103	10k 5% 0,062W	
3303	4822 051 30151	150R 5% 0,062W	
3304	4822 051 30221	220R 5% 0,062W	
3305	4822 051 30271	270R 5% 0,062W	
3306	4822 051 30391	390R 5% 0,062W	
3307	4822 051 30561	560R 5% 0,062W	
3308	4822 117 12968	820R 5% 0,62W	
3309	4822 117 11817	1k2 1% 1/16W	
3310	4822 117 12903	1K8 1% 0,063W	
3311	4822 051 30272	2k7 5% 0,062W	
3312	4822 051 30472	4k7 5% 0,062W	
3330	4822 051 30272	2k7 5% 0,062W	
3331	4822 051 30272	2k7 5% 0,062W	
3332	4822 051 30103	10k 5% 0,062W	
3333	4822 051 30103	10k 5% 0,062W	
3334	4822 051 30103	10k 5% 0,062W	
3335	4822 051 30103	10k 5% 0,062W	
3336	4822 051 30103	10k 5% 0,062W	
3337	4822 051 30121	120R 5% 0,062W	

3339	4822 051 30121	120R 5% 0,062W	
3341	4822 051 30121	120R 5% 0,062W	
3343	4822 051 30121	120R 5% 0,062W	
3345	4822 051 30121	120R 5% 0,062W	
3347	4822 051 30121	120R 5% 0,062W	
3350	4822 051 30121	120R 5% 0,062W	
3352	4822 051 30121	120R 5% 0,062W	
3400	4822 051 30151	150R 5% 0,062W	
3401	4822 051 30221	220R 5% 0,062W	
3402	4822 051 30271	270R 5% 0,062W	
3403	4822 051 30391	390R 5% 0,062W	
3501	4822 051 30471	470R 5% 0,062W	
3502	4822 051 30121	120R 5% 0,062W	
3503	4822 051 30101	100R 5% 0,062W	
3504	4822 051 30103	10k 5% 0,062W	
3505	4822 051 30471	470R 5% 0,062W	
3506	4822 051 30471	470R 5% 0,062W	
3605	4822 051 30471	470R 5% 0,062W	kara
3606	4822 051 30272	2k7 5% 0,062W	kara
3607	4822 051 30681	680R 5% 0,062W	kara
3608	4822 051 30105	1M 5% 0,062W	kara
3609	4822 051 30105	1M 5% 0,062W	kara
3610	4822 051 30103	10k 5% 0,062W	kara
3611	4822 117 13632	100k 1% 0,62W	kara
3612	2120 366 90291	Potm Rotary 20K	kara
3613	4822 051 30103	10k 5% 0,062W	kara
3614	4822 051 30339	33R 5% 0,062W	kara
3615	4822 051 30331	330R 5% 0,062W	kara
4100	4822 051 30008	OR Jumper 0603	
4101	4822 051 30008	OR Jumper 0603	
4102	4822 051 30008	OR Jumper 0603	
4103	4822 051 30008	OR Jumper 0603	
4104	4822 051 30008	OR Jumper 0603	
4105	4822 051 30008	OR Jumper 0603	
4106	4822 051 30008	OR Jumper 0603	
4107	4822 051 30008	OR Jumper 0603	
4108	4822 051 30008	OR Jumper 0603	
4109	4822 051 30008	OR Jumper 0603	
4111	4822 051 30008	OR Jumper 0603	
4112	4822 051 30008	OR Jumper 0603	
4113	4822 051 30008	OR Jumper 0603	
4114	4822 051 30008	OR Jumper 0603	
4115	4822 051 30008	OR Jumper 0603	
4116	4822 051 30008	OR Jumper 0603	
4117	4822 051 30008	OR Jumper 0603	
4119	4822 051 30008	OR Jumper 0603	
4120	4822 051 30008	OR Jumper 0603	
4121	4822 051 30008	OR Jumper 0603	
4122	4822 051 30008	OR Jumper 0603	
4128	4822 051 30008	OR Jumper 0603	
4130	4822 051 30008	OR Jumper 0603	
4132	4822 051 30008	OR Jumper 0603	

ELECTRICAL PARTS LIST - FRONT BOARDS

RESISTORS

4137	4822 051 30008	OR Jumper 0603	4192	4822 051 30008	OR Jumper 0603
4138	4822 051 30008	OR Jumper 0603	4193	4822 051 30008	OR Jumper 0603
4139	4822 051 30008	OR Jumper 0603	4194	4822 051 30008	OR Jumper 0603
4140	4822 051 30008	OR Jumper 0603	4195	4822 051 30008	OR Jumper 0603
4141	4822 051 30008	OR Jumper 0603	4196	4822 051 30008	OR Jumper 0603
4142	4822 051 30008	OR Jumper 0603	4197	4822 051 30008	OR Jumper 0603
4143	4822 051 30008	OR Jumper 0603	4198	4822 051 30008	OR Jumper 0603
4144	4822 051 30008	OR Jumper 0603	4199	4822 051 30008	OR Jumper 0603
4145	4822 051 30008	OR Jumper 0603	4200	4822 051 30008	OR Jumper 0603
4146	4822 051 30008	OR Jumper 0603	4201	4822 051 30008	OR Jumper 0603
4147	4822 051 30008	OR Jumper 0603	4202	4822 051 30008	OR Jumper 0603
4148	4822 051 30008	OR Jumper 0603	4203	4822 051 30008	OR Jumper 0603
4149	4822 051 30008	OR Jumper 0603	4204	4822 051 30008	OR Jumper 0603
4150	4822 051 30008	OR Jumper 0603	4205	4822 051 30008	OR Jumper 0603
4152	4822 051 30008	OR Jumper 0603	4206	4822 051 30008	OR Jumper 0603
4153	4822 051 30008	OR Jumper 0603	4207	4822 051 30008	OR Jumper 0603
4154	4822 051 30008	OR Jumper 0603	4208	4822 051 30008	OR Jumper 0603
4155	4822 051 30008	OR Jumper 0603	4209	4822 051 30008	OR Jumper 0603
4156	4822 051 30008	OR Jumper 0603	4210	4822 051 30008	OR Jumper 0603
4157	4822 051 30008	OR Jumper 0603	4211	4822 051 30008	OR Jumper 0603
4158	4822 051 30008	OR Jumper 0603	4212	4822 051 30008	OR Jumper 0603
4159	4822 051 30008	OR Jumper 0603	4213	4822 051 30008	OR Jumper 0603
4160	4822 051 30008	OR Jumper 0603	4214	4822 051 30008	OR Jumper 0603
4161	4822 051 30008	OR Jumper 0603	4215	4822 051 30008	OR Jumper 0603
4163	4822 051 30008	OR Jumper 0603	4216	4822 051 30008	OR Jumper 0603
4164	4822 051 30008	OR Jumper 0603	4217	4822 051 30008	OR Jumper 0603
4165	4822 051 30008	OR Jumper 0603	4218	4822 051 30008	OR Jumper 0603
4166	4822 051 30008	OR Jumper 0603	4219	4822 051 30008	OR Jumper 0603
4168	4822 051 30008	OR Jumper 0603	4220	4822 051 30008	OR Jumper 0603
4169	4822 051 30008	OR Jumper 0603	4221	4822 051 30008	OR Jumper 0603
4170	4822 051 30008	OR Jumper 0603	4222	4822 051 30008	OR Jumper 0603
4171	4822 051 30008	OR Jumper 0603	4223	4822 051 30008	OR Jumper 0603
4172	4822 051 30008	OR Jumper 0603	4224	4822 051 30008	OR Jumper 0603
4173	4822 051 30008	OR Jumper 0603	4225	4822 051 30008	OR Jumper 0603
4174	4822 051 30008	OR Jumper 0603	4226	4822 051 30008	OR Jumper 0603
4175	4822 051 30008	OR Jumper 0603	4227	4822 051 30008	OR Jumper 0603
4176	4822 051 30008	OR Jumper 0603	4228	4822 051 30008	OR Jumper 0603
4177	4822 051 30008	OR Jumper 0603	4229	4822 051 30008	OR Jumper 0603
4178	4822 051 30008	OR Jumper 0603	4230	4822 051 30008	OR Jumper 0603
4179	4822 051 30008	OR Jumper 0603	4231	4822 051 30008	OR Jumper 0603
4180	4822 051 30008	OR Jumper 0603	4232	4822 051 30008	OR Jumper 0603
4181	4822 051 30008	OR Jumper 0603	4234	4822 051 30008	OR Jumper 0603
4182	4822 051 30008	OR Jumper 0603	4235	4822 051 30008	OR Jumper 0603
4183	4822 051 30008	OR Jumper 0603	4236	4822 051 30008	OR Jumper 0603
4184	4822 051 30008	OR Jumper 0603	4237	4822 051 30008	OR Jumper 0603
4185	4822 051 30008	OR Jumper 0603	4238	4822 051 30008	OR Jumper 0603
4186	4822 051 30008	OR Jumper 0603	4239	4822 051 30008	OR Jumper 0603
4187	4822 051 30008	OR Jumper 0603	4240	4822 051 30008	OR Jumper 0603
4188	4822 051 30008	OR Jumper 0603	4241	4822 051 30008	OR Jumper 0603
4189	4822 051 30008	OR Jumper 0603	4242	4822 051 30008	OR Jumper 0603
4190	4822 051 30008	OR Jumper 0603	4243	4822 051 30008	OR Jumper 0603
4191	4822 051 30008	OR Jumper 0603	4244	4822 051 30008	OR Jumper 0603

ELECTRICAL PARTS LIST - FRONT BOARDS

4245	4822 051 30008	OR Jumper 0603
4246	4822 051 30008	OR Jumper 0603
4247	4822 051 30008	OR Jumper 0603
4249	4822 051 30008	OR Jumper 0603
4250	4822 051 30008	OR Jumper 0603
4251	4822 051 30008	OR Jumper 0603
4254	4822 051 30008	OR Jumper 0603
4255	4822 051 30008	OR Jumper 0603
4256	4822 051 30008	OR Jumper 0603
4257	4822 051 30008	OR Jumper 0603
4301	4822 051 30008	OR Jumper 0603
4302	4822 051 30008	OR Jumper 0603
4303	4822 051 30008	OR Jumper 0603
4304	4822 051 30008	OR Jumper 0603
4305	4822 051 30008	OR Jumper 0603
4306	4822 051 30008	OR Jumper 0603
4307	4822 051 30008	OR Jumper 0603
4308	4822 051 30008	OR Jumper 0603
4309	4822 051 30008	OR Jumper 0603
4310	4822 051 30008	OR Jumper 0603
4311	4822 051 30008	OR Jumper 0603
4312	4822 051 30008	OR Jumper 0603
4313	4822 051 30008	OR Jumper 0603
4314	4822 051 30008	OR Jumper 0603
4315	4822 051 30008	OR Jumper 0603
4316	4822 051 30008	OR Jumper 0603
4317	4822 051 30008	OR Jumper 0603
4318	4822 051 30008	OR Jumper 0603
4319	4822 051 30008	OR Jumper 0603
4320	4822 051 30008	OR Jumper 0603
4321	4822 051 30008	OR Jumper 0603
4322	4822 051 30008	OR Jumper 0603
4323	4822 051 30008	OR Jumper 0603
4324	4822 051 30008	OR Jumper 0603
4325	4822 051 30008	OR Jumper 0603
4326	4822 051 30008	OR Jumper 0603
4327	4822 051 30008	OR Jumper 0603
4328	4822 051 30008	OR Jumper 0603
4329	4822 051 30008	OR Jumper 0603
4330	4822 051 30008	OR Jumper 0603
4332	4822 051 30008	OR Jumper 0603
4334	4822 051 30008	OR Jumper 0603
4337	4822 051 30008	OR Jumper 0603
4338	4822 051 30008	OR Jumper 0603
4339	4822 051 30008	OR Jumper 0603
4342	4822 051 30008	OR Jumper 0603
4343	4822 051 30008	OR Jumper 0603
4400	4822 051 30008	OR Jumper 0603
4500	4822 051 30008	OR Jumper 0603
4501	4822 051 30008	OR Jumper 0603
4600	4822 051 30008	OR Jumper 0603
4601	4822 051 30008	OR Jumper 0603

4602	4822 051 30008	OR Jumper 0603
------	----------------	----------------

COILS & FILTERS

5100	3198 018 52280	Fixed Inductor 2.2uH 10%
5101	3139 110 53431	VU Meter FG-PH16CATS00 Black
5102	5322 242 73686	Ceram Resonator 12MHz
5103	4822 242 70938	X'tal 32,768kHz
5104	3198 018 52280	Fixed Inductor 2.2uH 10%
5105	4822 242 11033	X'tal Resonator 4,332MHz
5600	2422 549 44607	Fixed Ind 100MHz 600R
5603	4822 157 10586	Coil 2.2uH 10%
5604	2422 549 44607	Fixed Ind 100MHz 600R
5605	2422 549 44607	Fixed Ind 100MHz 600R
5606	2422 549 44607	Fixed Ind 100MHz 600R


DIODES

6104	9322 190 55676	LTL-816TDK3
6105	4822 130 80622	BAT54
6106	4822 130 31878	1N4003G
6108	4822 130 11397	BAS316
6113	4822 130 31878	1N4003G
6118	4822 130 80622	BAT54
6119	4822 130 31878	1N4003G
6300	9322 190 55676	LTL-816TDK3
6302	9322 190 55676	LTL-816TDK3
6305	9322 190 55676	LTL-816TDK3
6307	9322 190 55676	LTL-816TDK3
6500	9322 179 76676	LTL-816EELC
6501	9322 183 96676	LTL-816GE

TRANSISTORS & INTEGRATED CIRCUITS

7100	3139 110 53501	TMP88CU74F mark "5500S53501"
7101	5322 130 60159	BC847B
7102	9352 686 05118	SAA6581T
7103	9322 145 26668	M24C02-WMNE
7104	5322 130 60159	BC847B
7105	5322 130 60159	BC847B
7106	5322 130 60159	BC847B
7107	5322 130 60159	BC847B
7300	4822 209 15449	74HC4094D
7301	5322 130 60159	BC847B
7303	5322 130 60159	BC847B
7306	5322 130 60159	BC847B
7308	5322 130 60159	BC847B
7500	5322 130 60159	BC847B
7501	9322 185 95667	IR RECEIVER TSOP4836
7504	5322 130 60159	BC847B
7600	5322 130 60159	BC847B
7601	5322 130 60159	BC847B

Note: Only the parts mentioned in this list are normal service spare parts.

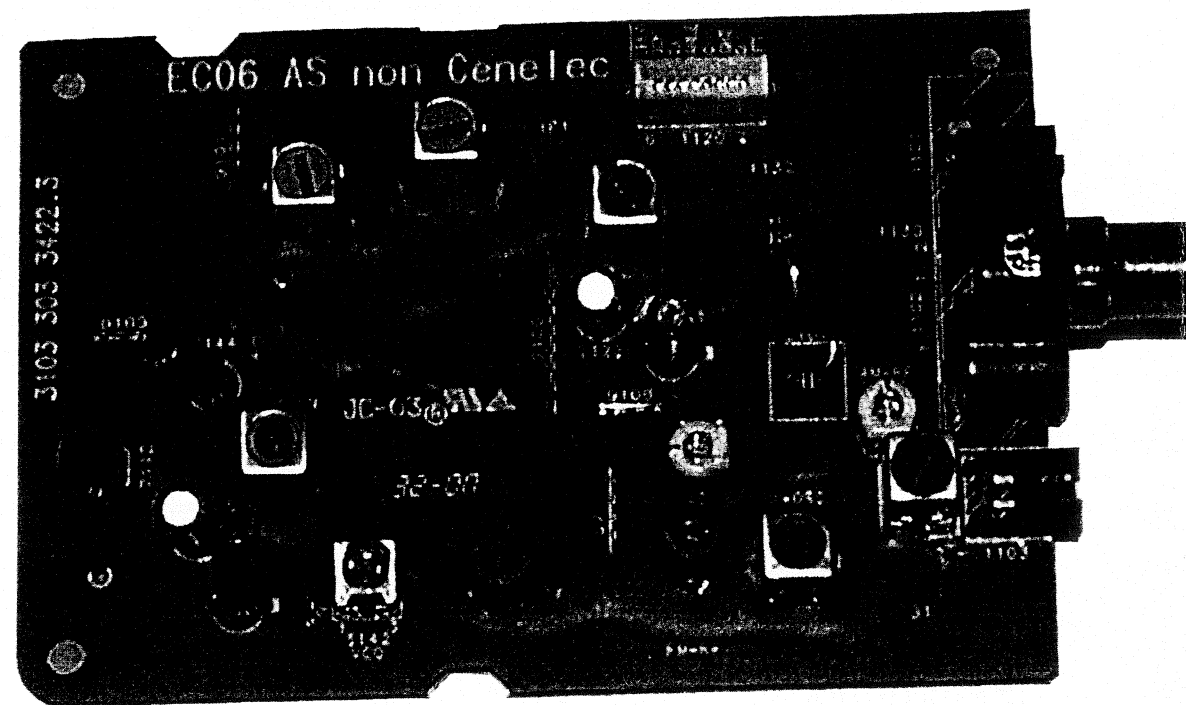


ECO6 Tuner Board


version: **SYSTEMS non-CENELEC**


TABLE OF CONTENTS

Blockdiagram	7A-1
Schematic Diagram	7A-2
Component Layout	7A-3
Adjustment table	7A-3
Electrical Partslist	7A-4

BLOCK DIAGRAM



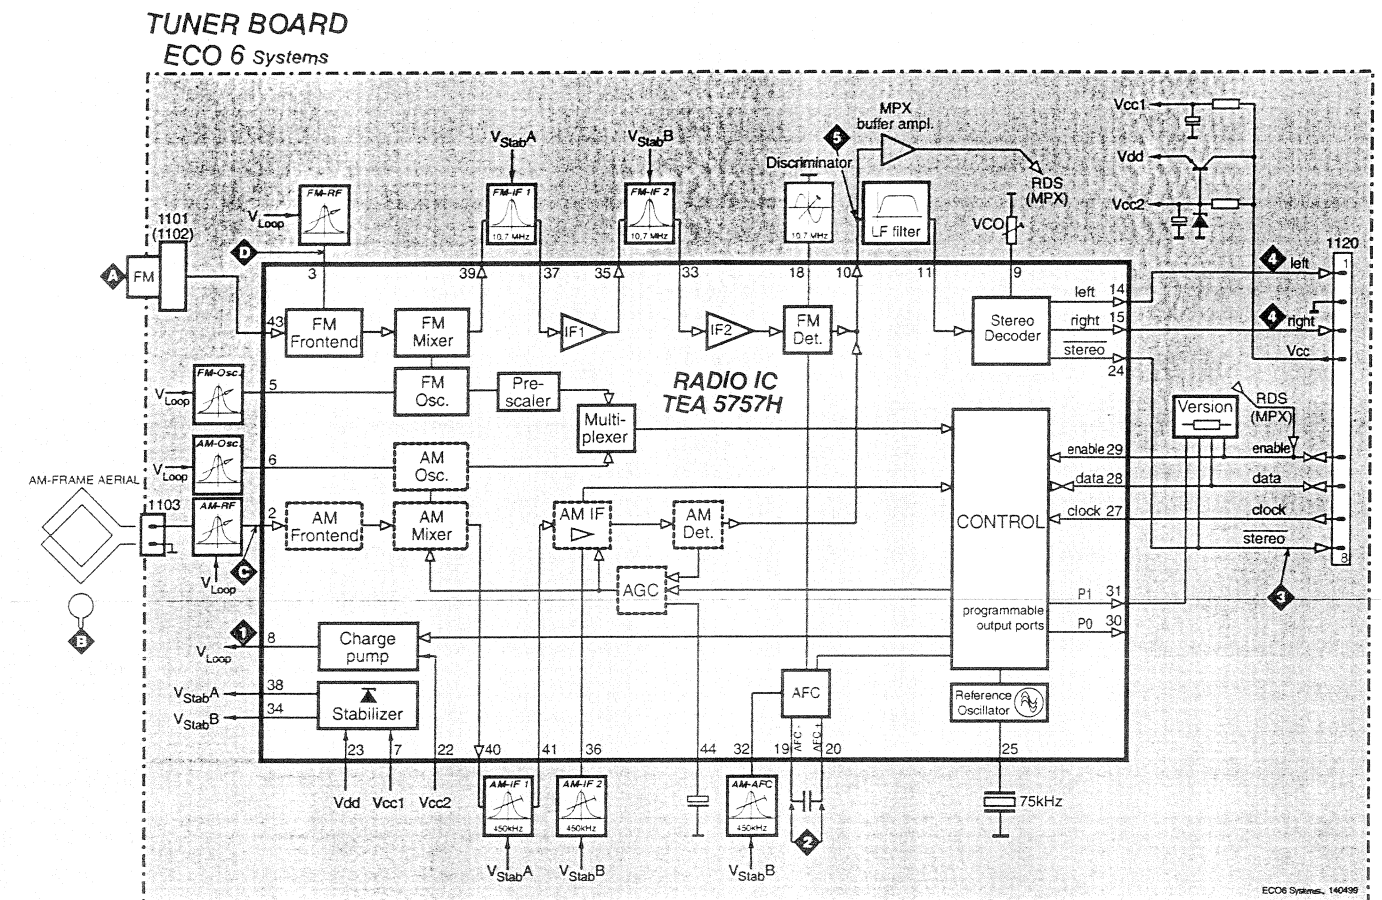


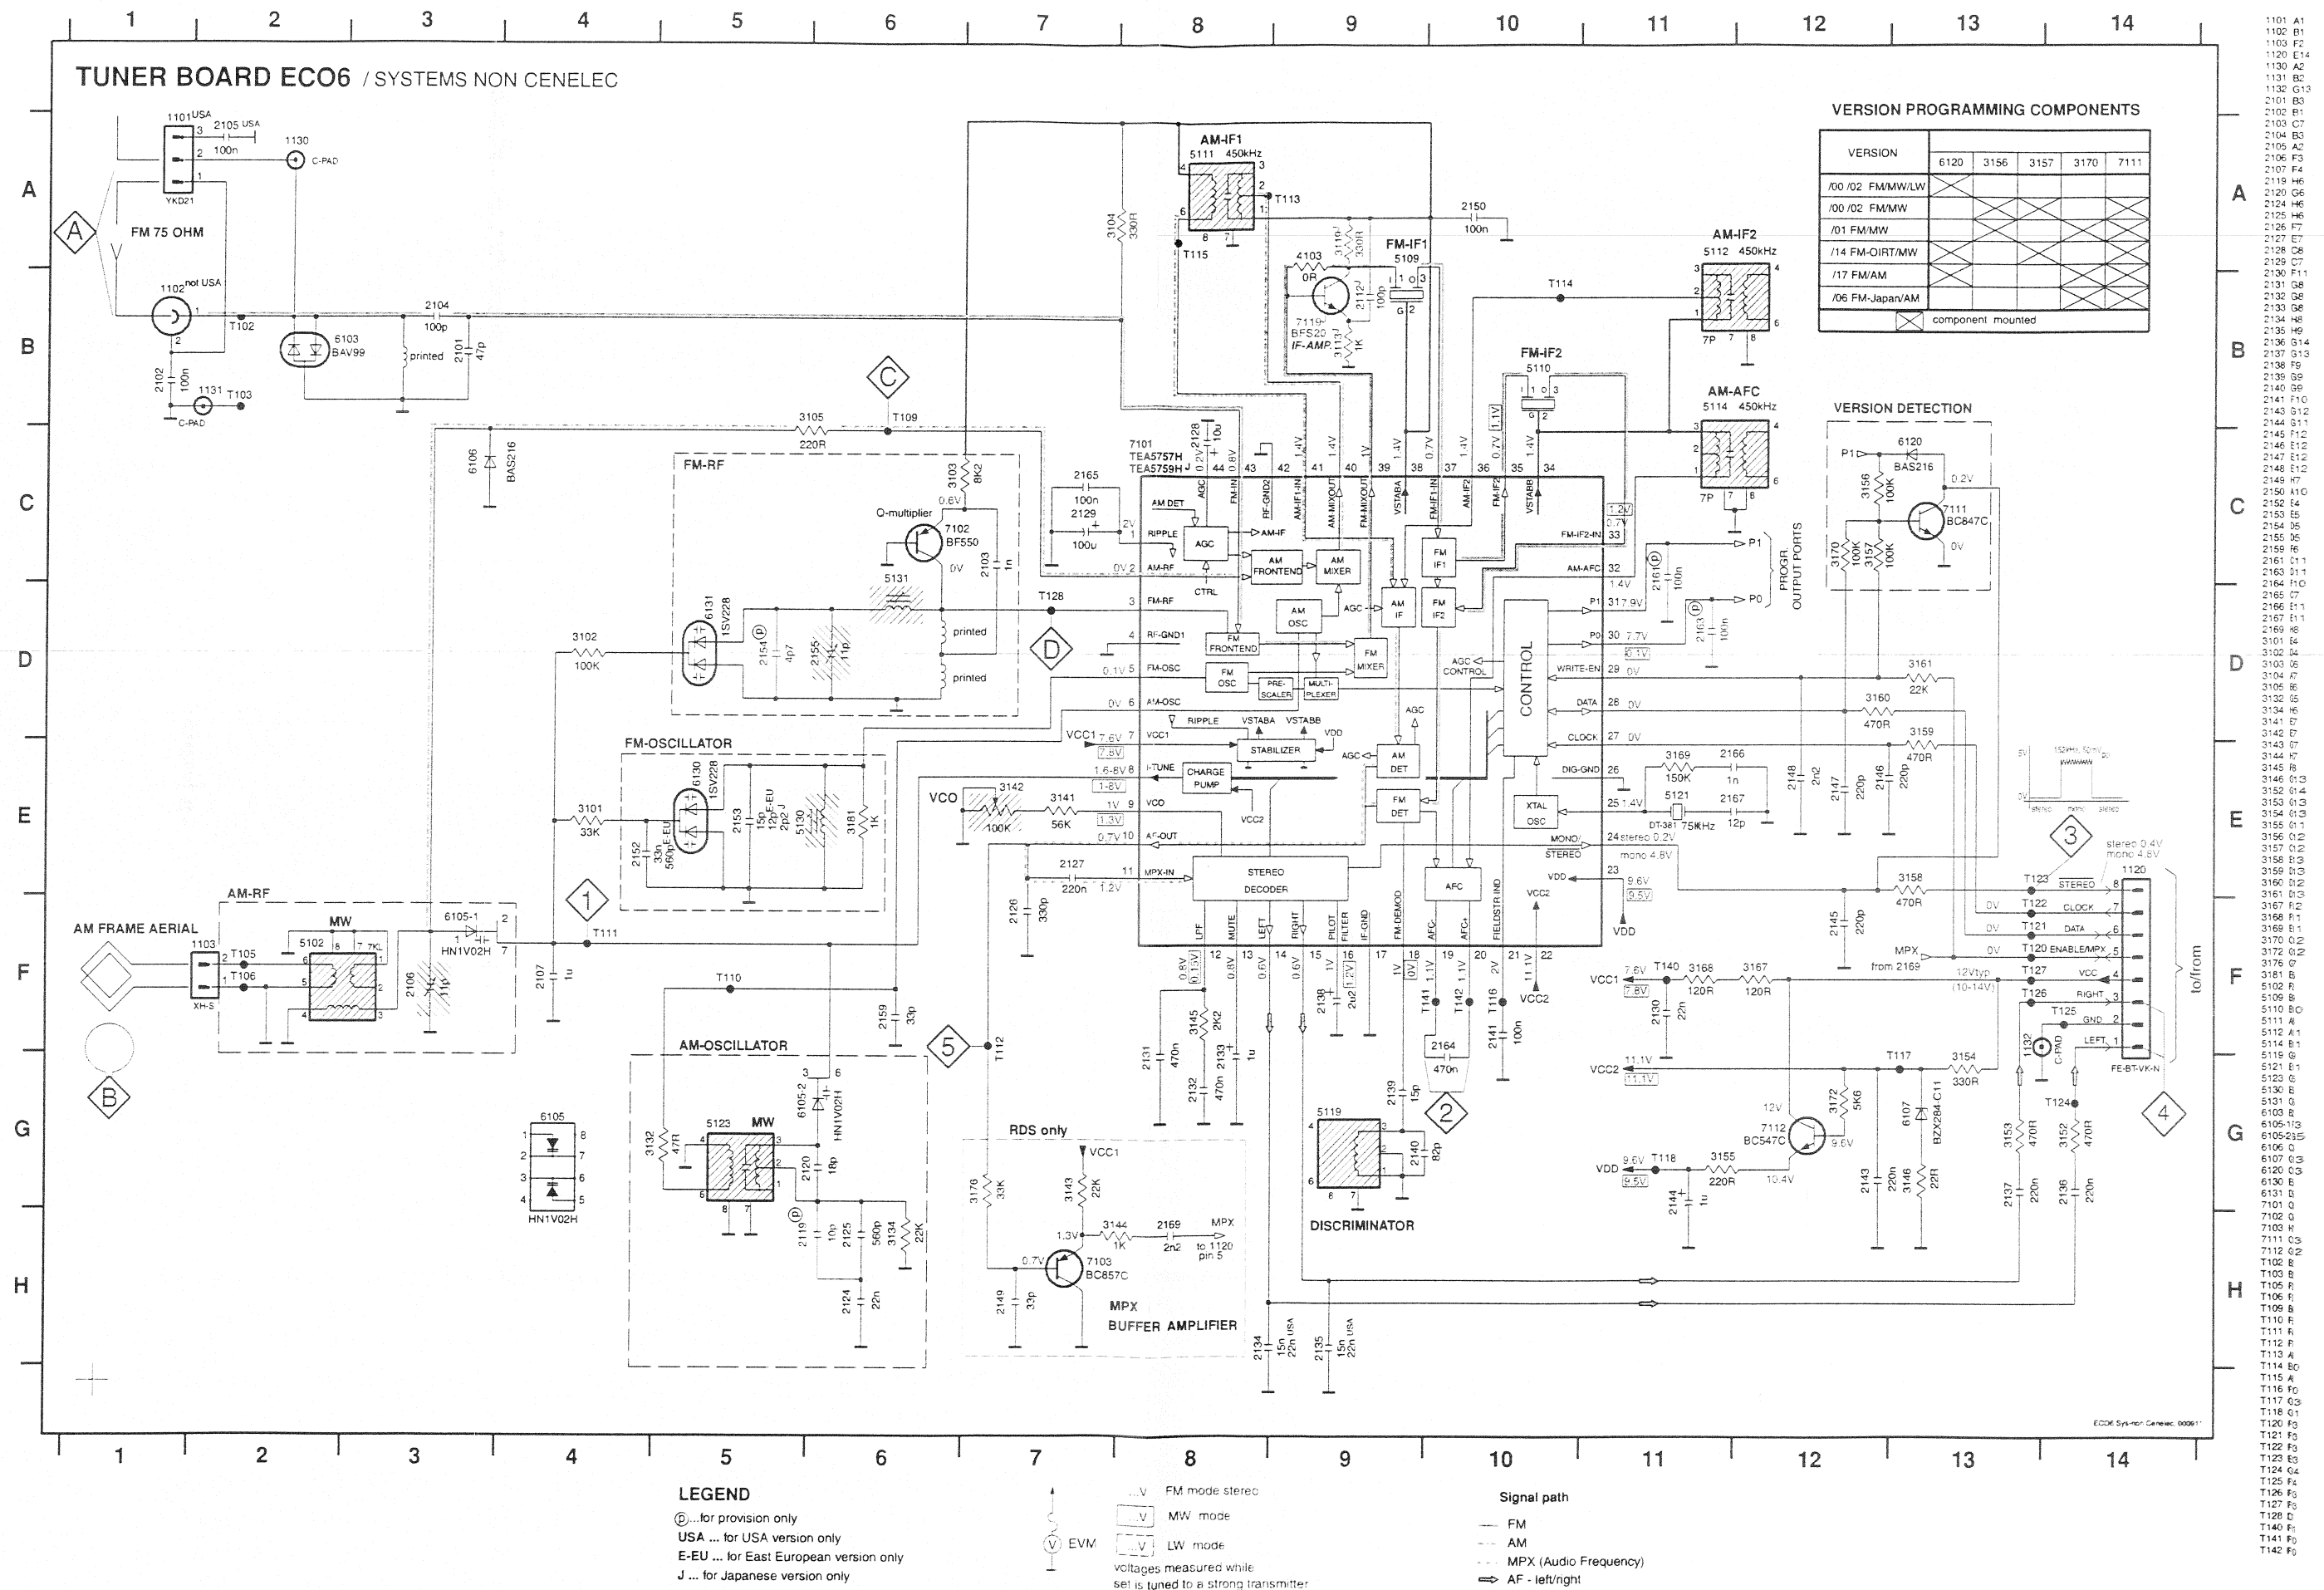

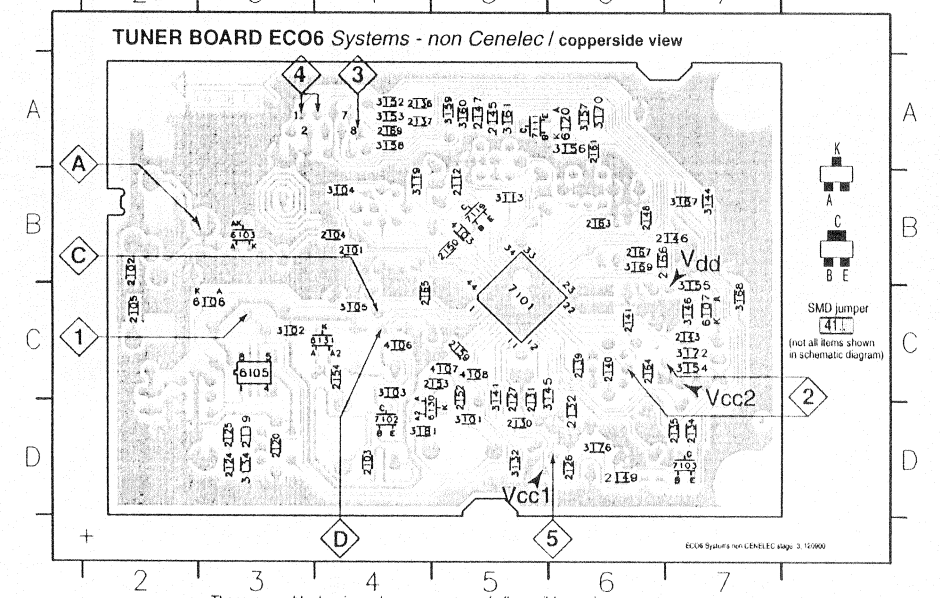

These assembly drawings show a summary of all possible versions.
For components used in a specific version see schematic diagram respectively partslist.

TUNER ADJUSTMENT TABLE (ECO6 FM/MW- and FM/MW/LW - versions with AM-frame aerial)

Waverange	Input frequency	Input	Tuned to	Adjust	Output	Scope/Voltmeter
VARICAP ALIGNMENT						
FM 87.5 - 108MHz (65.81 - 74, 87.5 - 108MHz)			108MHz	5130	1	8V $\pm$ 0.2V
			87.5MHz (65.81MHz)	check		4.3V $\pm$ 0.5V (1.2V $\pm$ 0.5V)
MW FM/AM-version, 10kHz grid 530 - 1700kHz			1700kHz	5123		8V $\pm$ 0.2V
			530kHz	check		1.1V $\pm$ 0.4V
FM/MW-version, 9kHz grid 531 - 1602kHz			1602kHz	5123		6.9V $\pm$ 0.2V
			531kHz	check		1.1V $\pm$ 0.4V
LW 153 - 279kHz			279kHz	5122		8V $\pm$ 0.2V
			153kHz	check		1.1V $\pm$ 0.4V
MW FM/MW/LW - version, 9kHz grid 531 - 1602kHz			1602kHz	5123	8V $\pm$ 0.2V	
			531kHz	check	1.1V $\pm$ 0.4V	
FM IF						
FM	10.7MHz, 45mV continuous wave	D		5119	2	0 $\pm$ 3 mV DC
FM RF						
FM 87.5 - 108MHz (65.81 - 74, 87.5 - 108MHz)	108MHz	A mod=1kHz $\Delta f = \pm 22.5$ kHz	108MHz	2155	4	MAX
	87.5MHz (65.81MHz)		87.5MHz (65.81MHz)	5131		
VCO						
FM	98MHz, 1mV continuous wave	A	98MHz	3142	3	152kHz $\pm$ 1kHz ¹⁾
AM IF						
MW	450kHz connect pin 6 of IC 7101 (AM Osc.) with 3.3k Ω to Vcc	C $\Delta f = \pm 10$ kHz $V_{RF} = 0.5$ mV (as low as possible)		5111	5	
				5112		
AM AF		C continuous wave $V_{RF} = 2$ mV				
MW				5114	2	0 $\pm$ 2 mV DC
AM RF ³⁾						
MW ⁴⁾ FM/MW/LW - and FM/MW version (9kHz grid) 531 - 1602kHz	1494kHz	B 	1494kHz	2106	5	
			558kHz	558kHz		
LW	198kHz		198kHz	5103		
MW FM/AM version, 10kHz grid 530 - 1700kHz	1500kHz		$\Delta f = \pm 30$ kHz V_{RF} as low as possible	1500kHz		
	560kHz	560kHz		5102		

Use Service Testprogram. By selecting the TUNER TEST test frequencies will be stored as preset frequencies automatically.

¹⁾ If sensitivity of frequency counter is too low adjust to max. channel separation (input signal stores full 90% - 90% adjust center tone drift down to 0%)


3) For AM RF adjustments the original frame antenna has to be used I

4) MW has to be aligned before LW.

Repeat

Electrical Partslist ECO6 SYSTEMS NON-CENELEC

MISCELLANEOUS					
1101	2422 015 19376	SOCKET 2P CLICKFIT		USA only	
1102	4822 267 10283	SOCKET COAX, IEC 75Ω		not USA	
1103	4822 265 31184	JST CONNECTOR 2 POLE			
1120	4822 265 11515	FFC SOCKET, 8P			
CAPACITORS					
2101 ©	4822 126 13692	47pF	1%	63V	
2102 ©	4822 126 13838	100nF	10%	50V	not USA
2103 ©	5322 122 31647	1nF	10%	63V	
2104 ©	5322 122 32531	100pF	5%	50V	
2105 ©	4822 126 13838	100nF	10%	50V	USA only
2106	2020 800 00191	3-11pF TRIMCAP, N450			
2107	4822 121 51319	1μF	20%	50V	
2120 ©	4822 126 13689	18pF	1%	63V	
2124 ©	5322 122 32654	22nF	10%	63V	
2125 ©	2020 552 96199	560pF	1%	50V	
2126 ©	5322 122 31863	330pF	5%	50V	
2127 ©	4822 126 14076	220nF	20%	25V	
2128	4822 124 40248	10μF	20%	63V	
2129	4822 124 41584	100μF	20%	10V	
2130 ©	5322 122 32654	22nF	10%	63V	
2131 ©	4822 126 13482	470nF	20%	16V	
2132 ©	4822 126 13482	470nF	20%	16V	
2133	4822 124 21913	1μF	20%	63V	
2134 ©	4822 126 13180	15nF	5%	63V	not USA
2134 ©	5322 122 32654	22nF	10%	63V	USA only
2135 ©	4822 126 13188	15nF	5%	63V	not USA
2135 ©	5322 122 32654	22nF	10%	63V	USA only
2136 ©	4822 126 14076	220nF	20%	25V	
2137 ©	4822 126 14076	220nF	20%	25V	
2138	4822 124 22652	2,2μF	20%	50V	
2139 ©	4822 126 14236	15pF	5%	50V	
2140 ©	4822 126 13695	82pF	1%	63V	
2141 ©	4822 126 13838	100nF	10%	50V	
2143 ©	4822 126 14076	220nF	20%	25V	
2144	4822 124 21913	1μF	20%	63V	
2145 ©	4822 122 33575	220pF	5%	50V	
2146 ©	4822 122 33575	220pF	5%	50V	
2147 ©	4822 122 33575	220pF	5%	50V	
2148 ©	4822 122 33127	2,2nF	10%	63V	
2149 ©	5322 122 32659	33pF	5%	50V	RDS only
2150 ©	4822 126 13838	100nF	10%	50V	
2152 ©	4822 126 12105	33nF	5%	63V	not for East Europe only
2152 ©	5322 116 80853	560pF	5%	63V	for East Europe only
2153 ©	4822 126 13486	15pF	2%	63V	not for East Europe only
2153 ©	4822 122 32659	12pF	2%	50V	for East Europe only
2155	2020 800 00191	3-11pF TRIMCAP, N450			
2159 ©	5322 122 32659	33pF	5%	50V	
2164 ©	4822 126 13482	470nF	20%	16V	
2165 ©	4822 126 13838	100nF	10%	50V	
2166 ©	5322 122 31647	1nF	10%	63V	
2167 ©	4822 122 33926	12pF	5%	50V	
2169 ©	4822 122 33127	2,2nF	10%	63V	RDS only
RESISTORS					
3101 ©	4822 051 20333	33kΩ	5%	0,1W	
3102 ©	4822 117 10837	100kΩ	1%	0,1W	
3103 ©	4822 051 20822	8,2kΩ	5%	0,1W	
3104 ©	4822 117 13577	330kΩ	1%	0,1W	
3105 ©	4822 117 11503	220Ω	5%	0,1W	
3132 ©	4822 051 20479	47Ω	5%	0,1W	
3134 ©	4822 051 20223	22kΩ	5%	0,1W	
3141 ©	4822 117 11148	56kΩ	1%	0,1W	
3142	4822 100 12159	TRIMPOT, 100kΩ			
RESISTORS					
3143 ©	4822 051 20223	22kΩ	5%	0,1W	
3144 ©	4822 051 10102	1kΩ	2%	0,25W	RDS only
3145 ©	4822 117 11449	2,2kΩ	1%	0,1W	RDS only
3146 ©	4822 051 20229	22Ω	5%	0,1W	
3157 ©	4822 051 20471	470Ω	5%	0,1W	
RESISTORS					
3153 ©	4822 051 20471	470Ω	5%	0,1W	
3154 ©	4822 117 13577	330Ω	1%	0,1W	
3155 ©	4822 117 11503	220Ω	5%	0,1W	
3156 ©	4822 117 10837	100kΩ	1%	0,1W	
3157 ©	4822 117 10837	100kΩ	1%	0,1W	
3158 ©	4822 051 20471	470Ω	5%	0,1W	
3159 ©	4822 051 20471	470Ω	5%	0,1W	
3160 ©	4822 051 20471	470Ω	5%	0,1W	
3161 ©	4822 051 20223	22kΩ	5%	0,1W	
3167 ©	4822 051 20121	120Ω	5%	0,1W	
3168 ©	4822 051 20121	120Ω	5%	0,1W	
3169 ©	4822 051 20154	150kΩ	5%	0,1W	
3170 ©	4822 117 10837	100kΩ	1%	0,1W	
3172 ©	4822 051 20562	5,6kΩ	5%	0,1W	
3176 ©	4822 051 20333	33kΩ	5%	0,1W	RDS only
3181 ©	4822 051 10102	1kΩ	2%	0,25W	
4103 ©	4822 051 20008	CHIP JUMPER 0805			
4106 ©	4822 051 20008	CHIP JUMPER 0805			
4107 ©	4822 051 20008	CHIP JUMPER 0805			
4108 ©	4822 051 20008	CHIP JUMPER 0805			
COILS					
5102	4822 157 71634	RF-COIL MW			
5109	4822 242 70665	FM-IF FILTER 10,7MHz			
5110	4822 242 70665	FM-IF FILTER 10,7MHz			
5111	2422 549 44023	AM-IF FILTER 450kHz			
5112	4822 157 70302	AM-IF FILTER 450kHz			
5114	4822 157 70302	AM-IF FILTER 450kHz			
5119	4822 157 11443	DISCRIMINATOR COIL			
5121	4822 242 10261	QUARTZ 75kHz			
5123	2422 549 44108	RF-COIL, AM-OSCILLATOR			
5130	4822 157 11843	RF COIL 1,5 TURNS			
5131	4822 157 11843	RF COIL 1,5 TURNS			
DIODES					
6103 ©	5322 130 34337	BAV99			
6105 ©	4822 130 83075	HN1V02H			
6106 ©	4822 130 83757	BAS216			
6107 ©	9340 386 90115	BZX284-C11			
6120 ©	4822 130 83757	BAS216			
6130 ©	4822 130 82833	1SV228			
6131 ©	4822 130 82833	1SV228			
RESISTORS					
7102	4822 130 42131	BF550			
7103 ©	5322 130 42756	BC857C			
7111 ©	5322 130 42755	BC847C			
7112	4822 130 44503	BC547C			
INTEGRATED CIRCUITS					
7101 ©	9351 740 80557	TEA5757HV1, RADIO IC			

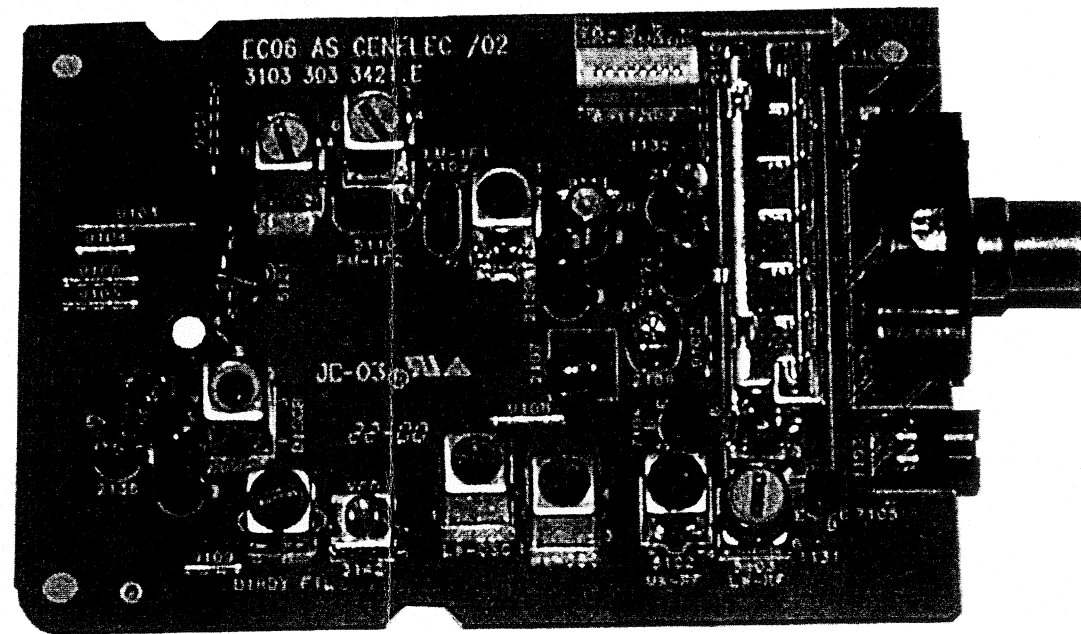


ECO6 Tuner Board

version: **SYSTEMS CENELEC**

TABLE OF CONTENTS

Blockdiagram	7B-1
Schematic Diagram	7B-2
Component Layout	7B-3
Adjustment table	7B-3
Electrical Partslist	7B-4

BLOCK DIAGRAM

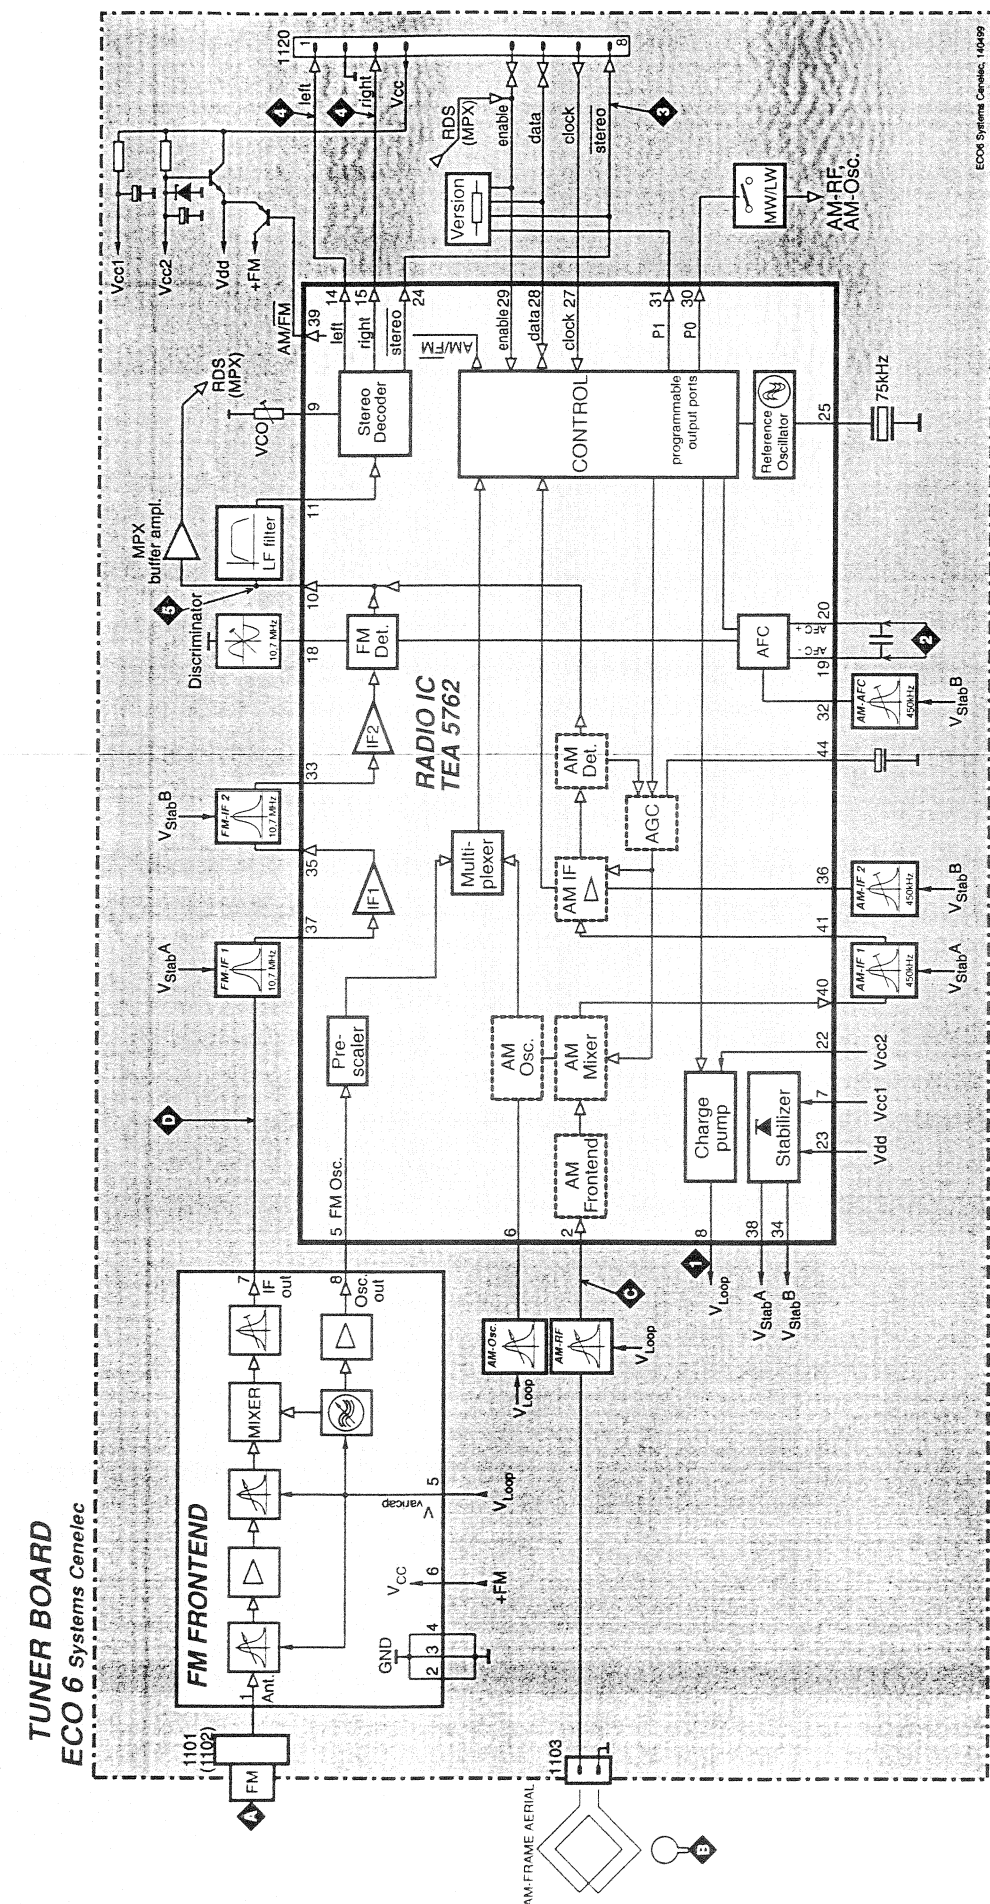



TUNER BOARD ECO6 / SYSTEMS-CENELEC

VERSION PROGRAMMING COMPONENTS

VERSION	6120	3156	3157	3170	7111
/00 /02 FM/MW/LW					
/00 /02 FM/MW					
/01 FM/MW					
/14 FM-OIRT/MW					
/17 FM/AM					

component mounted

VERSION DETECTION

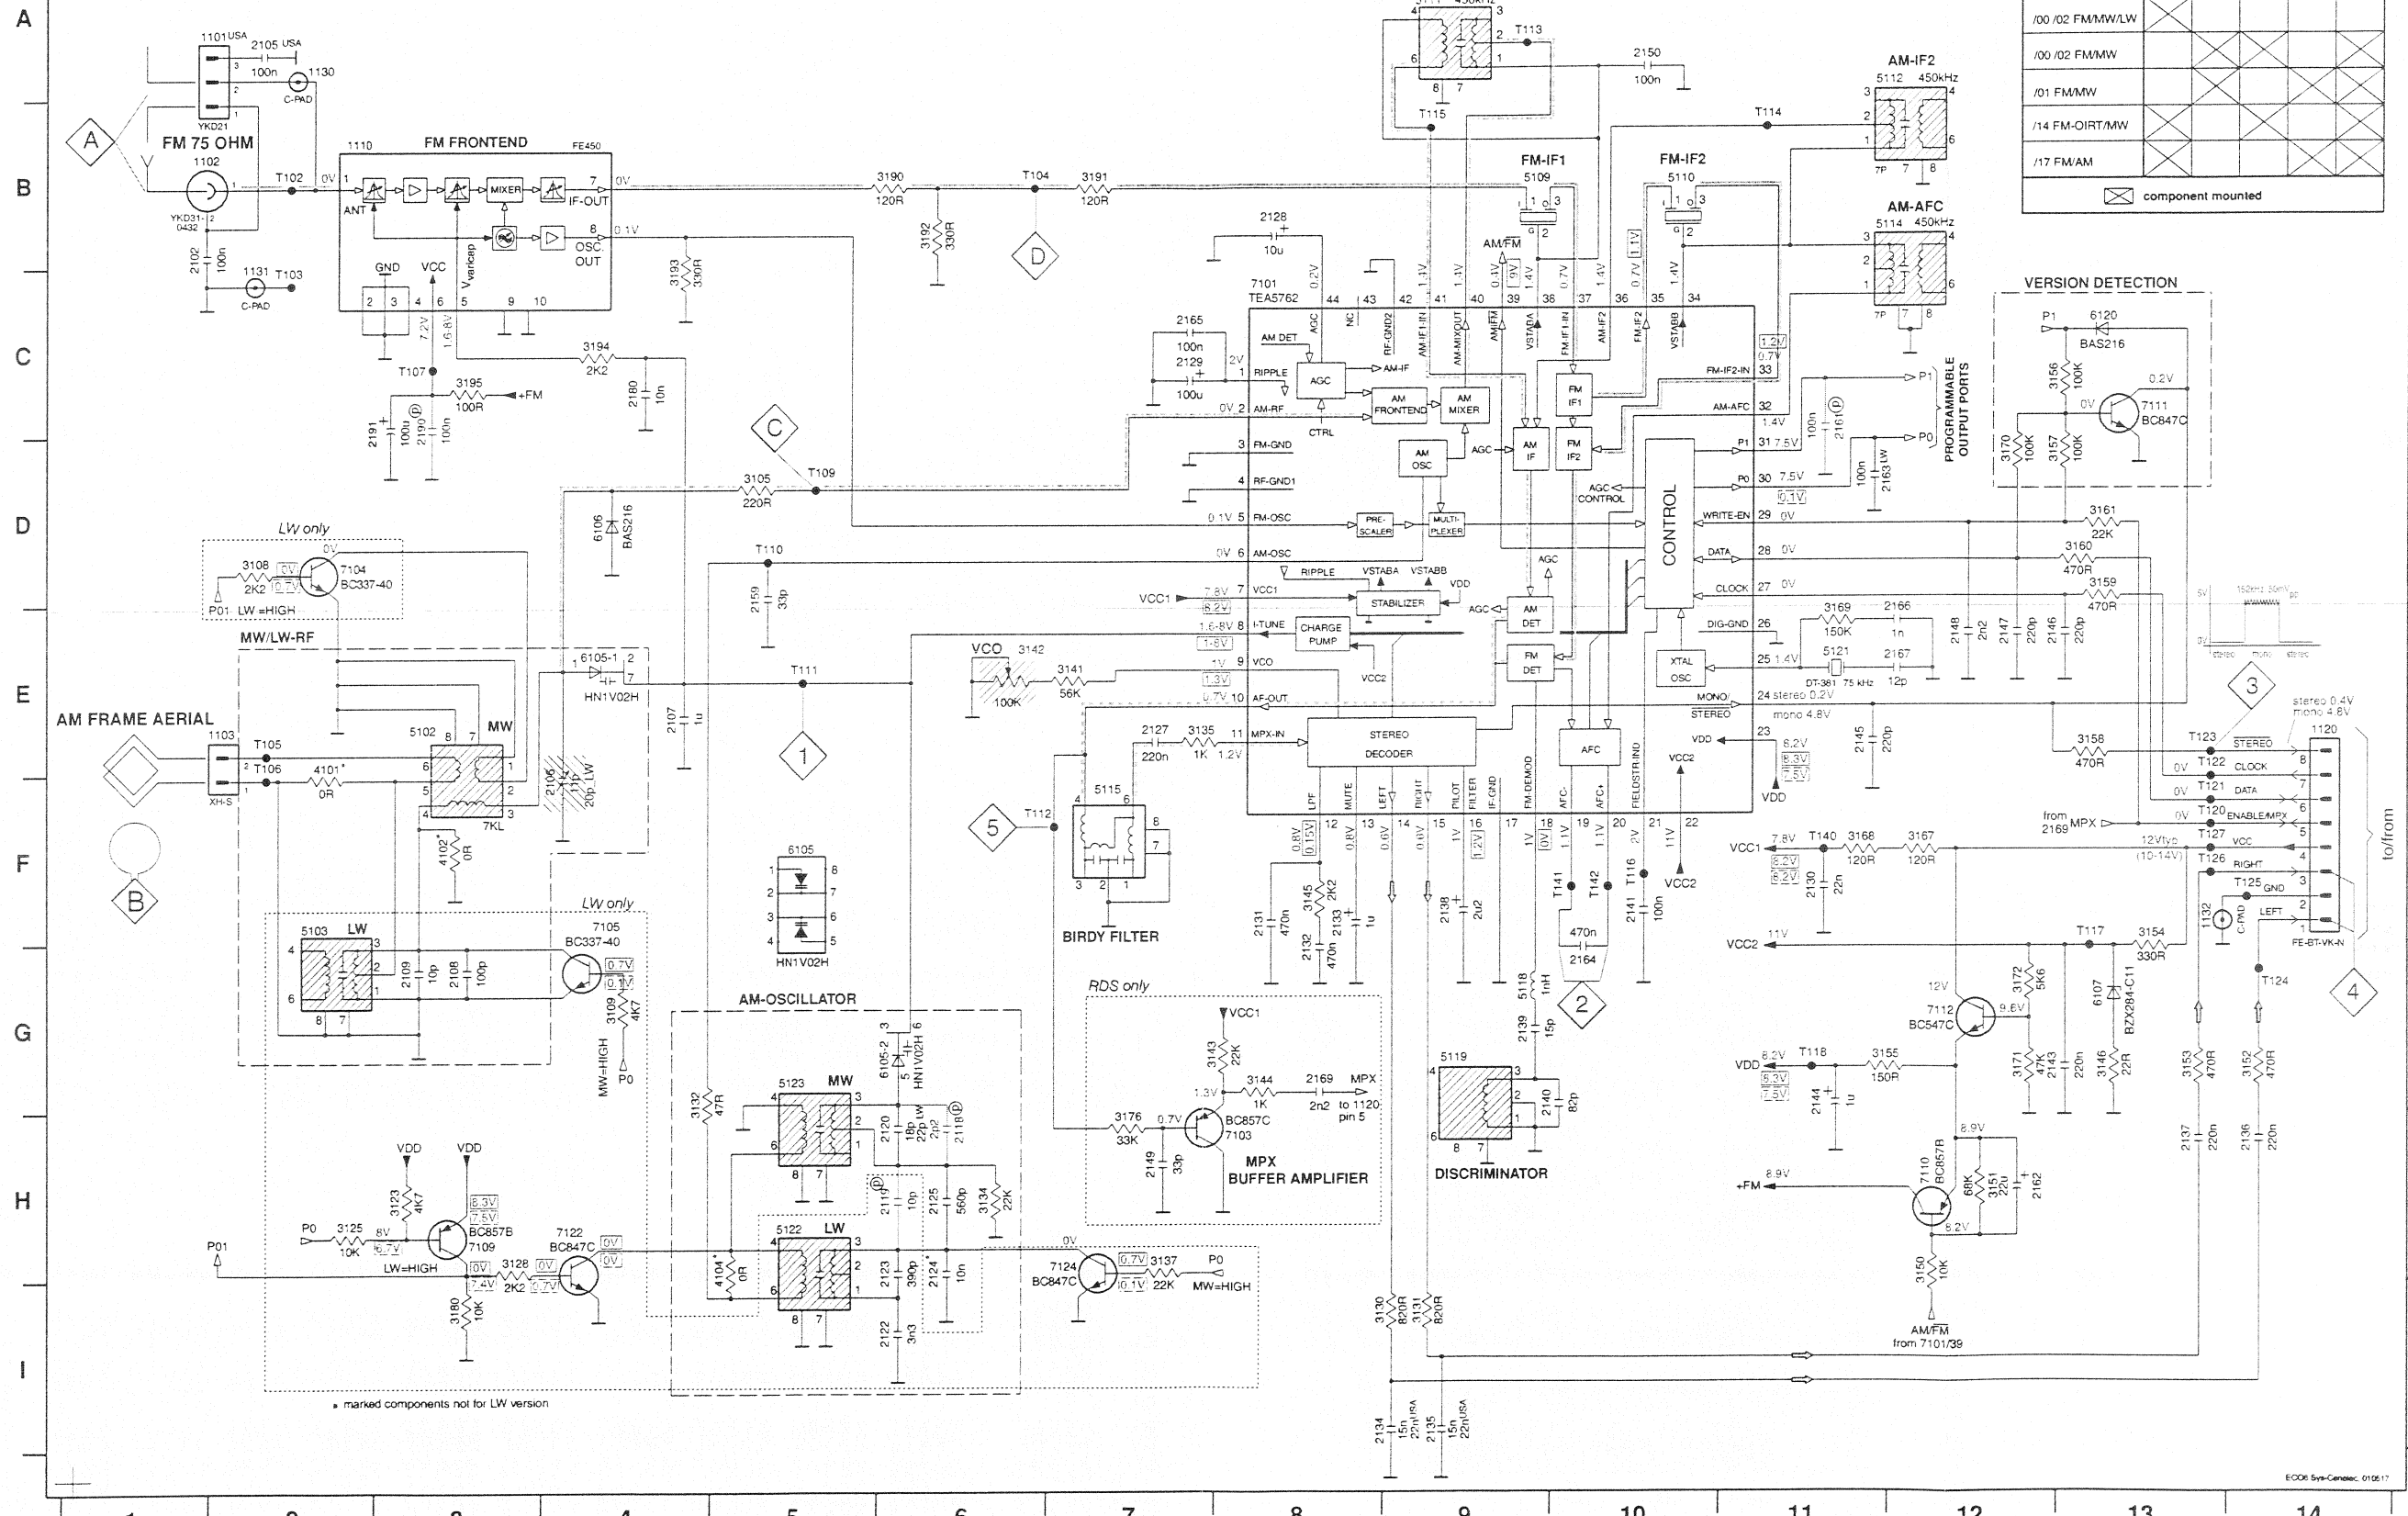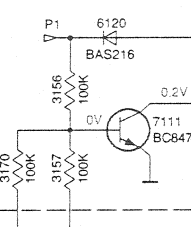

LEGEND

* ... only assembled in FM/AM-version
 (D) ... for provision only
 USA ... for USA version only
 LW ... for LW version only



SMD jumper
 41xx
 0R

... V FM mode stereo
 ... V MW mode
 ... V LW mode
 voltages measured while
 set is tuned to a strong transmitter





Signal path

FM
 AM
 MPX (Audio Frequency)
 AF - left/right

1101 A2 5121 E11
 1102 B1 5122 H5
 1103 E2 5123 G5
 1110 B2 6105-1 E4
 1120 E14 6105-2 G6
 1130 A2 6106 D4
 1131 C2 6107 G13
 1132 F13 6120 C13
 2102 B1 7101 C8
 2105 A2 7103 H8
 2106 E3 7104 D2
 2107 E4 7105 F4
 2108 G3 7109 H3
 2109 G3 7110 H12
 2118 H6 7111 C13
 2119 H6 7112 G12
 2120 H6 7122 H4
 2122 I6 7124 H7
 2123 H6 7125 B2
 2124 H6 7126 B2
 2125 H6 7127 B2
 2127 E7 7105 E2
 2128 B8 7106 E2
 2129 C7 7107 C3
 2130 F11 7109 D5
 2131 F8 7110 D5
 2132 F8 7111 E5
 2133 F8 7112 F7
 2134 I8 7113 A9
 2135 I9 7114 B11
 2136 H14 7116 F10
 2137 H13 7117 F13
 2138 F9 7118 G11
 2139 G9 7120 F13
 2140 G9 7121 F13
 2141 F10 7122 E13
 2143 G12 7123 E13
 2144 G11 7124 G14
 2145 E11 7125 F14
 2146 E11 7126 F13
 2147 E12 7127 F13
 2148 E12 7140 F11
 2149 H7 7141 F10
 2150 A10 7142 F10
 2159 D5
 2161 C11
 2162 H12
 2163 D11
 2164 G10
 2165 C7
 2166 E11
 2167 E11
 2169 B8
 2180 D4
 2190 D3
 2191 D3
 3105 D5
 3108 D2
 3109 S4
 3123 H3
 3125 H2
 3128 H3
 3130 9
 3131 9
 3132 S4
 3134 H6
 3135 E7
 3137 H7
 3141 E7
 3142 E6
 3143 E7
 3144 E8
 3145 E8
 3146 G13
 3150 H1
 3151 H1
 3152 G1
 3153 G1
 3154 H1
 3155 G1
 3156 H1
 3157 H1
 3158 H1
 3159 H1
 3160 H1
 3161 H1
 3162 H1
 3163 H1
 3164 H1
 3165 H1
 3166 H1
 3167 H1
 3168 H1
 3169 H1
 3170 H1
 3171 H1
 3172 H1
 3173 H1
 3174 H1
 3175 H1
 3176 H1
 3177 H1
 3178 H1
 3179 H1
 3180 H1
 3181 H1
 3182 H1
 3183 H1
 3184 H1
 3185 H1
 3186 H1
 3187 H1
 3188 H1
 3189 H1
 3190 H1
 3191 H1
 3192 H1
 3193 H1
 3194 H1
 3195 H1
 3196 H1
 3197 H1
 3198 H1
 3199 H1
 3200 H1
 5101 H1
 5102 H1
 5103 H1
 5104 H1
 5105 H1
 5106 H1
 5107 H1
 5108 H1
 5109 H1
 5110 H1
 5111 H1
 5112 H1
 5113 H1
 5114 H1
 5115 H1
 5116 H1
 5117 H1
 5118 H1
 5119 H1

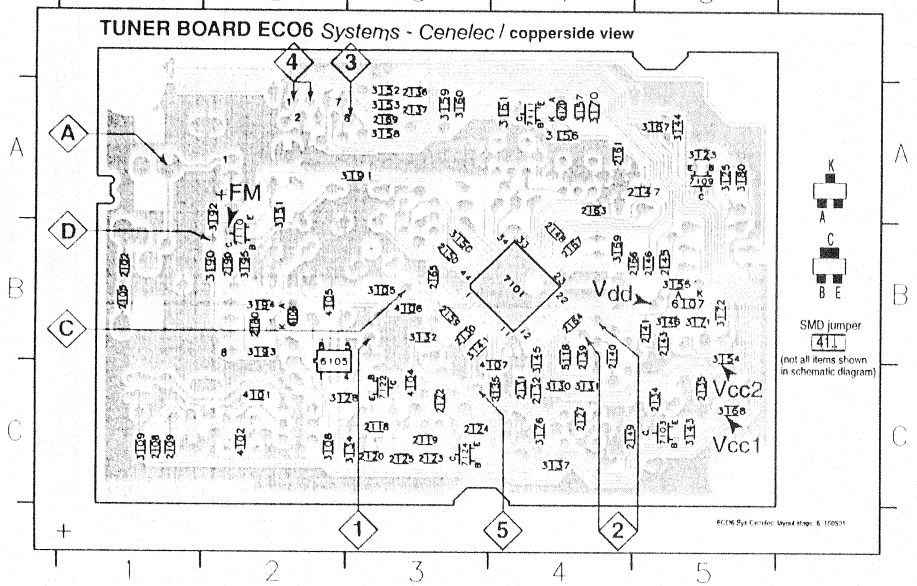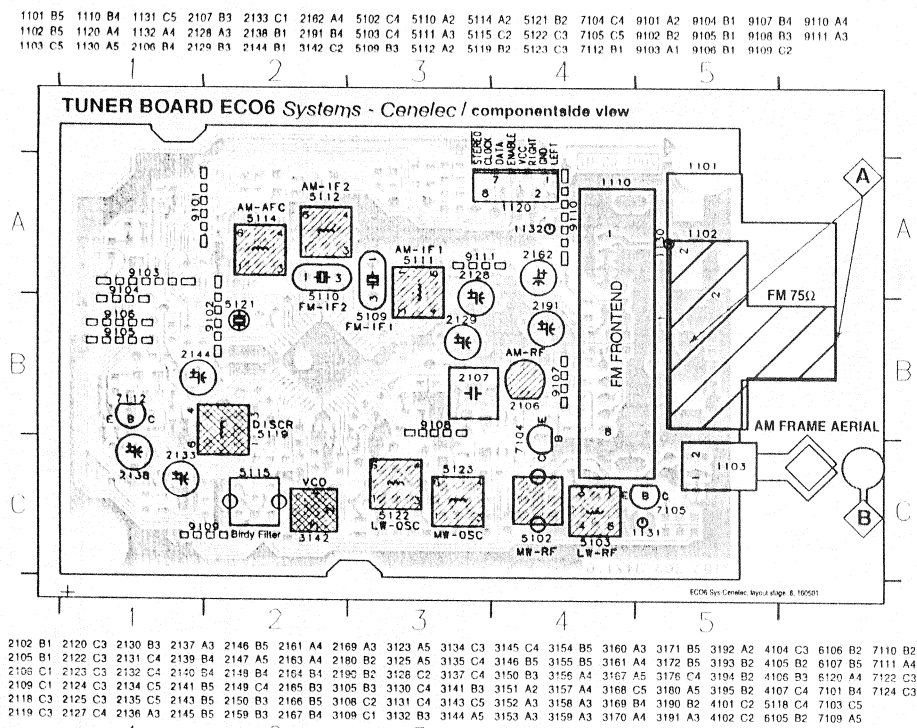

TUNER ADJUSTMENT TABLE (ECO6 Cenelec FM/MW - and FM/MW/LW - versions with AM-frame aerial)

Waverange	Input frequency	Input	Tuned to	Adjust	Output	Scope/Voltmeter
VARICAP ALIGNMENT						
FM 87.5 - 108MHz (50kHz grid)			108MHz	check	1	8V ±1.2V
			87.5MHz	check		1.6V ±0.5V
MW 531 - 1602kHz (9kHz grid)			1602kHz	5123		8V ±0.2V 3-band 6.9V ±0.2V 2-band
			531kHz	check		1.1V ±0.4V
LW 153 - 279kHz (3kHz grid)			279kHz	5122	8V ±0.2V	
			153kHz	check	1.1V ±0.4V	
FM - IF						
FM	10.7MHz, 45mV continuous wave	D		5119	2	0mV ±3mV
FM - VCO						
FM	98MHz, 1mV continuous wave	A	98MHz	3142	3	152kHz ±1kHz ¹⁾
FM RF (channel separation) Note: The FM-frontend unit has already been adjusted by the factory and needs therefore no further adjustments for service purposes.						
FM	98MHz, 1mV 90% Left + 9% pilot mod=1kHz	A	98MHz	IF coil inside FM frontend 1110	4	right channel min.
AM IF						
MW	450kHz connect pin 6 of IC 7101 (AM Osc.) with 3.3kΩ to Vcc	C $\Delta f = \pm 10\text{kHz}$ $V_{RF} = 0.5\text{mV}$ (as low as possible)		5111	5	
				5112		
AM AFC MW		C continuous wave $V_{RF} = 2\text{mV}$		5114	2	0mV ±2mV
AM RF ³⁾						
MW	1494kHz		1494kHz	2106	5	
	558kHz		558kHz	5102		
LW	198kHz	$\Delta f = 130\text{kHz}$ V_{RF} as low as possible	198kHz	5103		

Use Service Testprogram. By selecting the TUNER TEST test frequencies will be stored as preset frequencies automatically.

¹⁾ If sensitivity of frequency counter is too low adjust to max. channel separation (input signal: stereo left 90% + 9%, adjust output on right channel to minimum)

²⁾ RC network serves for damping the IF-filter while adjusting the other one.

³⁾ For AM RF adjustments the original frame antenna has to be used!
MW has to be aligned before LW.

Repeat

Electrical Partslist ECO6 SYSTEMS-CENELEC

MISCELLANEOUS

1101	2422 015 19376	SOCKET CLICKFIT 2P	USA only
1102	4822 267 10283	SOCKET COAX, IEC 75Ω	not USA
1103	4822 265 31184	JST CONNECTOR, 2 POLE	
1110	2422 542 90071	FM FRONTEND	
1120	4822 265 11515	FFC SOCKET, 8P	

CAPACITORS

2102	4822 126 13838	100nF 10% 50V	not USA
2105	4822 126 13838	100nF 10% 50V	USA only
2106	2020 800 00204	TRIMCAP. 4.2 - 20pF, N750	LW only
2106	2020 800 00191	TRIMCAP. 3 - 11pF, N450	FM/AM only
2107	4822 121 51319	1μF 20% 50V	
2108	5322 122 32531	100pF 5% 50V	LW only
2109	5322 122 32448	10pF 5% 50V	LW only
2120	4822 126 13689	18pF 1% 63V	FM/AM only
2120	5322 122 32658	22pF 5% 50V	LW only
2122	4822 122 33891	3.3nF 10% 63V	LW only
2123	2020 552 93494	390pF 1% 50V	LW only
2124	4822 122 33177	10nF 20% 50V	FM/AM only
2125	2020 552 96199	560pF 1% 50V	
2127	4822 126 14076	220nF 20% 25V	
2128	4822 124 40248	10pF 20% 63V	
2129	4822 124 41584	100μF 20% 10V	
2130	5322 122 32654	22nF 10% 63V	
2131	4822 126 13482	470nF 20% 16V	
2132	4822 126 13482	470nF 20% 16V	
2133	4822 124 21913	1μF 20% 63V	
2134	3198 017 31530	15nF 10% 50V	not USA
2134	5322 122 32654	22nF 10% 63V	USA only
2135	3198 017 31530	15nF 10% 50V	not USA
2135	3198 017 32230	22nF 10% 25V	USA only
2136	4822 126 14076	220nF 20% 25V	
2137	4822 126 14076	220nF 20% 25V	
2138	4822 124 22652	2.2μF 20% 50V	
2139	4822 126 14236	15pF 5% 50V	
2140	4822 126 13695	82pF 1% 63V	
2141	4822 126 13838	100nF 10% 50V	
2143	4822 126 14076	220nF 20% 25V	
2144	4822 124 21913	1μF 20% 63V	
2145	4822 122 33575	220pF 5% 50V	
2146	4822 122 33575	220pF 5% 50V	
2147	4822 122 33575	220pF 5% 50V	
2148	4822 122 33127	2.2nF 10% 63V	
2149	5322 122 32659	33pF 5% 50V	RDS only
2150	4822 126 13838	100nF 10% 50V	
2159	5322 122 31151	22pF 20% 50V	
2163	4822 126 13838	100nF 10% 50V	LW only
2164	4822 126 13482	470nF 20% 16V	
2165	4822 126 13838	100nF 10% 50V	
2166	5322 122 31647	1nF 10% 63V	
2167	4822 122 33926	12pF 5% 50V	
2169	4822 122 33127	2.2nF 10% 63V	RDS only
2180	3198 017 31030	10nF 10% 50V	
2190	4822 126 13838	100nF 10% 50V	
2191	4822 124 40178	100μF 20% 10V	

RESISTORS

3105	4822 117 11503	220Ω 5% 0.1W	
3108	4822 117 11449	2.2kΩ 1% 0.1W	LW only
3109	4822 051 20472	4.7kΩ 5% 0.1W	LW only
3123	4822 051 20472	4.7kΩ 5% 0.1W	LW only
3125	4822 117 10833	10kΩ 1% 0.1W	LW only

RESISTORS

3128	4822 117 11449	2.2kΩ 1% 0.1W	LW only
3130	4822 051 20223	820Ω 5% 0.06W	
3131	3198 021 38210	820Ω 5% 0.06W	
3132	4822 051 20479	47Ω 5% 0.1W	
3134	4822 051 20223	22kΩ 5% 0.1W	
3135	3198 021 31020	1kΩ 5% 0.06W	
3137	4822 051 20223	22kΩ 5% 0.1W	LW only
3141	4822 117 11148	56kΩ 1% 0.1W	
3142	4822 100 12159	TRIMPOT. 100kΩ	
3143	4822 051 20223	22kΩ 5% 0.1W	RDS only
3144	4822 051 10102	1kΩ 2% 0.25W	RDS only
3145	4822 117 11449	2.2kΩ 1% 0.1W	
3146	4822 051 20229	22Ω 5% 0.1W	
3150	4822 117 10833	10kΩ 1% 0.1W	
3151	4822 051 20683	68kΩ 5% 0.1W	
3152	4822 051 20471	470Ω 5% 0.1W	
3153	4822 051 20471	470Ω 5% 0.1W	
3154	4822 117 13577	330Ω 1% 0.1W	
3155	4822 117 10353	150Ω 5% 0.1W	
3156	4822 117 10837	100kΩ 1% 0.1W	
3157	4822 117 10837	100kΩ 1% 0.1W	
3158	4822 051 20471	470Ω 5% 0.1W	
3159	4822 051 20471	470Ω 5% 0.1W	
3160	4822 051 20471	470Ω 5% 0.1W	
3161	4822 051 20223	22kΩ 5% 0.1W	
3167	4822 051 20121	120Ω 5% 0.1W	
3168	4822 051 20121	120Ω 5% 0.1W	
3169	4822 051 20154	150kΩ 5% 0.1W	
3170	4822 117 10837	100kΩ 1% 0.1W	
3171	4822 117 10834	47kΩ 1% 0.1W	
3172	4822 051 20562	5.6kΩ 5% 0.1W	
3176	4822 051 20333	33kΩ 5% 0.1W	RDS only
3180	4822 117 10833	10kΩ 1% 0.1W	LW only
3190	4822 051 20121	120Ω 5% 0.1W	
3191	4822 051 20121	120Ω 5% 0.1W	
3192	4822 117 13577	330Ω 1% 0.1W	
3193	4822 117 13577	330Ω 1% 0.1W	
3194	4822 117 11449	2.2kΩ 1% 0.1W	
3195	4822 051 20101	100Ω 5% 0.1W	
4101	4822 051 20008	CHIP JUMPER 0805	FM/AM only
4102	4822 051 20008	CHIP JUMPER 0805	FM/AM only
4104	4822 051 20008	CHIP JUMPER 0805	FM/AM only
4105	4822 051 20008	CHIP JUMPER 0805	FM/AM only
4106	4822 051 20008	CHIP JUMPER 0805	
4107	4822 051 20008	CHIP JUMPER 0805	
COILS			
5102	4822 157 71634	RF-COIL MW	
5103	2422 549 44107	RF-COIL LW	LW only
5109	4822 157 71639	FM-IF FILTER 10.7MHz	
5110	4822 242 70665	FM-IF FILTER 10.7MHz	
5111	2422 549 44023	AM-IF FILTER 450kHz	
5112	4822 157 70302	AM-IF FILTER 450kHz	
5114	4822 157 70302	AM-IF FILTER 450kHz	
5115	4822 157 71636	ANTI BIRDY FILTER	
5118	2422 535 95881	100nH	
5119	4822 157 11443	DISCRIMINATOR COIL	
5121	4822 242 10261	QUARTZ 75kHz	
5122	2422 549 44108	RF-COIL, LW-OSCILLATOR	LW only
5123	2422 549 44108	RF-COIL, MW-OSCILLATOR	

DIODES

6105	4822 130 83075	HN1V02H	
6106	4822 130 83757	BAS216	
6107	9340 386 90115	BZX284-C11	
6120	4822 130 83757	BAS216	

TRANSISTORS

7103	5322 130 42756	BC857C	RDS only
7104	9322 003 64676	TBC337-40	LW only
7105	9322 003 64676	TBC337-40	LW only
7109	4822 130 60373	BC856B	LW only
7110	4822 130 60373	BC856B	
7111	5322 130 42755	BC847C	
7112	4822 130 44503	BC547C	
7122	5322 130 42755	BC847C	LW only
7124	5322 130 42755	BC847C	LW only

INTEGRATED CIRCUITS

7101	4822 209 90315	TEA5762H/V1, RADIO IC	
------	----------------	-----------------------	--

POWER MODULE PWR207

(75W 6-Channel / 75W Twin Subwoofer)

(100W 6-Channel / 100W Twin Subwoofer)


TABLE OF CONTENTS

Class-D Amplifier circuit description	8-1
Exploded view + mechanical parts	8-2
SW-out (SPK II) Board - Circuit & layout diagrams (Twin Subwoofer versions only)	8-3
Speaker (SPK I) Board - Circuit diagram	8-4
Speaker (SPK I) Board - Component & Chip layouts	8-5
Mains & ECO Stby Board - Circuit diagram	8-6
Mains & ECO Stby Board - Component & Chip layouts	8-7
Mains & ECO Stby Board - Chip layouts Part A	8-8
Mains & ECO Stby Board - Chip layouts Part B	8-9
Supply Board - Circuit diagram	8-10
Supply Board - Component & Chip layouts	8-11
Supply Board - Chip layout Part A	8-12
Supply Board - Chip layout Part B	8-13
Amplifier Board - Clock Generator & connector - circuit	8-14
Amplifier Board - Amplifier circuit	8-15
Amplifier Board - Bottom view	8-16
Amplifier Board - Top view	8-17
Amplifier Board - Bottom view Part A	8-18
Amplifier Board - Bottom view Part B	8-19
Amplifier Board - Top view Part C	8-20
Amplifier Board - Top view Part D	8-21
Electrical parts list - Mains, Supply, Speaker & SW-out	8-22
Electrical parts list - Amplifier board	8-23

6-channel class-D amplifier

Basic operation of a class-D amplifier

Basically, the output stage of a class-D amplifier outputs a continuous square wave swinging between positive and negative power supplies with a fixed frequency ("clock" frequency) far beyond the audible range. The duty cycle of this square wave is modulated with the audio signal. The output is followed by a low-pass filter which eliminates the clock frequency and allows only the audio signal going to the speaker. See simplified drawing below.

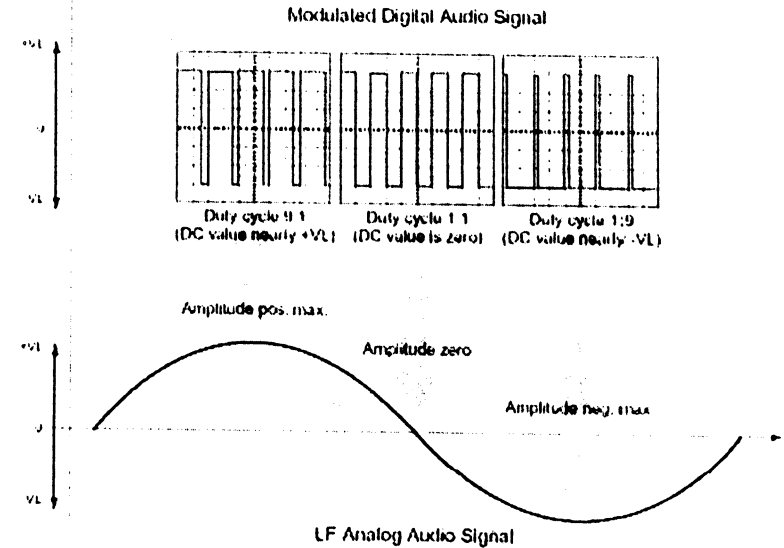


Compared to a conventional power amplifier the benefits of the Class-D amplifier are:

- higher efficiency
- lower power dissipation
- smaller heatsink required
- smaller mains transformer required

The main disadvantage of this concept is:

- The amplifier is operating with a high-frequency square wave at high amplitude and currents. This requires special precautions to prevent excessive electromagnetic radiation (EMC).

Block diagram and operation

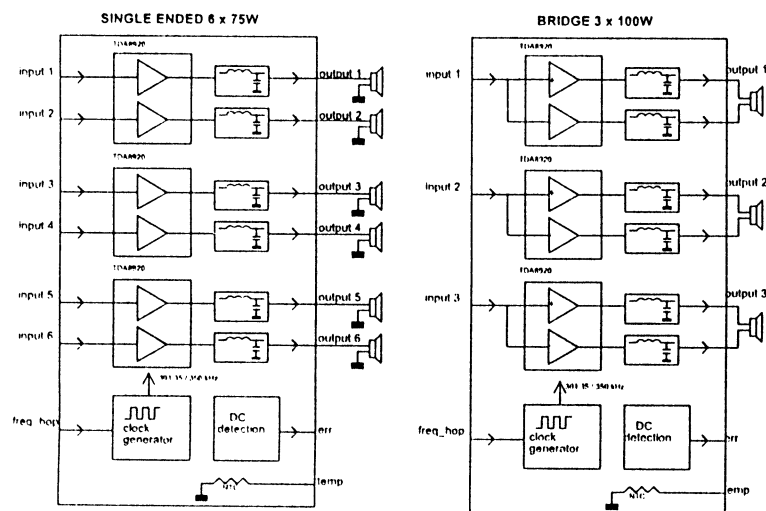

• clock oscillator

The clock frequency is generated around IC7600. Using 2 extra transistors (7602 and 7608) and 2 ceramic resonators it can be operated at 2 frequencies: 602.7kHz and 700kHz. The frequency is selected by the signal "FREQ_HOP" coming from connector 1301 pin 9.

When FREQ_HOP is low, the output of 7600-1 will be high. This switches transistor 7602 on, and connects resonator 1600 (602.7kHz) to Inverter 7600-3. Similarly, when FREQ_HOP is high, resonator 1601 is connected to 7600-3.

The output frequency is divided by two by IC7607, resulting in 301.35kHz or 350kHz.

The purpose of a selectable clock frequency is related to the disturbance of the tuner which is built-in together with this amplifier. In MW, the software of the set microprocessor will select the other clock frequency in case the amplifier clock interferes with the tuned station.

• Class-D amplifier TDA8920 and low-pass filter

The TDA8920 is a two channel audio power amplifier using class-D technology. The audio input signal is converted into a digital Pulse Width Modulated (PWM) signal via an analog input stage and PWM modulator. It is then fed to the power stage which outputs a high power PWM signal which switches between the main supply lines.

The TDA8920 is followed by a 2nd-order low-pass filter. It has a cut-off frequency around 50kHz and converts the PWM signal into analog audio signal across the loudspeaker.

The TDA8920 has a temperature protection and a current limiter built-in.

Furthermore, the IC can be put in active, mute and standby mode.

• Active mode (amplifier fully operational) with output signal.


• Mute mode: the amplifiers are operational, but the audio is muted

• Standby mode; with a very low supply current, the output stage is switched off.

• DC-detection

The DC-detection circuit monitors all 6 outputs for DC. Whenever one or more outputs contain DC for more than 1 second, the circuit will be activated. A positive voltage will activate transistor 7710 and pin 10 of connector 1301 will be pulled down. In case of a negative voltage, transistor 7716 will be activated, which in turn activates 7710. The set microprocessor will take further action.

MECHANICAL EXPLODED VIEW

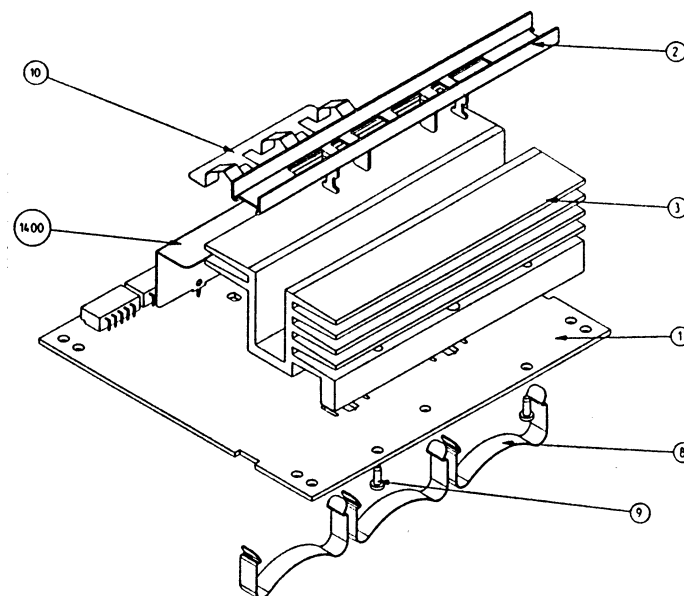




3104 217 07180 bl110

MECHANICAL PARTS LIST & SCREWS


8	4822 492 11735	SPRING, TRANSISTOR
9	-	D2.3 x 8
10	3104 211 29881	EARTH SPRING

Note: Only the parts mentioned in this list are normal service spare parts.

SW-OUT (SPK II) BOARD - CIRCUIT & LAYOUT DIAGRAMS (For Twin Subwoofer versions only)

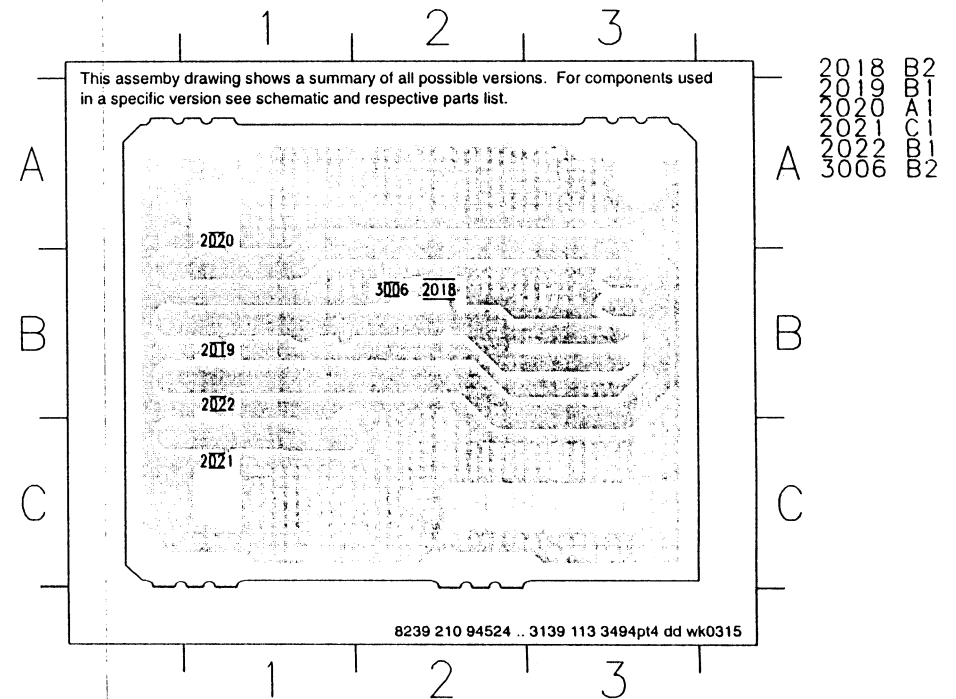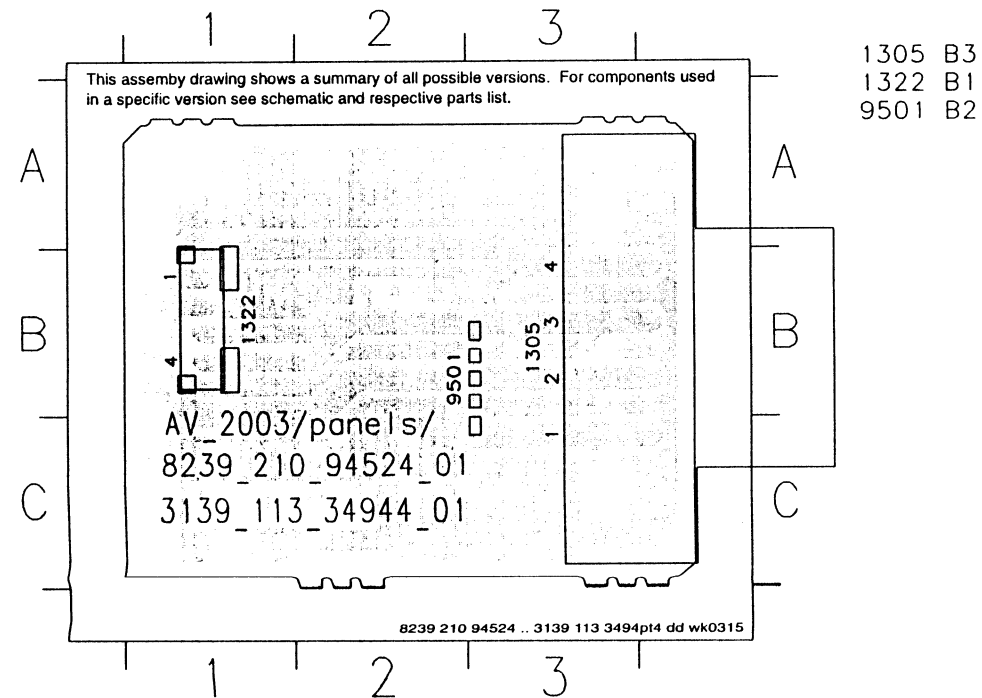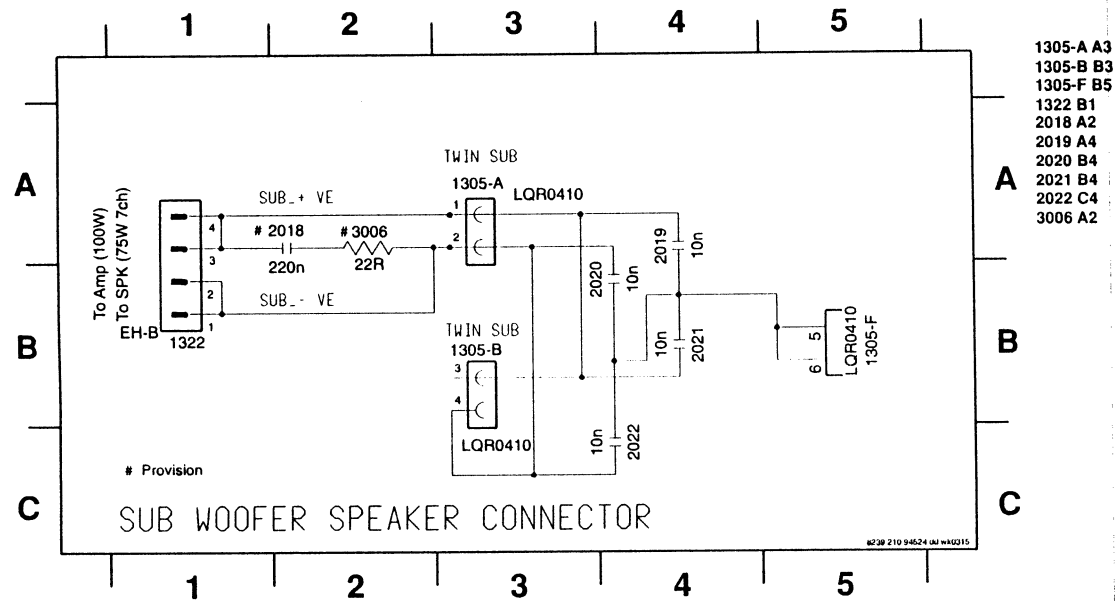


1303-A E4	1303-F B4	1304-E B3	1317 B2	2000 A4	2005 C4	2010 E4	2015 C2	3002 C3
1303-B B4	1304-A B3	1313 A1	1318 E2	2001 A4	2006 C4	2011 E4	2016 D3	3003 C3
1303-C A4	1304-B A3	1314 D1	1319 E2	2002 B4	2007 C4	2012 A2	2017 E2	3004 D3
1303-D D4	1304-C D3	1315 B1	1320 C1	2003 B4	2008 D4	2013 B2	3000 A3	3005 E3
1303-E C4	1304-D C3	1316 A2	1321 D2	2004 C4	2009 D4	2014 C2	3001 B3	9500 E3

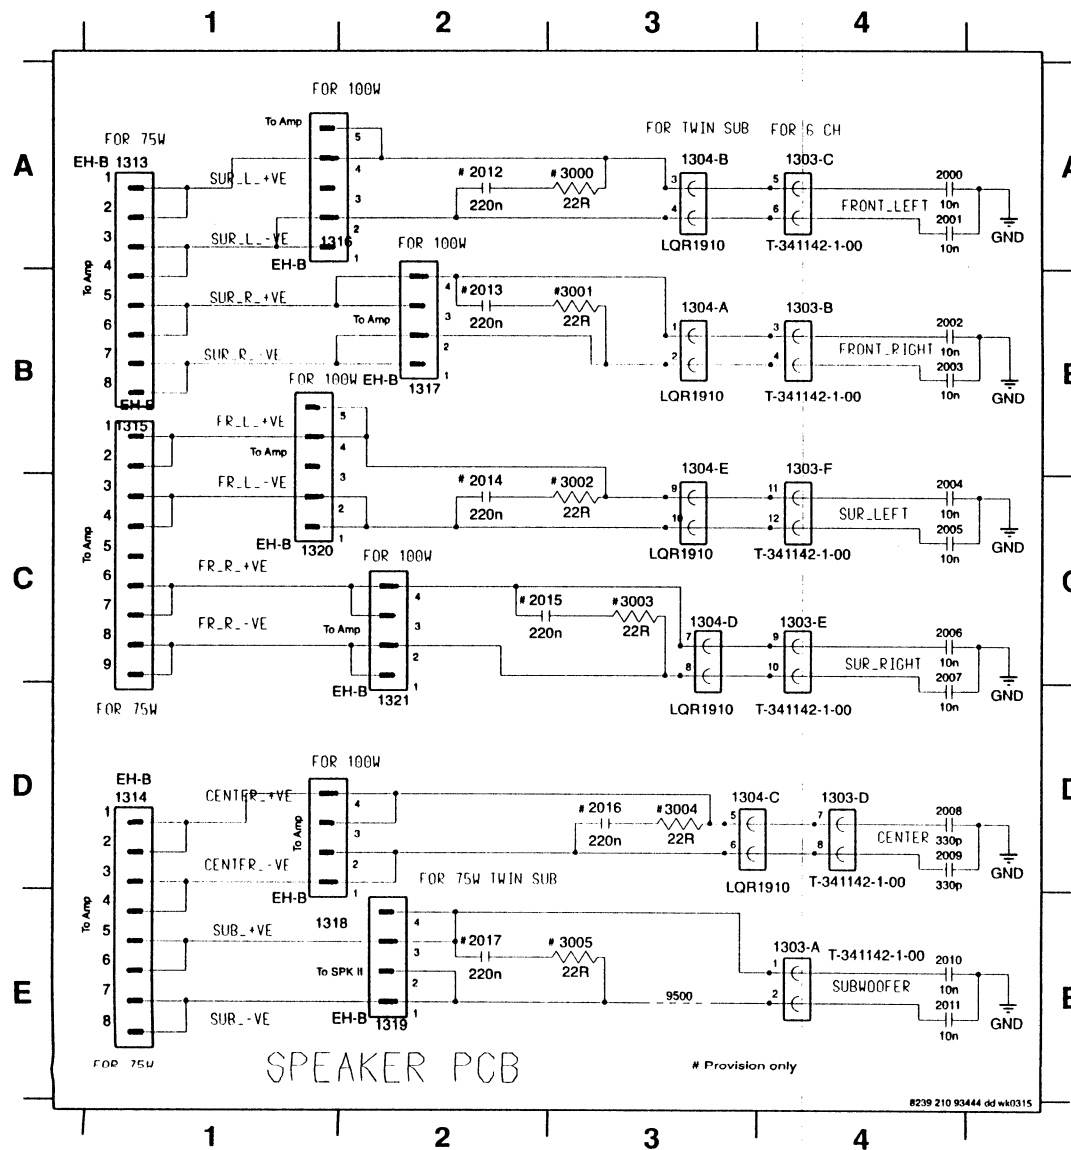


SPEAKER (SPK I) BOARD - COMPONENT & CHIP LAYOUTS

1303 E3 1313 C3 1315 A1 1317 D2 1319 E1 1321 B2
 1304 B3 1314 B1 1316 C2 1318 A1 1320 A2 9500 D2

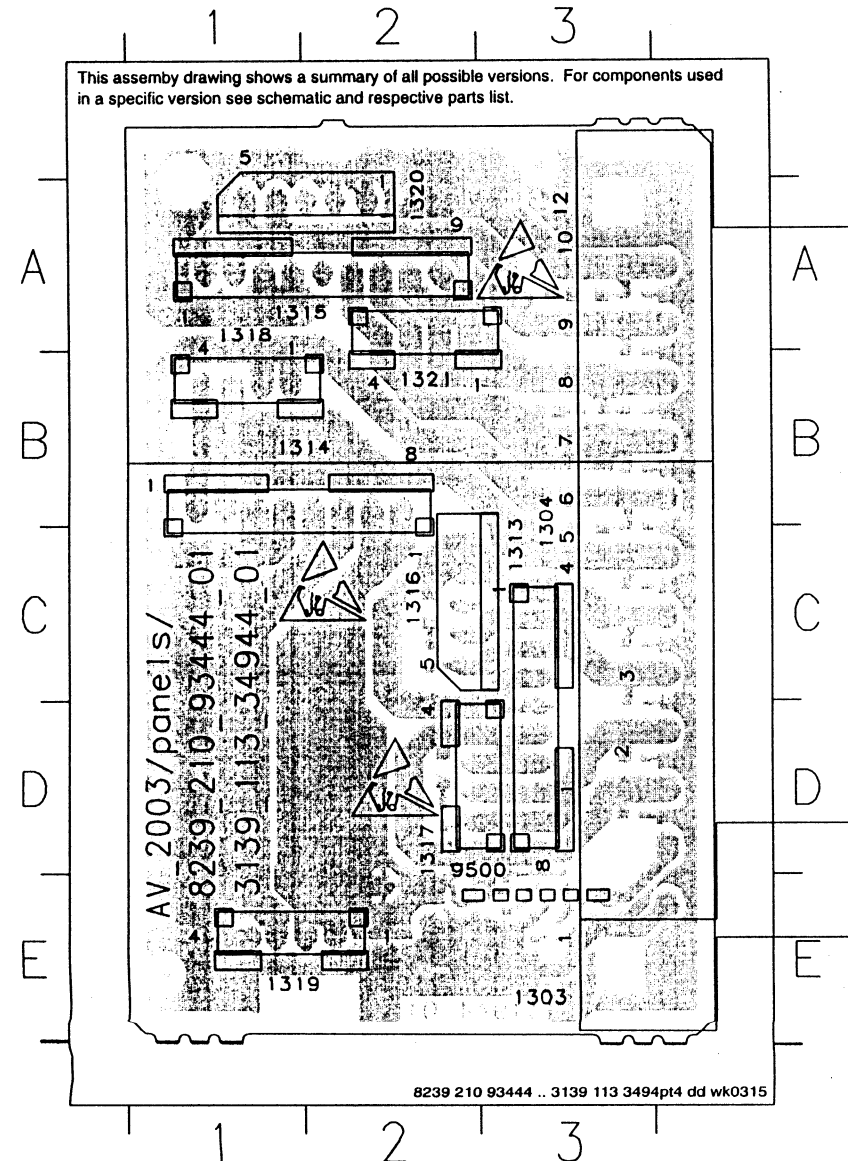



2000 C1	2005 A1	2010 E1	2015 B1	3002 A1
2001 C1	2006 B1	2011 E1	2016 C1	3003 B1
2002 D1	2007 B1	2012 C2	2017 E1	3004 C1
2003 D1	2008 C1	2013 D2	3000 C2	3005 E1
2004 A1	2009 B1	2014 A1	3001 D2	

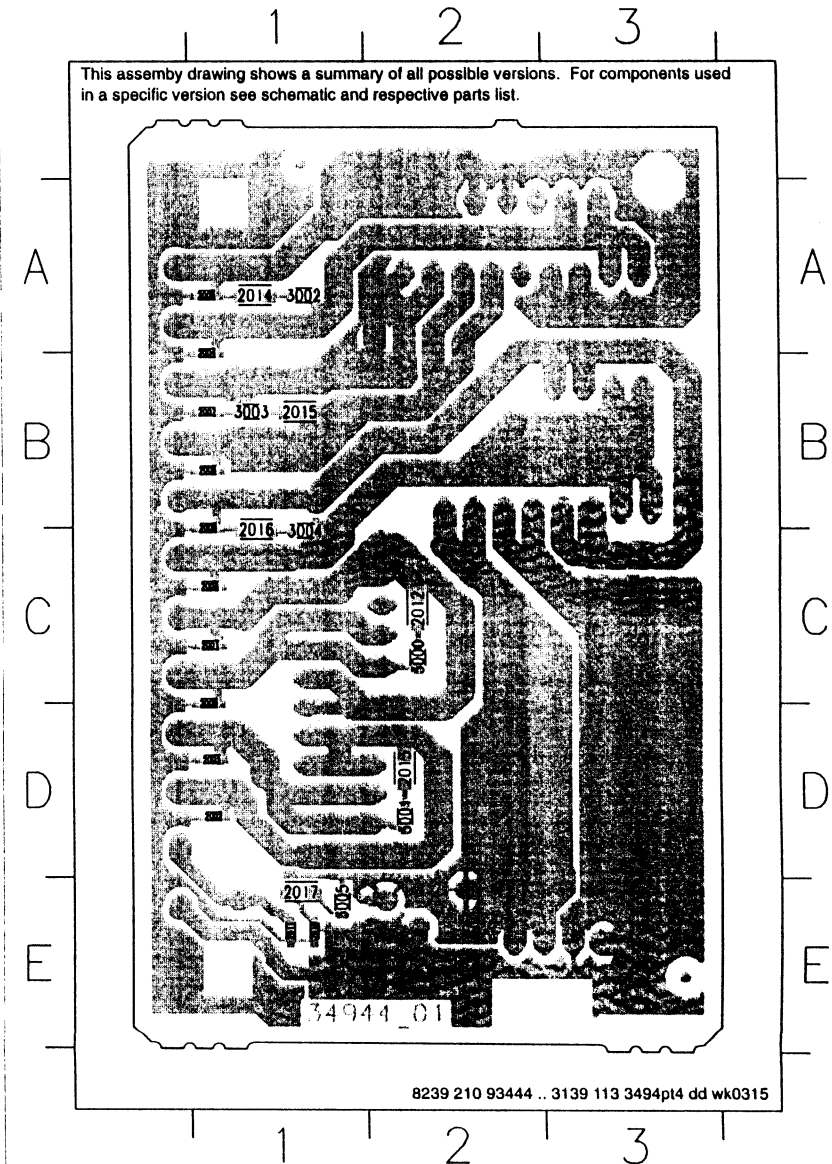


MAINS & ECO STBY BOARD - CIRCUIT DIAGRAM

1901 A1	1906 B10	1912 B5	2904 D9	2906 E3	2912 E10	3901 C2	3905 D10	3909 E6	3914 E2	3918 D2	5901 A1	5905 D9	6904 D10	6908 D8	6912 E5	6917 E6	6921 C10	7905 E7	9904 B4
1905 A2	1909 A6	2901 D9	2905 D6	2909 E6	2913 E3	3902 D6	3906 D5	3910 E6	3915 E3	3919 D1	5902 E4	6901 D5	6905 D6	6909 D1	6914 E9	6918 D3	7901 E6	7906 D2	9905 B2
1906 D3	1910 B2	2902 D4	2906 D4	2910 E8	2914 E8	3903 D7	3907 D9	3911 E8	3916 D7	3920 C10	5903 D4	6902 D5	6906 D5	6910 D1	6915 E10	6919 D1	7902 E7	9901 A1	9906 D3
1907 A7	1911 A4	2903 D8	2907 D6	2911 E10	2915 E9	3904 D8	3908 E5	3913 E2	3917 D2	3921 B2	5904 E5	6903 D10	6907 D3	6911 D9	6916 E5	6920 E2	7904 E5	9902 A1	

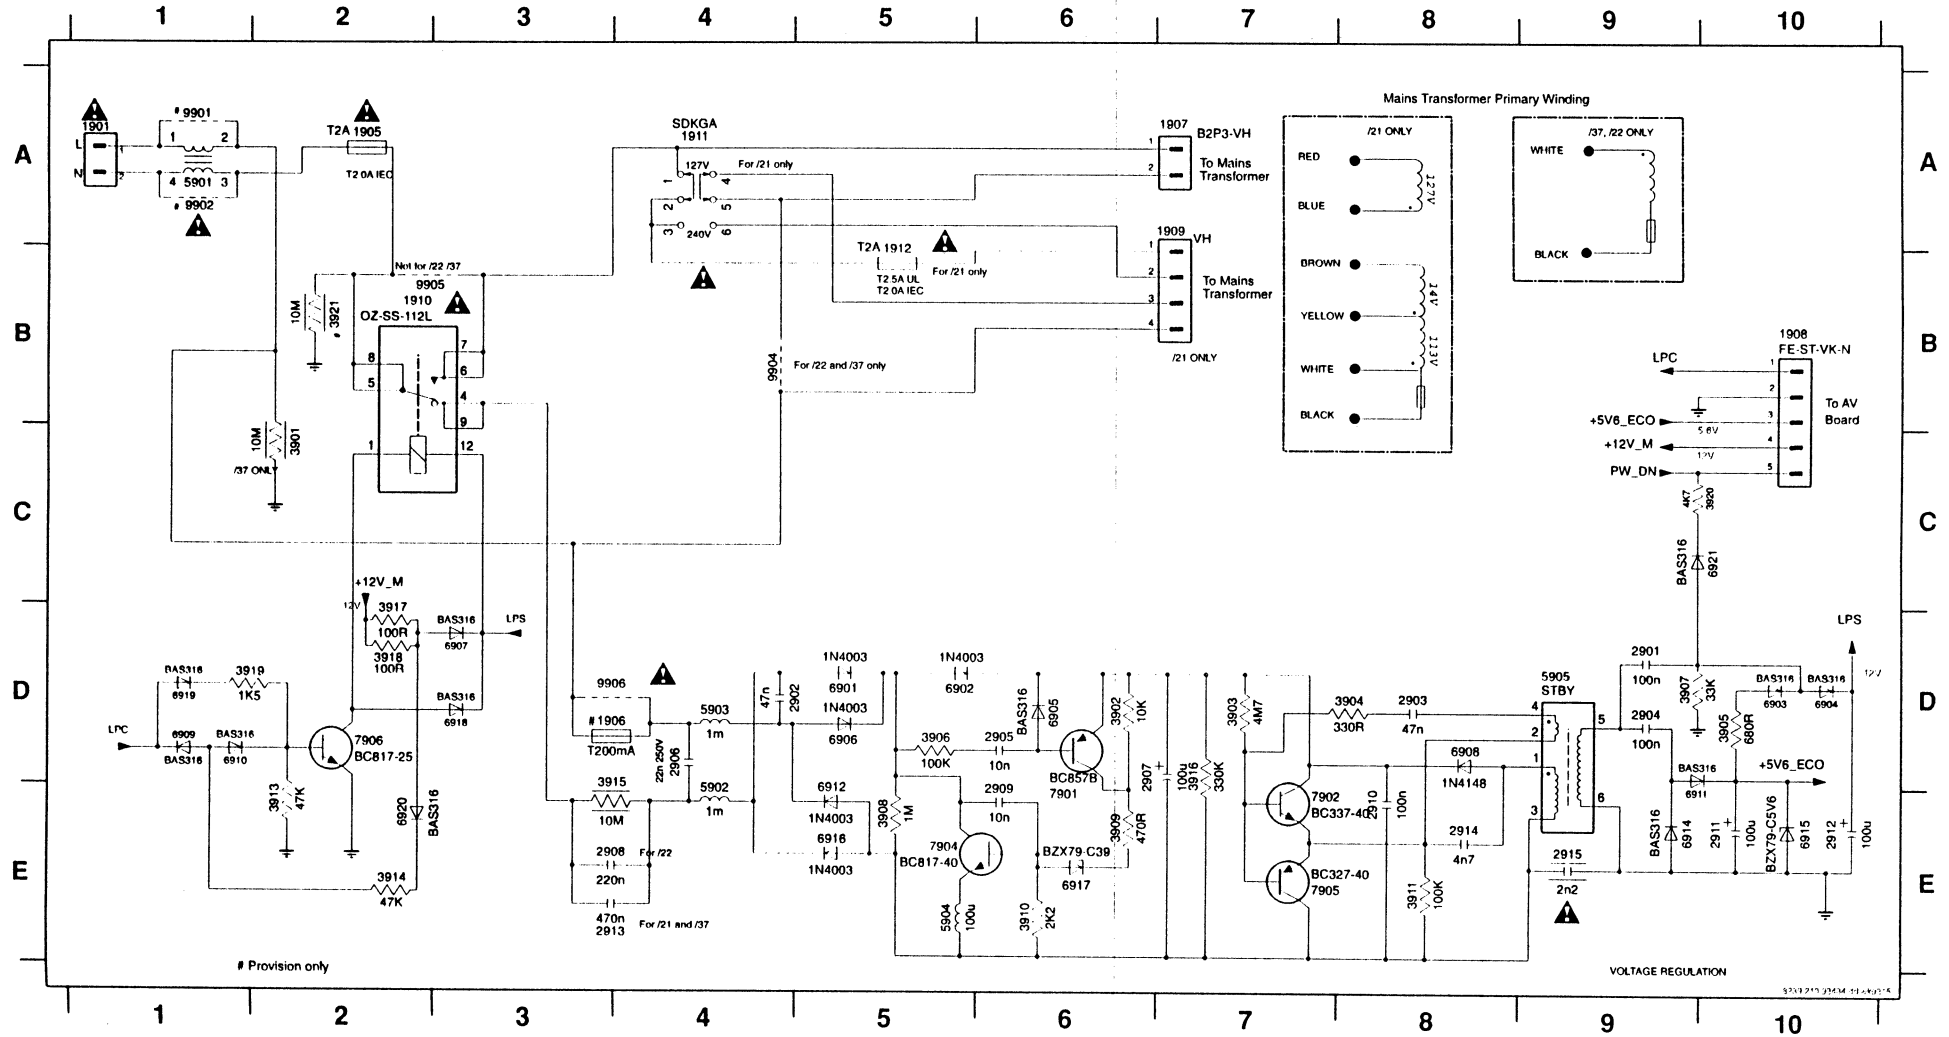

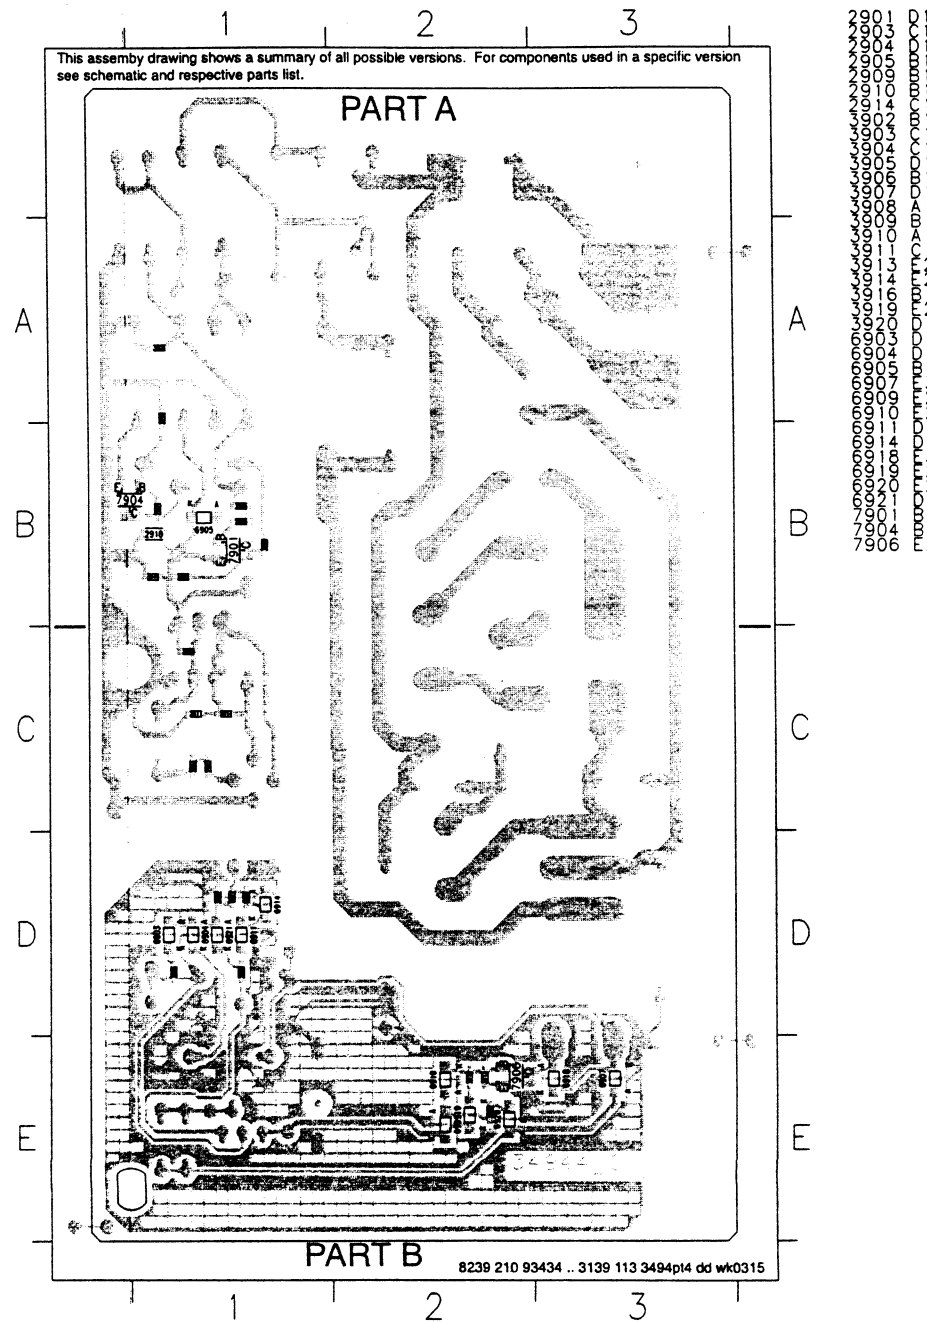

This assembly drawing shows a summary of all possible versions. For components used in a specific version see schematic and respective parts list.

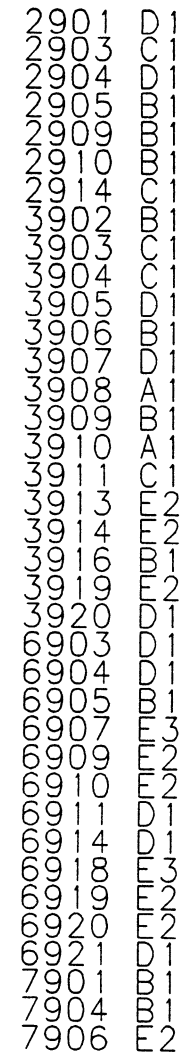

PART B


8239 210 93434 .. 3139 113 3494pt4 dd wk0315

1

2

3

SUPPLY BOARD - CIRCUIT DIAGRAM

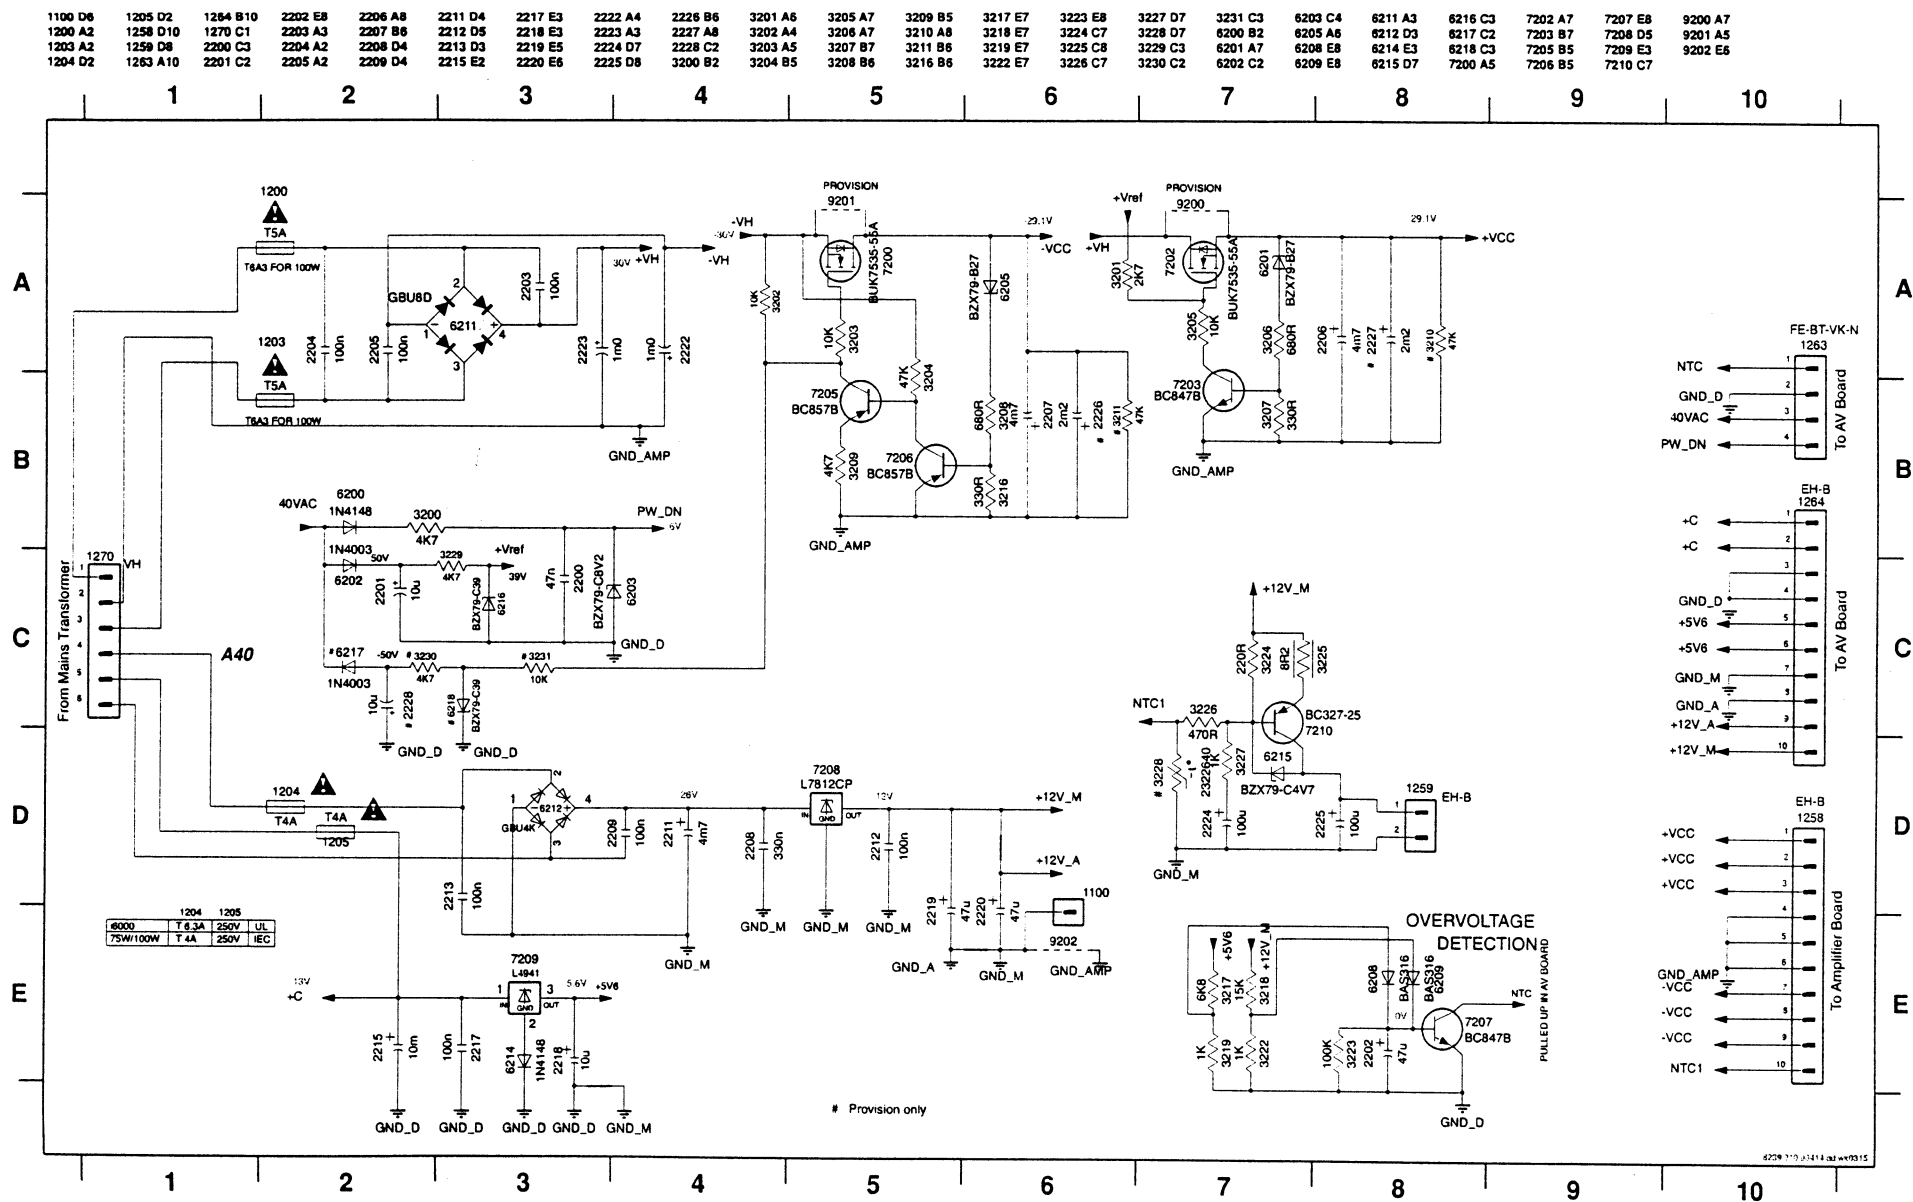

POWER MODULE PWR207

(75W 6-Channel / 75W Twin Subwoofer)
(100W 6-Channel / 100W Twin Subwoofer)


TABLE OF CONTENTS

Class-D Amplifier circuit description	8-1
Exploded view + mechanical parts	8-2
SW-out (SPK II) Board - Circuit & layout diagrams (Twin Subwoofer versions only)	8-3
Speaker (SPK I) Board - Circuit diagram	8-4
Speaker (SPK I) Board - Component & Chip layouts	8-5
Mains & ECO Stby Board - Circuit diagram	8-6
Mains & ECO Stby Board - Component & Chip layouts	8-7
Mains & ECO Stby Board - Chip layouts Part A	8-8
Mains & ECO Stby Board - Chip layouts Part B	8-9
Supply Board - Circuit diagram	8-10
Supply Board - Component & Chip layouts	8-11
Supply Board - Chip layout Part A	8-12
Supply Board - Chip layout Part B	8-13
Amplifier Board - Clock Generator & connector - circuit	8-14
Amplifier Board - Amplifier circuit	8-15
Amplifier Board - Bottom view	8-16
Amplifier Board - Top view	8-17
Amplifier Board - Bottom view Part A	8-18
Amplifier Board - Bottom view Part B	8-19
Amplifier Board - Top view Part C	8-20
Amplifier Board - Top view Part D	8-21
Electrical parts list - Mains, Supply, Speaker & SW-out	8-22
Electrical parts list - Amplifier board	8-23

6-channel class-D amplifier

Basic operation of a class-D amplifier

Basically, the output stage of a class-D amplifier outputs a continuous square wave swinging between positive and negative power supplies with a fixed frequency ("clock" frequency) far beyond the audible range. The duty cycle of this square wave is modulated with the audio signal. The output is followed by a low-pass filter which eliminates the clock frequency and allows only the audio signal going to the speaker. See simplified drawing below.

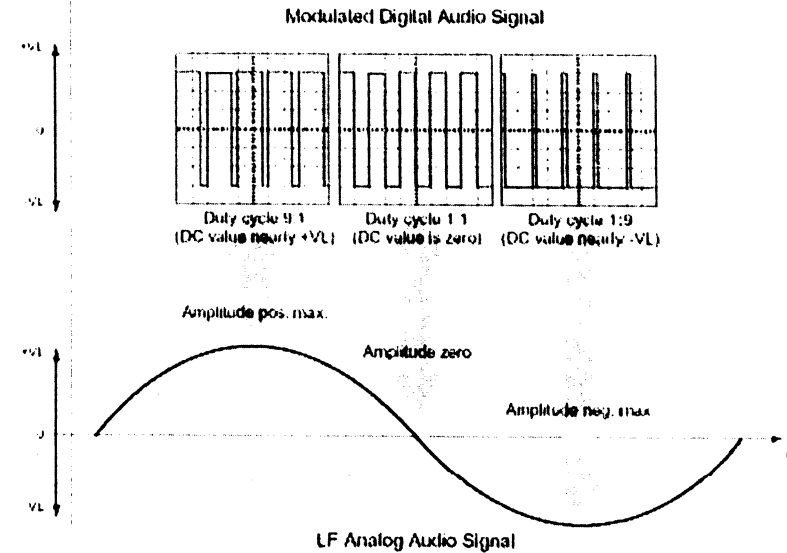


Compared to a conventional power amplifier the benefits of the Class-D amplifier are:

- higher efficiency
- lower power dissipation
- smaller heatsink required
- smaller mains transformer required

The main disadvantage of this concept is:

- The amplifier is operating with a high-frequency square wave at high amplitude and currents. This requires special precautions to prevent excessive electromagnetic radiation (EMC).

Block diagram and operation

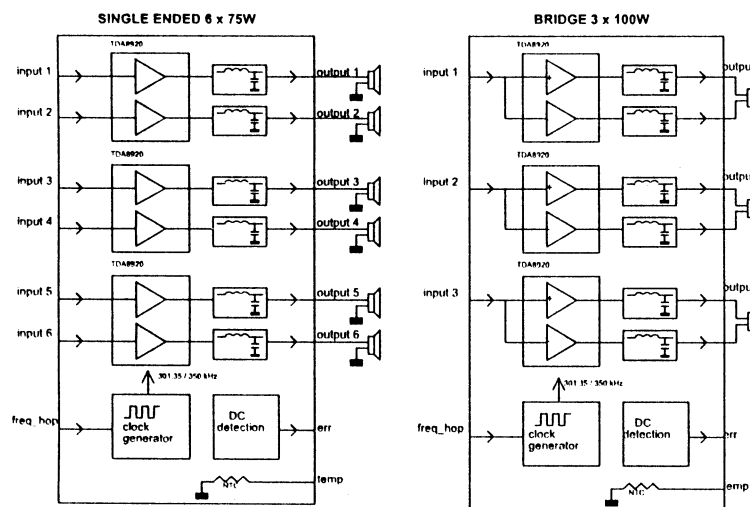

• clock oscillator

The clock frequency is generated around IC7600. Using 2 extra transistors (7602 and 7608) and 2 ceramic resonators it can be operated at 2 frequencies: 602.7kHz and 700kHz. The frequency is selected by the signal "FREQ_HOP" coming from connector 1301 pin 9.

When FREQ_HOP is low, the output of 7600-1 will be high. This switches transistor 7602 on, and connects resonator 1600 (602.7kHz) to inverter 7600-3. Similarly, when FREQ_HOP is high, resonator 1601 is connected to 7600-3.

The output frequency is divided by two by IC7607, resulting in 301.35kHz or 350kHz.

The purpose of a selectable clock frequency is related to the disturbance of the tuner which is built-in together with this amplifier. In MW, the software of the set microprocessor will select the other clock frequency in case the amplifier clock interferes with the tuned station.

• Class-D amplifier TDA8920 and low-pass filter

The TDA8920 is a two channel audio power amplifier using class-D technology. The audio input signal is converted into a digital Pulse Width Modulated (PWM) signal via an analog input stage and PWM modulator. It is then fed to the power stage which outputs a high power PWM signal which switches between the main supply lines.

The TDA8920 is followed by a 2nd-order low-pass filter. It has a cut-off frequency around 50kHz and converts the PWM signal into analog audio signal across the loudspeaker.

The TDA8920 has a temperature protection and a current limiter built-in.


Furthermore, the IC can be put in active, mute and standby mode.

- Active mode (amplifier fully operational) with output signal.
- Mute mode: the amplifiers are operational, but the audio is muted
- Standby mode: with a very low supply current, the output stage is switched off.

• DC-detection

The DC-detection circuit monitors all 6 outputs for DC. Whenever one or more outputs contain DC for more than 1 second, the circuit will be activated. A positive voltage will activate transistor 7710 and pin 10 of connector 1301 will be pulled down. In case of a negative voltage, transistor 7716 will be activated, which in turn activates 7710. The set microprocessor will take further action.

MECHANICAL EXPLODED VIEW

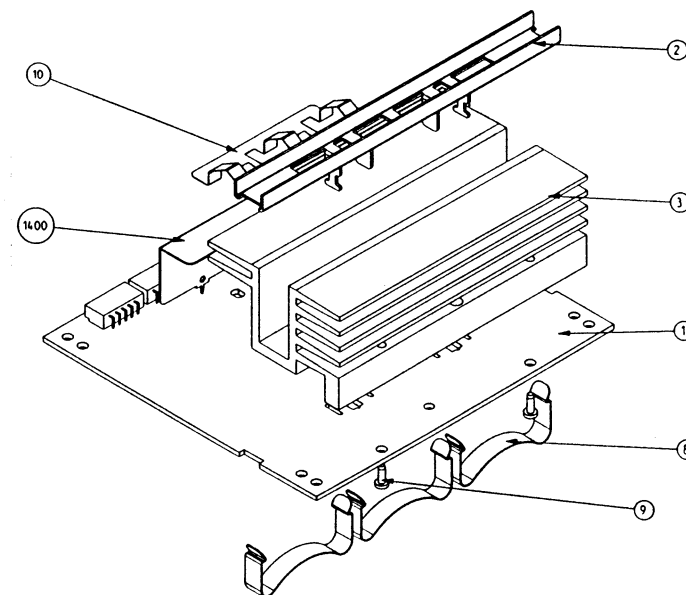



3104 217 07180 bl110

MECHANICAL PARTS LIST & SCREWS


8	4822 492 11735	SPRING, TRANSISTOR
9	-	D2.3 x 8
10	3104 211 29881	EARTH SPRING

Note: Only the parts mentioned in this list are normal service spare parts.

SUPPLY BOARD - CHIP LAYOUT

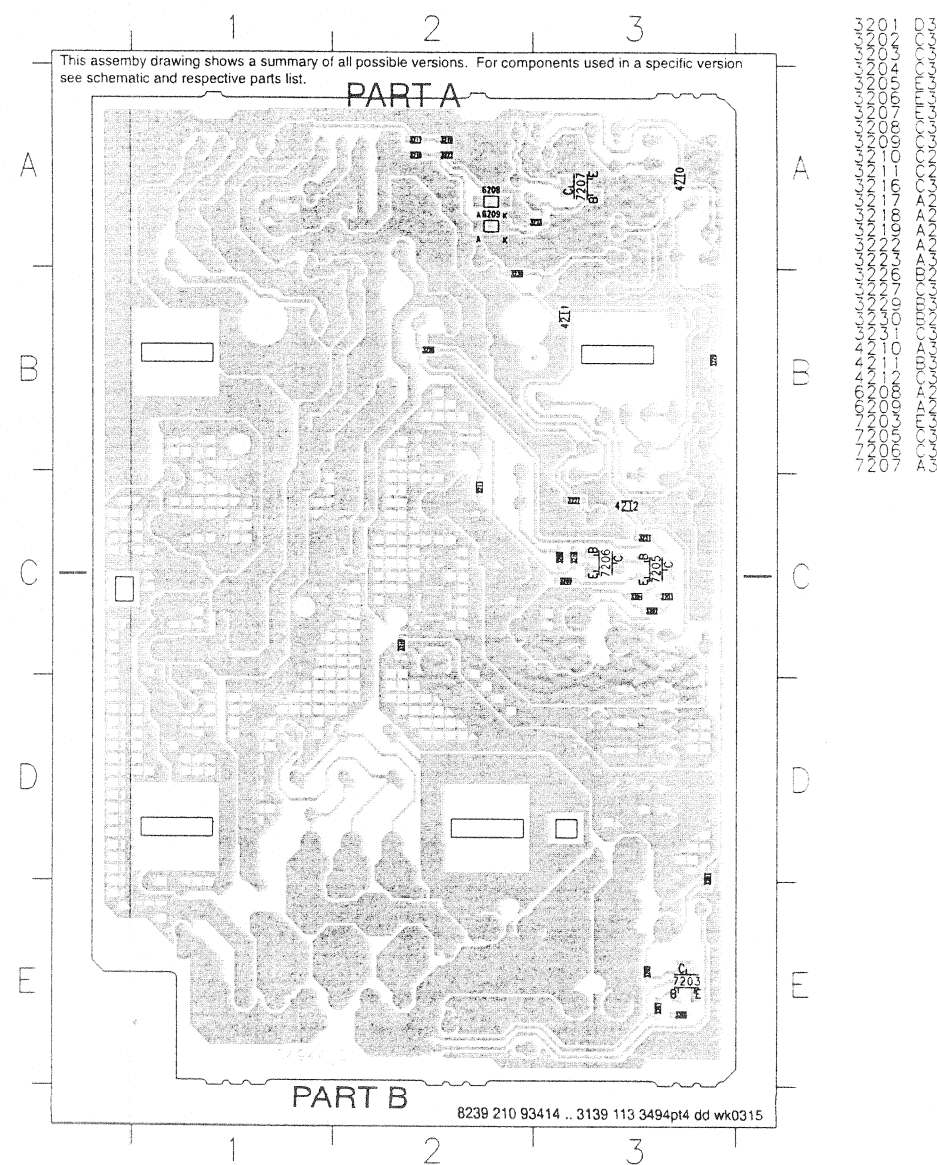


PART A

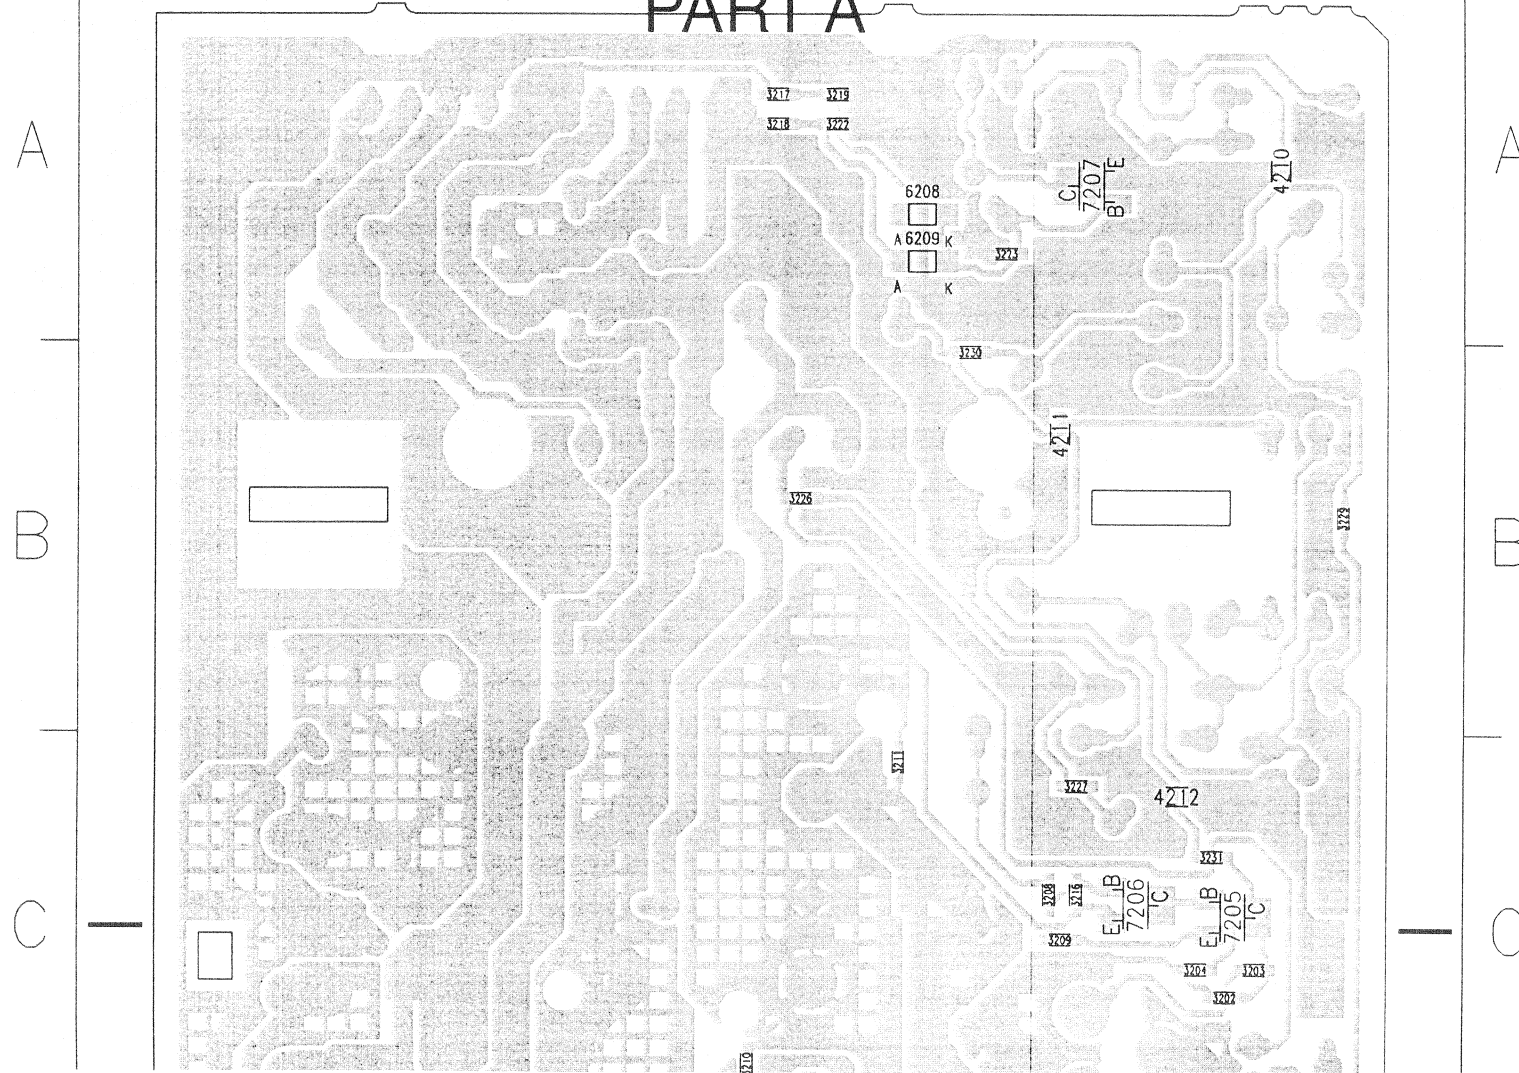


3201	D3
3202	C3
3203	C3
3204	C3
3205	C3
3206	E3
3207	E3
3208	E3
3209	C3
3210	C2
3211	C2
3216	C3
3217	A2
3218	A2
3219	A2
3222	A3
3223	A3
3226	B3
3227	C3
3229	B3
3230	B3
3231	C3
4210	A3
4211	B3
4212	C3
6208	A2
6209	A2
7203	E3
7205	C3
7206	C3
7207	A3



AMPLIFIER BOARD - CLOCK GENERATOR & CONNECTION CIRCUIT

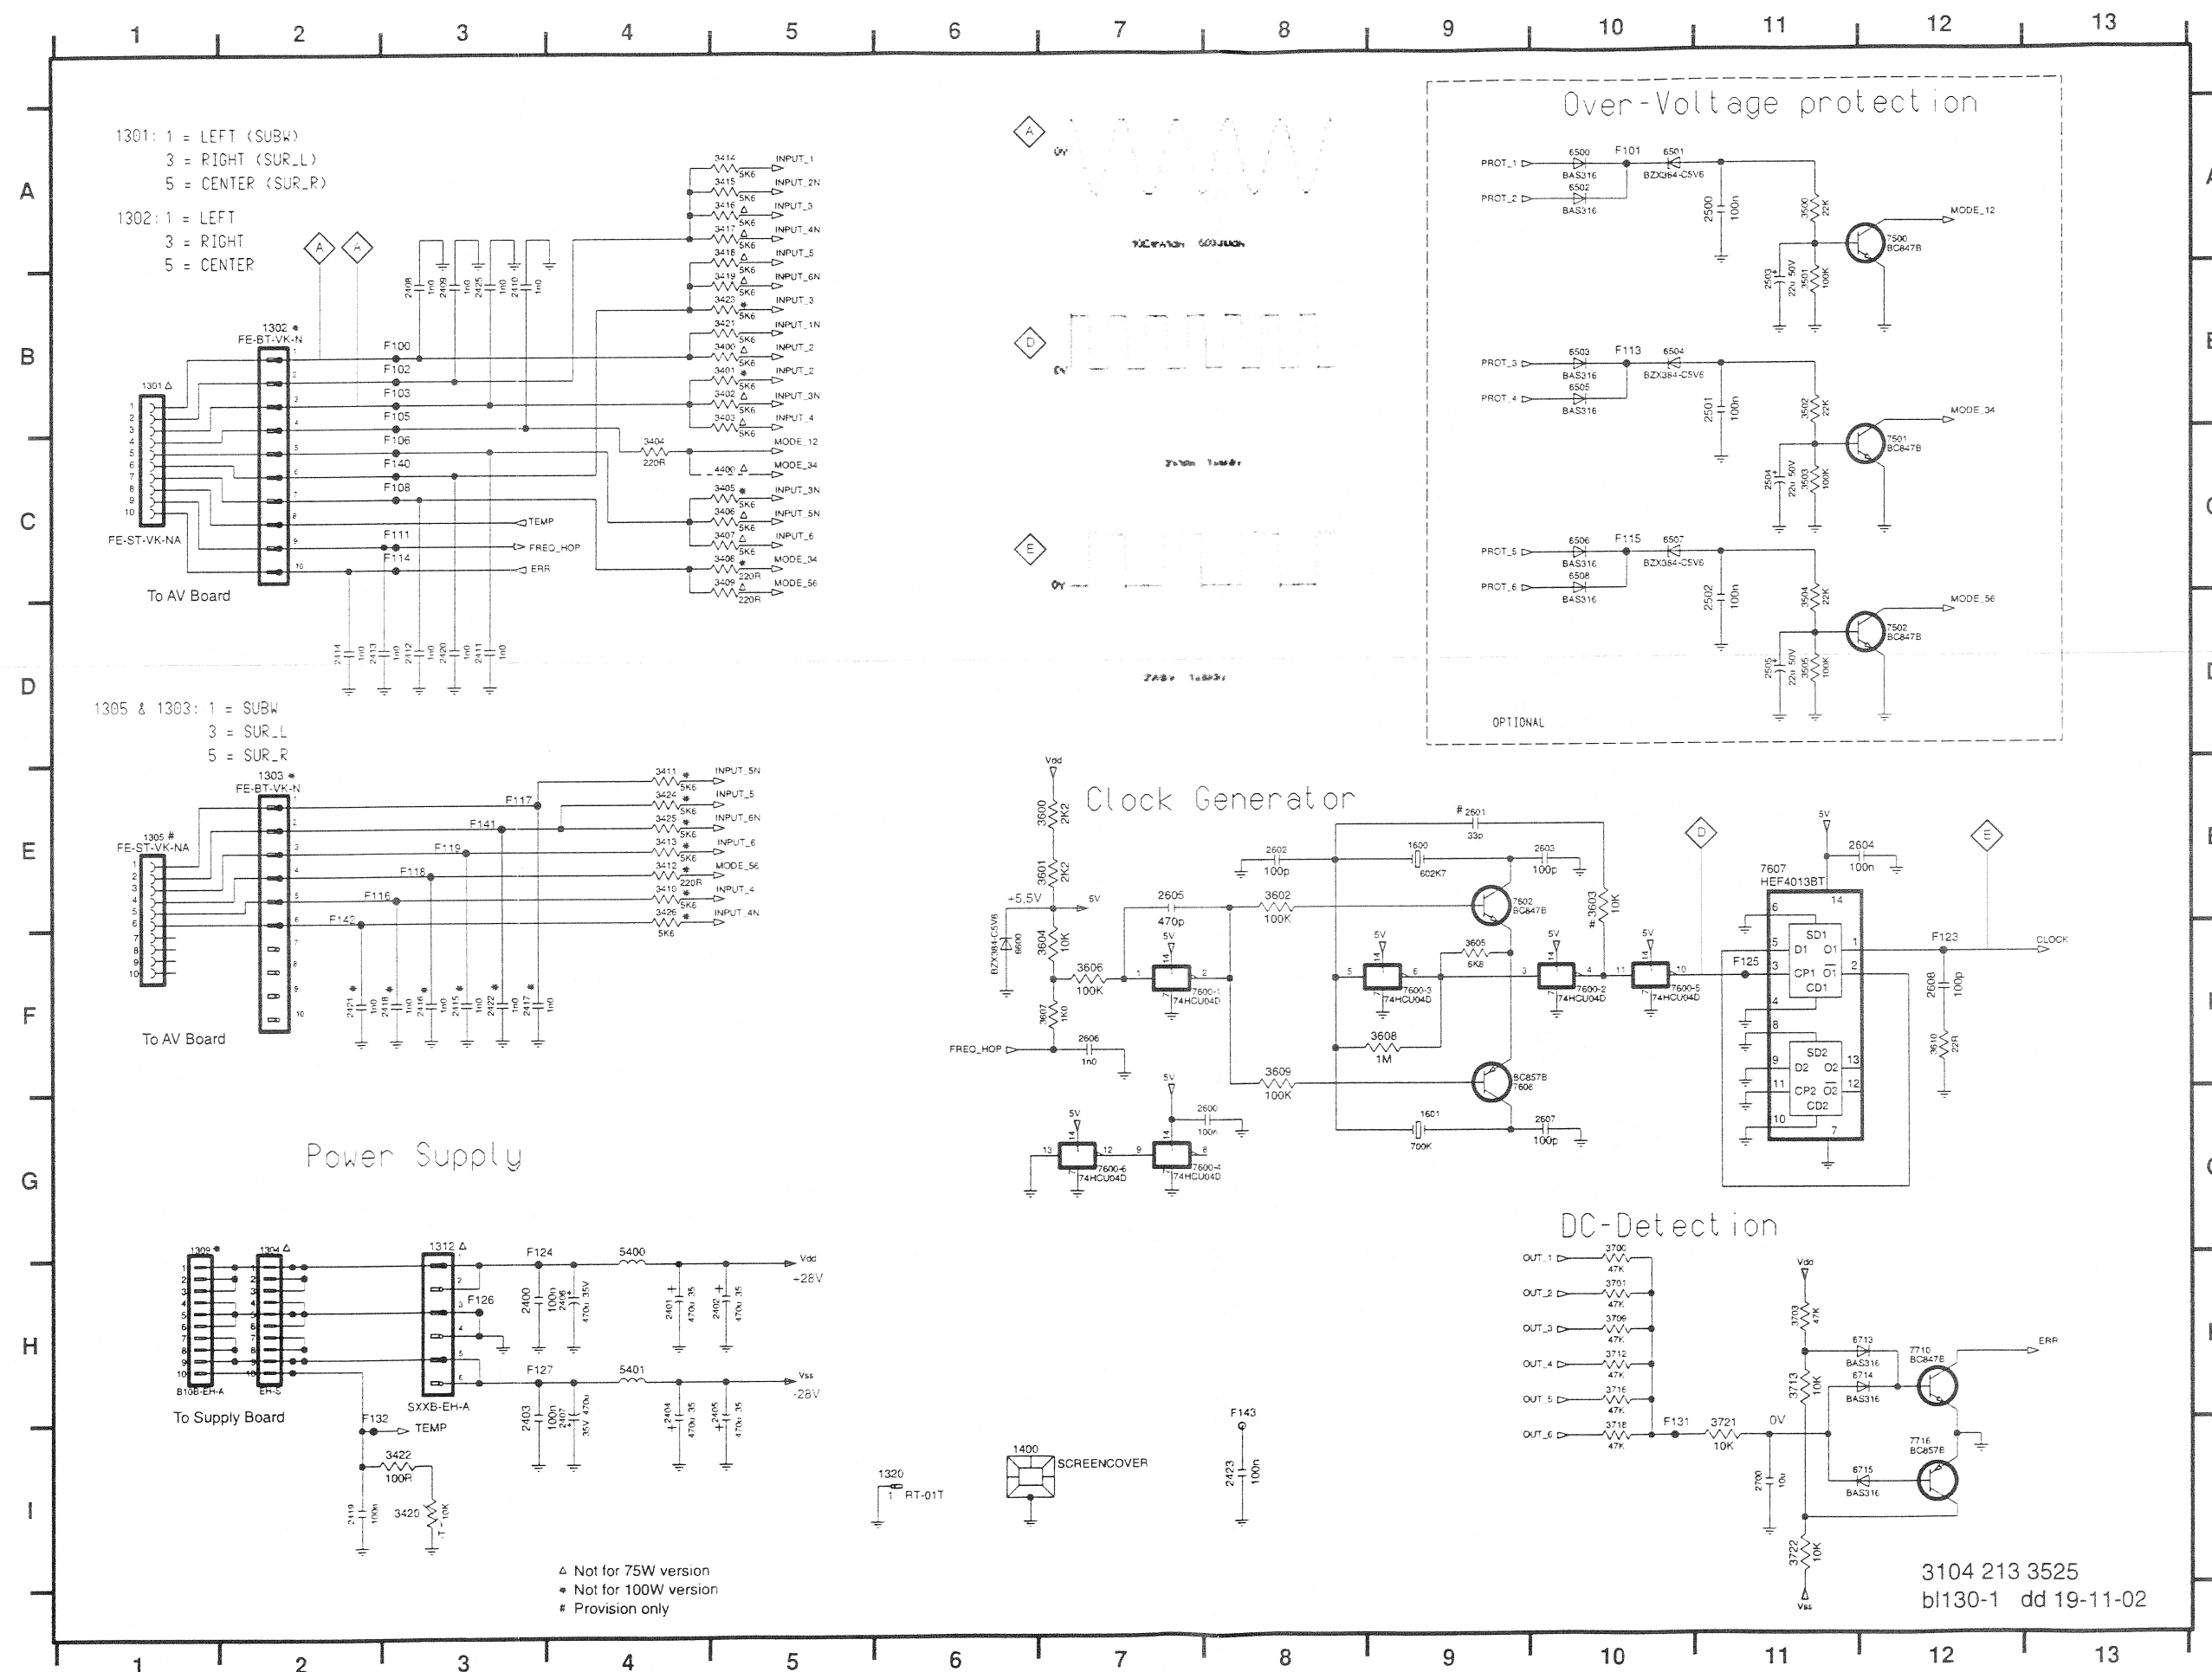

1301 B1	6505 B10
1302 B2	6506 C10
1303 E2	6507 C10
1304 G2	6508 C10
1305 E1	6600 F6
1309 G1	6713 H12
1312 G3	6714 H12
1320 I6	6715 H12
1400 I6	7500 A12
1600 E9	7501 C12
1601 G9	7502 D12
2400 H3	7600-1 F8
2401 H4	7600-2 F9
2402 H5	7600-3 F9
2403 H3	7600-4 G6
2404 H4	7600-5 F11
2405 H5	7600-6 G7
2406 H4	7602 E9
2407 H4	7607 E11
2408 B3	7608 F9
2409 B3	7710 H12
2410 B3	7716 H12
2411 D3	F100 B3
2412 D3	F101 A10
2413 D2	F102 B3
2414 D2	F103 B3
2415 F3	F105 B3
2416 F3	F106 C3
2417 F3	F108 C3
2418 F3	F111 C3
2419 I2	F113 B10
2420 D3	F114 C3
2421 F2	F115 C10
2422 F3	F116 E2
2423 I6	F117 E3
2425 B3	F118 E3
2500 A11	F119 E3
2501 B11	F123 F12
2502 D11	F124 G3
2503 B11	F125 F11
2504 C11	F126 H3
2505 D11	F127 H3
2600 G8	F131 I10
2601 E9	F132 H2
2602 E8	F140 C3
2603 E10	F141 E3
2604 E12	F142 E2
2605 E7	F143 H8
2606 F7	
2607 G10	
2608 F12	
2700 I11	
3400 B5	
3401 B5	
3402 B5	
3403 B5	
3404 C4	
3405 C5	
3406 C5	
3407 C5	
3408 C5	
3409 C5	
3410 E4	
3411 E4	
3412 E4	
3413 E4	
3414 A5	
3415 A5	
3416 A5	
3417 A5	
3418 A5	
3419 B5	
3420 I3	
3421 B5	
3422 I3	
3423 B5	
3424 E4	
3425 E4	
3426 E4	
3500 A11	
3501 B11	
3502 B11	
3503 C11	
3504 D11	
3505 D11	
3600 E7	
3601 E7	
3602 E8	
3603 E10	
3604 F7	
3605 F9	
3606 F7	
3607 F7	
3608 F9	
3609 F8	
3610 F12	
3700 G10	
3701 H10	
3703 H11	
3709 H10	
3712 H10	
3713 H11	
3716 H10	
3718 I10	
3721 I11	
3722 I11	
4400 C5	
5400 G4	
5401 H4	
6500 A10	
6501 A10	
6502 A10	
6503 B10	
6504 B10	

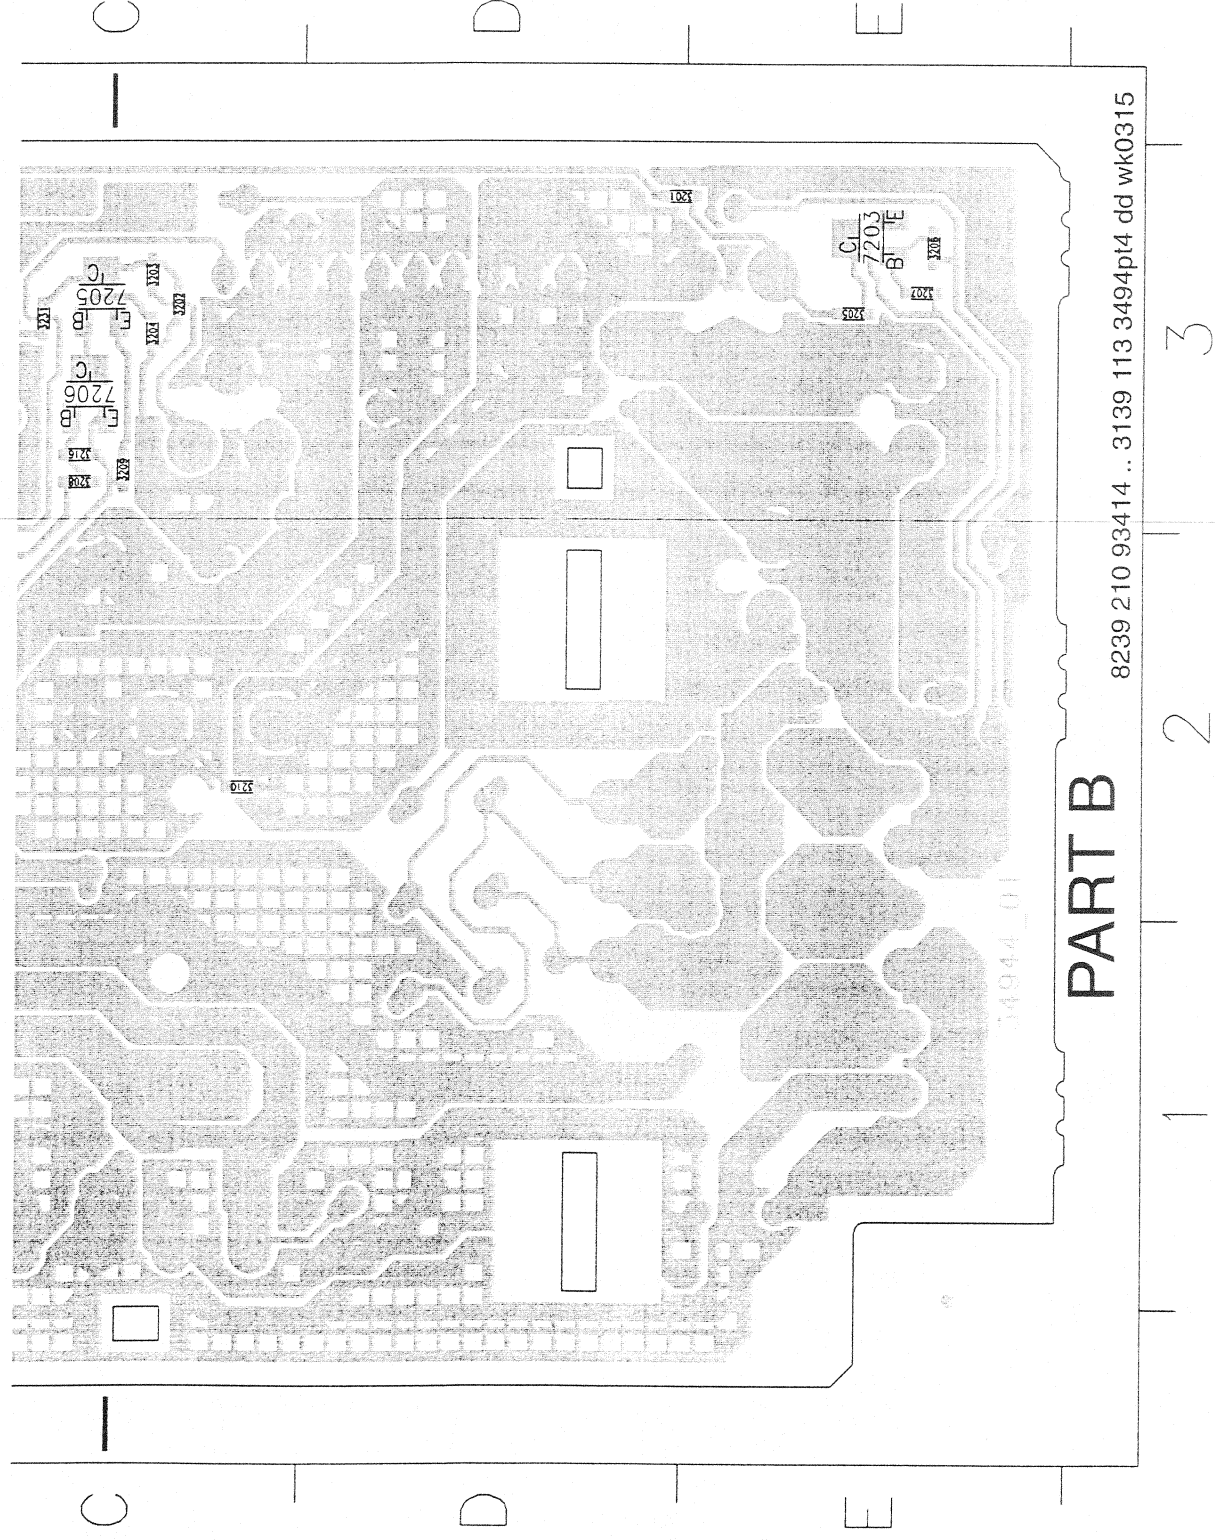

AMPLIFIER BOARD - AMPLIFIER CIRCUIT

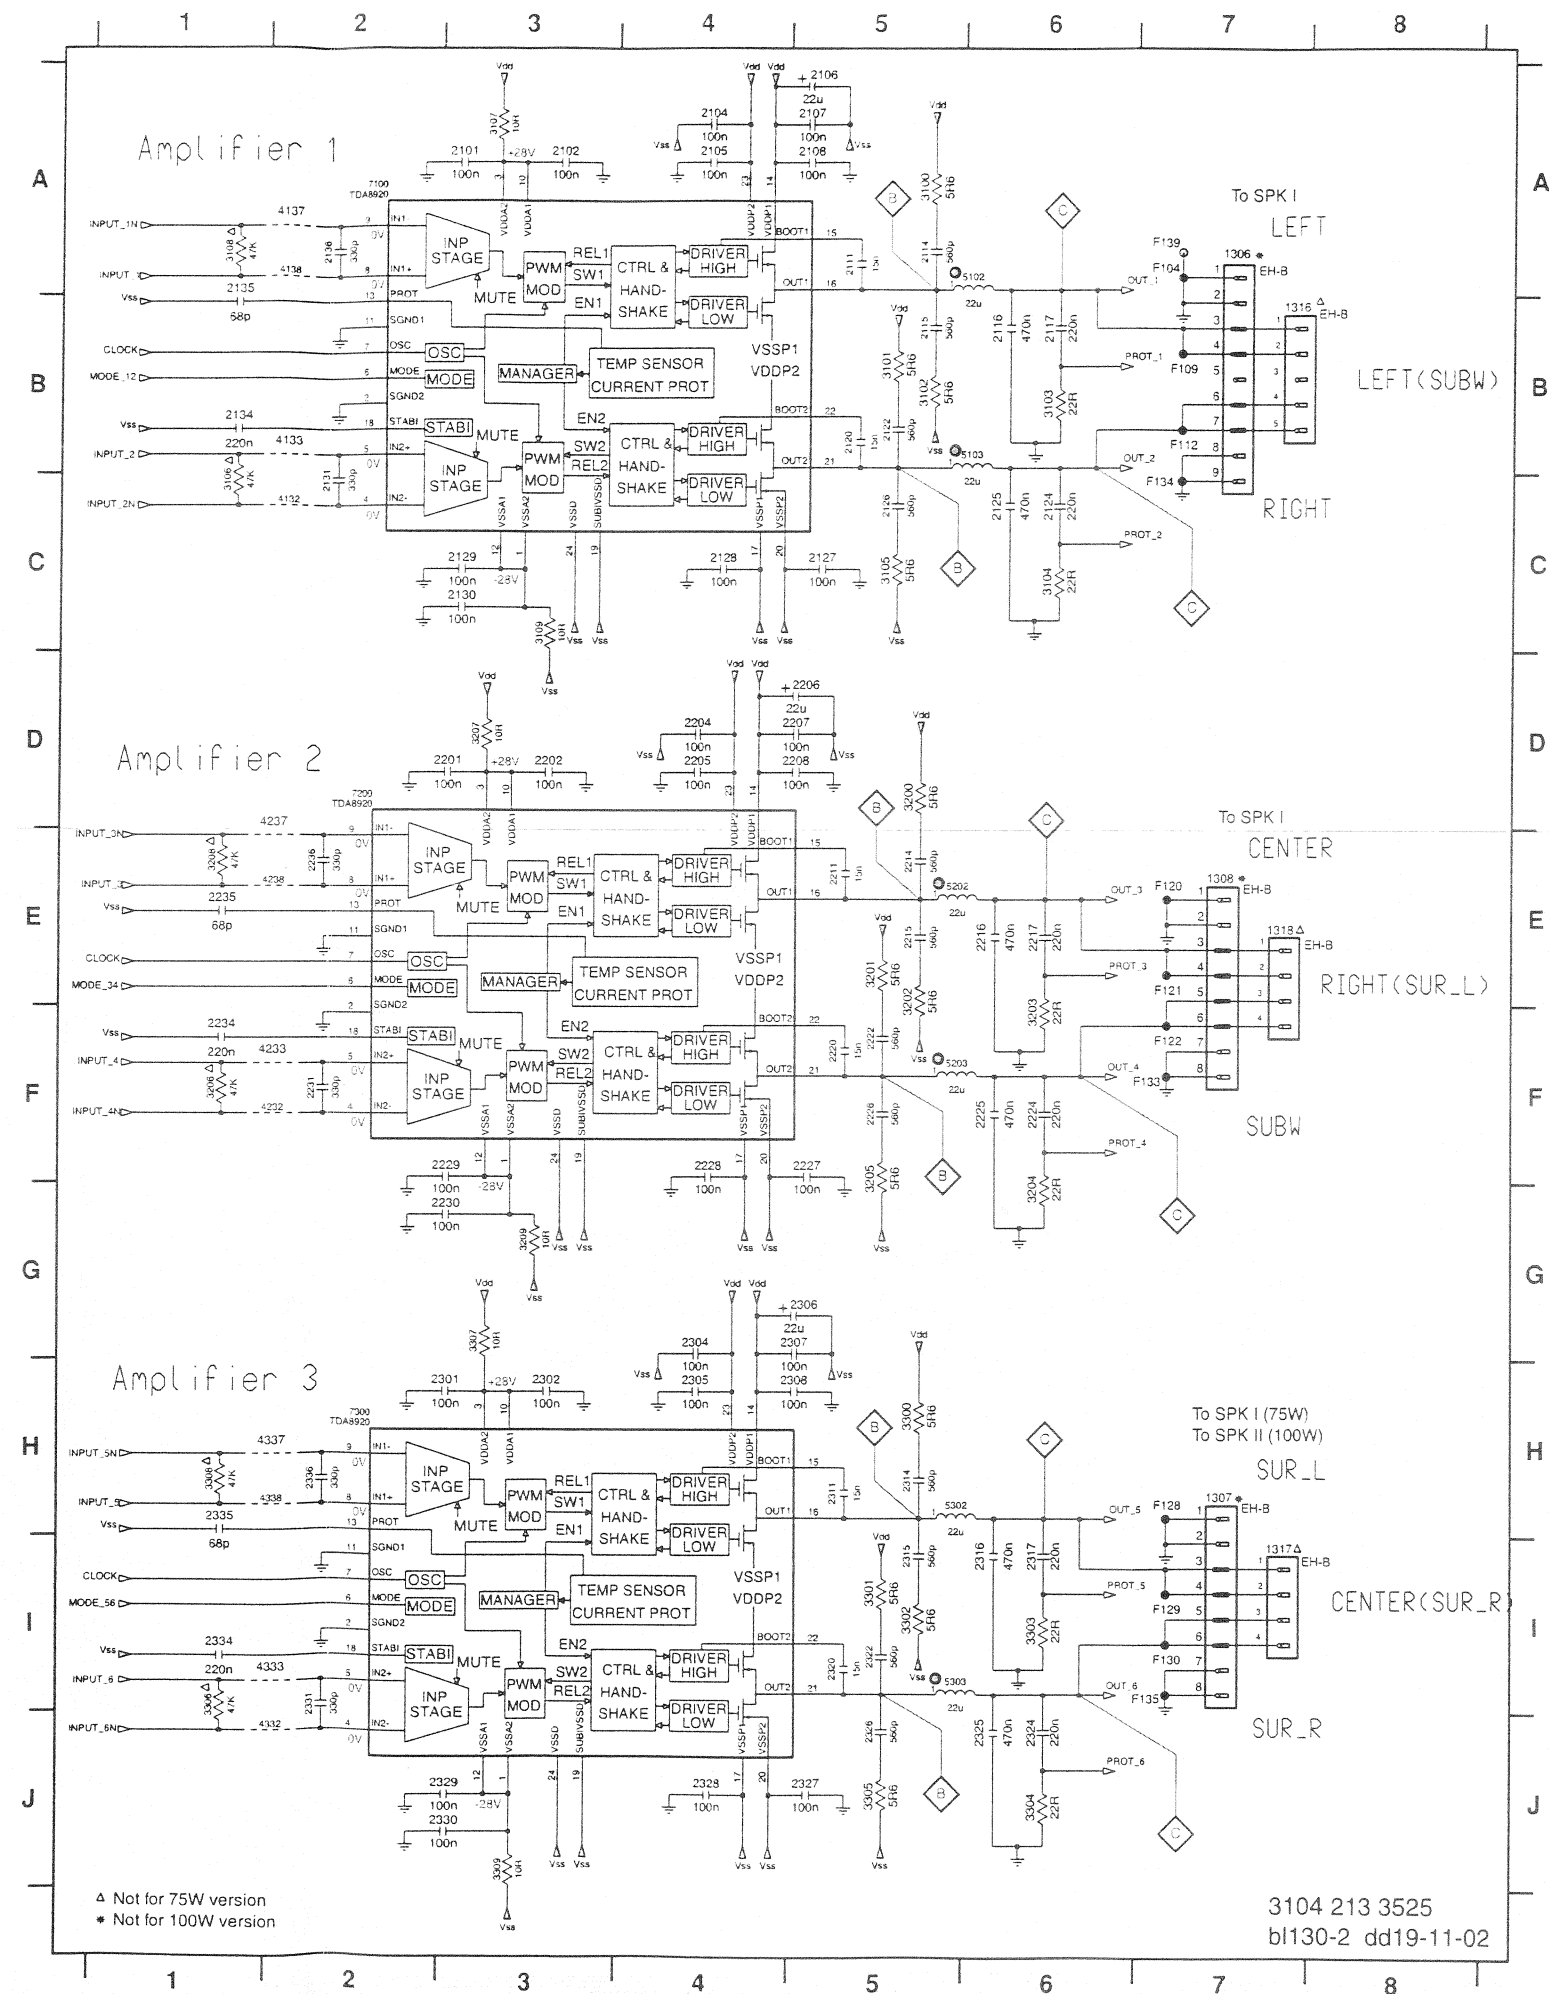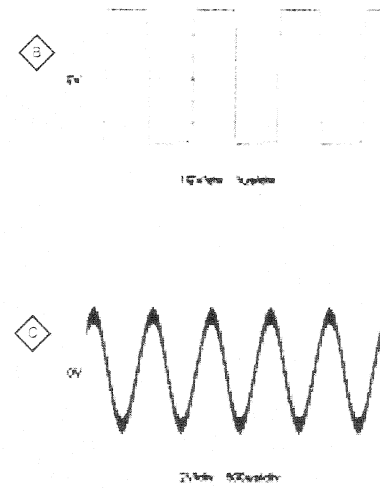

3104 213 3525
bl130-2 dd19-11-02

1 2 3 4 5 6 7

PART C



PART D



ELECTRICAL PARTS LIST - AMPLIFIER BOARD

MISCELLANEOUS

8	3104 211 29861	Spring, IC	
10	3104 211 02881	Earth Spring	
1301	4822 265 11208	Flex Conn. 10P	not for 75W
1302	4822 267 10729	Flex Conn. 10P	not for 100W
1303	4822 267 10729	Flex Conn. 10P	not for 100W
1600	2422 540 98514	Ceram Resonator 602.7kHz	
1601	2422 540 98568	Ceram Resonator 700kHz	

CAPACITORS

2101	2222 580 15649	100nF 10% 50V	
2102	2222 580 15649	100nF 10% 50V	
2104	2222 601 55649	100nF 10% 100V	
2105	2222 580 15649	100nF 10% 50V	
2106	2020 021 91431	22uF 20% 100V	
2107	2222 601 55649	100nF 10% 100V	
2108	2222 580 15649	100nF 10% 50V	
2111	4822 126 13188	15nF 5% 63V	
2114	5322 116 80853	560pF 5% 63V	
2115	5322 116 80853	560pF 5% 63V	
2116	4822 121 51252	470nF 5% 63V	
2117	2222 581 15654	220nF 10% 50V	
2120	4822 126 13188	15nF 5% 63V	
2122	5322 116 80853	560pF 5% 63V	
2124	2222 581 15654	220nF 10% 50V	
2125	4822 121 51252	470nF 5% 63V	
2126	5322 116 80853	560pF 5% 63V	
2127	2222 580 15649	100nF 10% 50V	
2128	2222 580 15649	100nF 10% 50V	
2129	2222 580 15649	100nF 10% 50V	
2130	2222 580 15649	100nF 10% 50V	
2131	4822 126 14241	330pF 50V	
2134	2238 780 55654	220nF 10% 16V	
2135	4822 126 13956	68pF 5% 63V	
2136	4822 126 14241	330pF 50V	
2201	2222 580 15649	100nF 10% 50V	
2202	2222 580 15649	100nF 10% 50V	
2204	2222 601 55649	100nF 10% 100V	
2205	2222 580 15649	100nF 10% 50V	
2206	2020 021 91431	22uF 20% 100V	
2207	2222 601 55649	100nF 10% 100V	
2208	2222 580 15649	100nF 10% 50V	
2211	4822 126 13188	15nF 5% 63V	
2214	5322 116 80853	560pF 5% 63V	
2215	5322 116 80853	560pF 5% 63V	
2216	4822 121 51252	470nF 5% 63V	
2217	2222 581 15654	220nF 10% 50V	
2220	4822 126 13188	15nF 5% 63V	
2222	5322 116 80853	560pF 5% 63V	
2224	2222 581 15654	220nF 10% 50V	
2225	4822 121 51252	470nF 5% 63V	
2226	5322 116 80853	560pF 5% 63V	
2227	2222 580 15649	100nF 10% 50V	

2228	2222 580 15649	100nF 10% 50V	
2229	2222 580 15649	100nF 10% 50V	
2230	2222 580 15649	100nF 10% 50V	
2231	4822 126 14241	330pF 50V	
2234	2238 780 55654	220nF 10% 16V	
2235	4822 126 13956	68pF 5% 63V	
2236	4822 126 14241	330pF 50V	
2301	2222 580 15649	100nF 10% 50V	
2302	2222 580 15649	100nF 10% 50V	
2304	2222 601 55649	100nF 10% 100V	
2305	2222 580 15649	100nF 10% 50V	
2306	2020 021 91431	22uF 20% 100V	
2307	2222 601 55649	100nF 10% 100V	
2308	2222 580 15649	100nF 10% 50V	
2311	4822 126 13188	15nF 5% 63V	
2314	5322 116 80853	560pF 5% 63V	
2315	5322 116 80853	560pF 5% 63V	
2316	4822 121 51252	470nF 5% 63V	
2317	2222 581 15654	220nF 10% 50V	
2320	4822 126 13188	15nF 5% 63V	
2322	5322 116 80853	560pF 5% 63V	
2324	2222 581 15654	220nF 10% 50V	
2325	4822 121 51252	470nF 5% 63V	
2326	5322 116 80853	560pF 5% 63V	
2327	2222 580 15649	100nF 10% 50V	
2328	2222 580 15649	100nF 10% 50V	
2329	2222 580 15649	100nF 10% 50V	
2330	2222 580 15649	100nF 10% 50V	
2331	4822 126 14241	330pF 50V	
2334	2238 780 55654	220nF 10% 16V	
2335	4822 126 13956	68pF 5% 63V	
2336	4822 126 14241	330pF 50V	
2400	2222 580 15649	100nF 10% 50V	
2401	4822 124 80062	470uF 20% 35V	
2402	4822 124 80062	470uF 20% 35V	
2403	2222 580 15649	100nF 10% 50V	
2404	4822 124 80062	470uF 20% 35V	
2405	4822 124 80062	470uF 20% 35V	
2406	4822 123 14026	470uF 20% 35V	
2407	4822 123 14026	470uF 20% 35V	
2408	5322 126 11578	1nF 10% 50V	
2409	5322 126 11578	1nF 10% 50V	
2410	5322 126 11578	1nF 10% 50V	
2411	5322 126 11578	1nF 10% 50V	
2412	5322 126 11578	1nF 10% 50V	
2413	5322 126 11578	1nF 10% 50V	
2414	5322 126 11578	1nF 10% 50V	
2415	5322 126 11578	1nF 10% 50V	not for 100W
2416	5322 126 11578	1nF 10% 50V	not for 100W
2417	5322 126 11578	1nF 10% 50V	not for 100W
2418	5322 126 11578	1nF 10% 50V	not for 100W
2419	2238 586 59812	100nF 50V	

ELECTRICAL PARTS LIST - AMPLIFIER BOARD

2420	5322 126 11578	1nF 10% 50V	
2421	5322 126 11578	1nF 10% 50V	not for 100W
2422	5322 126 11578	1nF 10% 50V	not for 100W
2423	2238 586 59812	100nF 50V	
2425	5322 126 11578	1nF 10% 50V	
2600	2238 586 59812	100nF 50V	
2602	2020 552 94427	100pF 5% 50V	
2603	2020 552 94427	100pF 5% 50V	
2604	2238 586 59812	100nF 50V	
2605	4822 126 13881	470pF 5% 50V	
2606	5322 126 11578	1nF 10% 50V	
2607	2020 552 94427	100pF 5% 50V	
2608	2020 552 94427	100pF 5% 50V	
2700	2020 552 96507	10uF +80/-20% 10V	

RESISTORS

3100	4822 051 10568	5R6 5% 0.25W	
3101	4822 051 10568	5R6 5% 0.25W	
3102	4822 051 10568	5R6 5% 0.25W	
3103	2322 762 60229	22R 5% PRC221	
3104	2322 762 60229	22R 5% PRC221	
3105	4822 051 10568	5R6 5% 0.25W	
3106	4822 117 12925	47k 1% 0.062W	not for 75W
3107	4822 051 30109	10R 5% 0.062W	
3108	4822 117 12925	47k 1% 0.062W	not for 75W
3109	4822 051 30109	10R 5% 0.062W	
3200	4822 051 10568	5R6 5% 0.25W	
3201	4822 051 10568	5R6 5% 0.25W	
3202	4822 051 10568	5R6 5% 0.25W	
3203	2322 762 60229	22R 5% PRC221	
3204	2322 762 60229	22R 5% PRC221	
3205	4822 051 10568	5R6 5% 0.25W	
3206	4822 117 12925	47k 1% 0.062W	not for 75W
3207	4822 051 30109	10R 5% 0.062W	
3208	4822 117 12925	47k 1% 0.062W	not for 75W
3209	4822 051 30109	10R 5% 0.062W	
3300	4822 051 10568	5R6 5% 0.25W	
3301	4822 051 10568	5R6 5% 0.25W	
3302	4822 051 10568	5R6 5% 0.25W	
3303	2322 762 60229	22R 5% PRC221	
3304	2322 762 60229	22R 5% PRC221	
3305	4822 051 10568	5R6 5% 0.25W	
3306	4822 117 12925	47k 1% 0.062W	not for 75W
3307	4822 051 30109	10R 5% 0.062W	
3308	4822 117 12925	47k 1% 0.062W	not for 75W
3309	4822 051 30109	10R 5% 0.062W	
3400	4822 051 30562	5k6 5% 0.063W	not for 75W
3401	4822 051 30562	5k6 5% 0.063W	not for 100W
3402	4822 051 30562	5k6 5% 0.063W	not for 75W
3403	4822 051 30562	5k6 5% 0.063W	not for 75W
3404	4822 051 30221	220R 5% 0.062W	
3405	4822 051 30562	5k6 5% 0.063W	not for 100W

3406	4822 051 30562	5k6 5% 0.063W	not for 75W
3407	4822 051 30562	5k6 5% 0.063W	not for 75W
3408	4822 051 30221	220R 5% 0.062W	not for 100W
3409	4822 051 30221	220R 5% 0.062W	not for 75W
3410	4822 051 30562	5k6 5% 0.063W	not for 100W
3411	4822 051 30562	5k6 5% 0.063W	not for 100W
3412	4822 051 30221	220R 5% 0.062W	not for 100W
3413	4822 051 30562	5k6 5% 0.063W	not for 100W
3414	4822 051 30562	5k6 5% 0.063W	
3415	4822 051 30562	5k6 5% 0.063W	
3416	4822 051 30562	5k6 5% 0.063W	not for 75W
3417	4822 051 30562	5k6 5% 0.063W	not for 75W
3418	4822 051 30562	5k6 5% 0.063W	not for 75W
3419	4822 051 30562	5k6 5% 0.063W	not for 75W
3420	2322 615 23103	NTC 10k 5% 0.125W	
3421	4822 051 30562	5k6 5% 0.063W	
3422	4822 051 30101	100R 5% 0.062W	
3423	4822 051 30562	5k6 5% 0.063W	not for 100W
3424	4822 051 30562	5k6 5% 0.063W	not for 100W
3425	4822 051 30562	5k6 5% 0.063W	not for 100W
3426	4822 051 30562	5k6 5% 0.063W	not for 100W
3600	4822 051 30222	2k2 5% 0.062W	
3601	4822 051 30222	2k2 5% 0.062W	
3602	4822 117 13632	100k 1% 0.062W	
3604	4822 051 30103	10k 5% 0.062W	
3605	4822 051 30682	6k8 5% 0.062W	
3606	4822 117 13632	100k 1% 0.062W	
3607	4822 051 30102	1k 5% 0.062W	
3608	4822 051 30105	1M 5% 0.062W	
3609	4822 117 13632	100k 1% 0.062W	
3610	4822 117 12139	22R 5% 0.062W	
3700	4822 117 12925	47k 1% 0.063W	
3701	4822 117 12925	47k 1% 0.063W	
3703	4822 117 12925	47k 1% 0.063W	
3709	4822 117 12925	47k 1% 0.063W	
3712	4822 117 12925	47k 1% 0.063W	
3713	4822 051 30103	10k 5% 0.062W	
3716	4822 117 12925	47k 1% 0.063W	
3718	4822 117 12925	47k 1% 0.063W	
3721	4822 051 30103	10k 5% 0.062W	
3722	4822 051 30103	10k 5% 0.062W	
4132	4822 051 20008	0R JUMPER 0805	
4133	4822 051 20008	0R JUMPER 0805	
4137	4822 051 20008	0R JUMPER 0805	
4138	4822 051 20008	0R JUMPER 0805	
4232	4822 051 20008	0R JUMPER 0805	
4233	4822 051 20008	0R JUMPER 0805	
4237	4822 051 20008	0R JUMPER 0805	
4238	4822 051 20008	0R JUMPER 0805	
4332	4822 051 20008	0R JUMPER 0805	
4333	4822 051 20008	0R JUMPER 0805	
4337	4822 051 20008	0R JUMPER 0805	

ELECTRICAL PARTS LIST - MAINS & ECO STBY, SUPPLY, SPEAKER (SPK I) & SW-OUT (SPK II) BOARDS

MISCELLANEOUS

4822 492 11735	Spring, Transistor	
1200 4822 071 55002 Δ	Fuse T5A 250V	75W
1200 4822 252 51123 Δ	Fuse T6,3A 250V	100W
1203 4822 071 55002 Δ	Fuse T5A 250V	75W
1203 4822 252 51123 Δ	Fuse T6,3A 250V	100W
1204 9965 000 07786 Δ	Fuse T4A 250V	
1205 9965 000 07786 Δ	Fuse T4A 250V	
1263 4822 267 10733	Flex Socket 4P Vert,	
1270 2422 025 14044	Connector 6P	
1303 2422 015 19885	Speaker Socket 12P	Single SW
1304 2422 015 19887	Speaker Socket 10P	Twin SW
1305 2422 015 19886	Speaker Socket 4P	Twin SW
1901 4822 265 31015 Δ	Mains Socket 2A5 250V	/21R/21S/22S/25S
1901 2422 030 00328 Δ	Mains Socket 7A 125V	/37R
1905 4822 071 53152 Δ	Fuse T3.15A 250V	MX55000/21S
1905 9965 000 07788 Δ	Fuse T2A 250V	MX57000/22S/25S
1905 9965 000 07786 Δ	Fuse T4A 250V	MX57000/21R/21S
1905 4822 253 10126 Δ	Fuse T4A 250V	/37
1907 4822 265 20723	Connector 2P	
1908 4822 267 10958	Flex Socket 5P Hort,	
1909 4822 267 10728	Connector 4P	/21R/21S
1910 2422 132 07519 Δ	RELAY 1P 12V 16A OZ-SS L	
1911 9965 000 07789 Δ	Voltage Selector	/21R/21S
1912 9965 000 07788 Δ	Fuse T2A 250V	/21R/21S

CAPACITORS

2000 5322 126 11583	10nF 10% 50V	
2001 5322 126 11583	10nF 10% 50V	
2002 5322 126 11583	10nF 10% 50V	
2003 5322 126 11583	10nF 10% 50V	
2004 5322 126 11583	10nF 10% 50V	
2005 5322 126 11583	10nF 10% 50V	
2006 5322 126 11583	10nF 10% 50V	
2007 5322 126 11583	10nF 10% 50V	
2008 5322 126 11583	10nF 10% 50V	
2009 5322 126 11583	10nF 10% 50V	
2010 5322 126 11583	10nF 10% 50V	
2011 5322 126 11583	10nF 10% 50V	
2019 5322 126 11583	10nF 10% 50V	Twin SW
2020 5322 126 11583	10nF 10% 50V	Twin SW
2021 5322 126 11583	10nF 10% 50V	Twin SW
2022 5322 126 11583	10nF 10% 50V	Twin SW
2200 4822 126 12785	47nF 50V	
2201 5322 124 40641	10uF 20% 100V	
2202 4822 124 80231	47uF 20% 16V	
2203 5322 121 42578	100nF 5% 250V	
2204 5322 121 42578	100nF 5% 250V	
2205 5322 121 42578	100nF 5% 250V	
2206 4822 124 80563	4700uF 20% 35V	
2207 4822 124 80563	4700uF 20% 35V	
2208 4822 121 42661	330nF 5% 63V	
2209 5322 121 42578	100nF 5% 250V	

2211 4822 124 80563	4700uF 20% 35V	
2212 5322 121 42386	100nF 5% 63V	
2213 5322 121 42578	100nF 5% 250V	
2215 2020 012 93745	10mF 20% 16V	
2217 2020 561 90365	100nF +80/-20% 50V	
2218 4822 124 11947	10uF 20% 16V	
2219 4822 124 81286	47uF 20% 16V	
2220 4822 124 81286	47uF 20% 16V	
2222 4822 124 12056	1000uF 20% 35V	
2223 4822 124 12056	1000uF 20% 35V	
2224 4822 124 41643	100uF 20% 16V	
2225 4822 124 41643	100uF 20% 16V	
2901 2238 586 59812	100nF +80/-20% 50V	
2902 4822 121 43526	47nF 5% 250V	
2903 3198 017 34730	47nF 16V	
2904 2238 586 59812	100nF +80/-20% 50V	
2905 5322 126 11583	10nF 10% 50V	
2906 2222 336 19106	22nF 20% 275V	
2907 4822 124 40255	100uF 20% 63V	
2908 4822 121 10512	220nF 20% 275V	/22S/25S
2909 5322 126 11583	10nF 10% 50V	
2910 2238 586 59812	100nF +80/-20% 50V	/22S/25S
2911 4822 124 41584	100uF 20% 10V	
2912 4822 124 40207	100uF 20% 25V	
2913 2222 338 22474	470nF 20% 275V	/21R/21S/37
2914 4822 126 13193	4,7nF 10% 63V	
2915 2020 554 90173 Δ	2,2nF 20% 250V	

RESISTORS

3200 4822 116 52283	4k7 5% 0,5W	
3201 4822 051 30272	2k7 5% 0,062W	
3202 4822 051 30103	10k 5% 0,062W	
3203 4822 051 30103	10k 5% 0,062W	
3204 4822 117 12925	47k 1% 0,063W	
3205 4822 051 30103	10k 5% 0,062W	
3206 4822 051 30681	680R 5% 0,062W	
3207 4822 051 30331	330R 5% 0,062W	
3208 4822 051 30681	680R 5% 0,062W	
3209 4822 051 30472	4k7 5% 0,062W	
3216 4822 051 30331	330R 5% 0,062W	
3217 4822 051 30682	6k8 5% 0,062W	
3218 4822 051 30153	15k 5% 0,062W	
3219 4822 051 30102	1k 5% 0,062W	
3222 4822 051 30102	1k 5% 0,062W	
3223 4822 117 13632	100k 1% 0,62W	
3224 4822 116 83872	220R 5% 0,5W	
3225 4822 052 10828	8R2 5% 0,33W	
3226 4822 051 30471	470R 5% 0,062W	
3227 4822 051 30102	1k 5% 0,062W	
3229 4822 051 30472	4k7 5% 0,062W	
3901 4822 053 21106 Δ	10M 5% 0,5W	/37
3902 4822 051 30103	10k 5% 0,062W	

ELECTRICAL PARTS LIST - MAINS & ECO STBY, SUPPLY, SPEAKER (SPK I) & SW-OUT (SPK II) BOARDS

3903 4822 051 30475	4M7 5% 0,062W	
3904 4822 051 30331	330R 5% 0,062W	
3905 4822 051 30681	680R 5% 0,062W	
3906 4822 117 13632	100k 1% 0,62W	
3907 4822 051 30333	33k 5% 0,062W	
3908 4822 051 30105	1M 5% 0,062W	
3909 4822 051 30471	470R 5% 0,062W	
3910 4822 051 30222	2k2 5% 0,062W	
3911 4822 117 13632	100k 1% 0,62W	
3913 4822 117 12925	47k 1% 0,063W	
3914 4822 117 12925	47k 1% 0,063W	
3915 4822 053 21106	10M 5% 0,5W	
3916 4822 051 30334	330k 5% 0,062W	
3917 4822 116 52175	100R 5% 0,5W	
3918 4822 116 52175	100R 5% 0,5W	
3919 4822 051 30152	1k5 5% 0,062W	
3920 4822 051 30472	4k7 5% 0,062W	
4210 4822 051 30008	0R Jumper 0603	
4211 4822 051 30008	0R Jumper 0603	
4212 4822 051 30008	0R Jumper 0603	

COILS & FILTERS

5901 4822 157 11832 Δ	Mains Filter 400uH 3A	
5902 4822 157 53473	Coil 1000uH 10%	
5903 4822 157 53473	Coil 1000uH 10%	
5904 4822 157 11228	Coil 100uH 5%	
5905 2422 549 45157	Standby Transformer	

DIODES

6200 4822 130 30621	1N4148	
6201 3198 010 52790	BZX79-B27	
6202 4822 130 31878	1N4003G	
6203 4822 130 34382	BZX79-88V2	
6205 3198 010 52790	BZX79-B27	
6208 4822 130 11397	BAS316	
6209 4822 130 11397	BAS316	
6211 4822 130 11139	GBU8D	
6212 3198 010 10640	GBU4K	
6214 4822 130 30621	1N4148	
6215 4822 130 34174	BZX79-B4V7	
6216 4822 130 34145	BZX79-B39	
6901 4822 130 31878	1N4003G	
6902 4822 130 31878	1N4003G	
6903 4822 130 11397	BAS316	
6904 4822 130 11397	BAS316	
6905 4822 130 11397	BAS316	
6906 4822 130 31878	1N4003G	
6907 4822 130 11397	BAS316	
6908 4822 130 30621	1N4148	
6909 4822 130 11397	BAS316	
6910 4822 130 11397	BAS316	
6911 4822 130 11397	BAS316	

6912 4822 130 31878	1N4003G	
6914 4822 130 11397	BAS316	
6915 4822 130 34173	BZX79-C5V6	
6916 4822 130 31878	1N4003G	
6917 4822 130 34145	BZX79-B39	
6918 4822 130 11397	BAS316	
6919 4822 130 11397	BAS316	
6920 4822 130 11397	BAS316	
6921 4822 130 11397	BAS316	

TRANSISTORS & INTEGRATED CIRCUITS

7200 9340 561 95127	BUK7535-55A	
7202 9340 561 95127	BUK7535-55A	
7203 5322 130 60159	BC847B	
7205 4822 130 60373	BC857B	
7206 4822 130 60373	BC857B	
7207 5322 130 60159	BC847B	
7208 4822 209 33575	L7812CP	
7209 4822 209 12335	L4941	
7210 4822 130 41246	BC327-25	
7901 4822 130 60373	BC857B	
7902 4822 130 40855	BC337-40	
7904 4822 130 42615	BC817-40	
7905 4822 130 41327	BC327-40	
7906 4822 130 42804	BC817-25	

Note: Only the parts mentioned in this list are normal service spare parts.

ELECTRICAL PARTS LIST - AMPLIFIER BOARD

RESISTORS			
4338	4822 051 20008	0R JUMPER 0805	
4400	4822 051 30008	0R JUMPER 0603	not for 75W

COILS & FILTERS			
5102	2422 536 00496	IND. FXD. 22uH 10%	
5103	2422 536 00496	IND. FXD. 22uH 10%	
5202	2422 536 00496	IND. FXD. 22uH 10%	
5203	2422 536 00496	IND. FXD. 22uH 10%	
5302	2422 536 00496	IND. FXD. 22uH 10%	
5303	2422 536 00496	IND. FXD. 22uH 10%	
5400	4822 157 11411	FXD. IND. BEAD 100MHZ 80R	
5401	4822 157 11411	FXD. IND. BEAD 100MHZ 80R	

DIODES			
6600	3198 020 55680	BZX384-C5V6	
6713	4822 130 11397	BAS316	
6714	4822 130 11397	BAS316	
6715	4822 130 11397	BAS316	

TRANSISTORS & INTEGRATED CIRCUITS			
7100	9352 705 74518	TDA8920TH/N1R	
7200	9352 705 74518	TDA8920TH/N1R	
7300	9352 705 74518	TDA8920TH/N1R	
7600	5322 209 11517	PC74HCU04T	
7602	5322 130 60159	BC847B	
7607	5322 209 14477	HEF4013BT	
7608	4822 130 60373	BC857B	
7710	5322 130 60159	BC847B	
7716	4822 130 60373	BC857B	

Note: Only the parts mentioned in this list are normal service spare parts.

AV BOARD

TABLE OF CONTENTS

Brief Introduction of the AV Board 12-1

Inputs, Source Sel. & Vol cont. L/R Circuit 12-2

HP amp / Pre-amp., Supply & Interconnection Circuit 12-3

Volume cont. Surr L/R, Cen & SW & Multiplexer Circuit 12-4

Digital in/out, S-video, Scart, & I²C Expander Circuit 12-5

Bottom view - Chip & Discrete layouts (Part A to D) 12-6

Top view - Component & Chip layouts (Part E to H) 12-7

Bottom view Part A 12-8

Bottom view Part B 12-9

Bottom view Part C 12-10

Bottom view Part D 12-11

Top view Part E 12-12

Top view Part F 12-13

Top view Part G 12-14

Top view Part H 12-15


Electrical parts list 12-16

BRIEF INTRODUCTION OF THE AV BOARD

The AV Board consists of the following features :

- a. IC 7130 (TDA7468D)
IC 7130 provides the source selection (TUNER, TV/AV Digital in, DVD/CD & AUX) and basic sound processing - bass, treble, volume & mute controls for the Front L/R loudspeakers.
Note: Although provided for, the AUX source (pin 3 and 26) are never selected & instead an additional IC 7422 (HEF4052BT) is used to include a TV in from the Scart connector socket.
Sound features are controlled by the microprocessor IC on the Front Board via I²C Bus.
Undesirable noise during source switching are muted off via the software of the microprocessor IC on the Front Board.
- b. IC 7422 (HEF4052BT)
This IC allows the addition of another TV source via the SCART connector socket. The output MUX_L/MUX_R will go to pin 4 and 25 of IC 7130.
- c. Line out mute
Line out mute is done via the transistors 7100, 7132, 7133 and 7150 during Power up/down, Source and sound switching (MUTE-LO, active low) and Disc & Digital in modes (MUTE_AV, active high).
- d. Headphone amplifier / pre-amplifier
IC 7230 (NJM4556AM) is used as headphone amplifier and pre-amplification for the Front L/R signal to the Amplifier board. The transistors matrix 7200, 7231, 7232, 7233 and 7250 allows the headphone out to be muted when inserting the headphone
- e. IC 7304 and 7330 (TDA7468D)
IC 7304 and 7330 provides creation of matrix sound (via Line-L/R from IC 7130) during non-DVD source and sound processing - bass, treble, volume & mute controls for the Center/Subwoofer and Surround L/R loudspeakers respectively.
Sound features are controlled by the microprocessor IC on the Front Board via I²C Bus.
Undesirable noise during source switching are muted off via the software of the microprocessor IC on the Front Board.
- f. IC 7352 (74HC4051D)
This multiplexer output (MUX_DET) informs the microprocess IC on the Front Board on the type of connection & condition the set is in.
- g. IC 7402 (M62320FP)
The IC serves as I²C Expander to provide for additional control lines required.


INPUT, SOURCE SELECT & VOLUME CONTROL L/R CIRCUIT

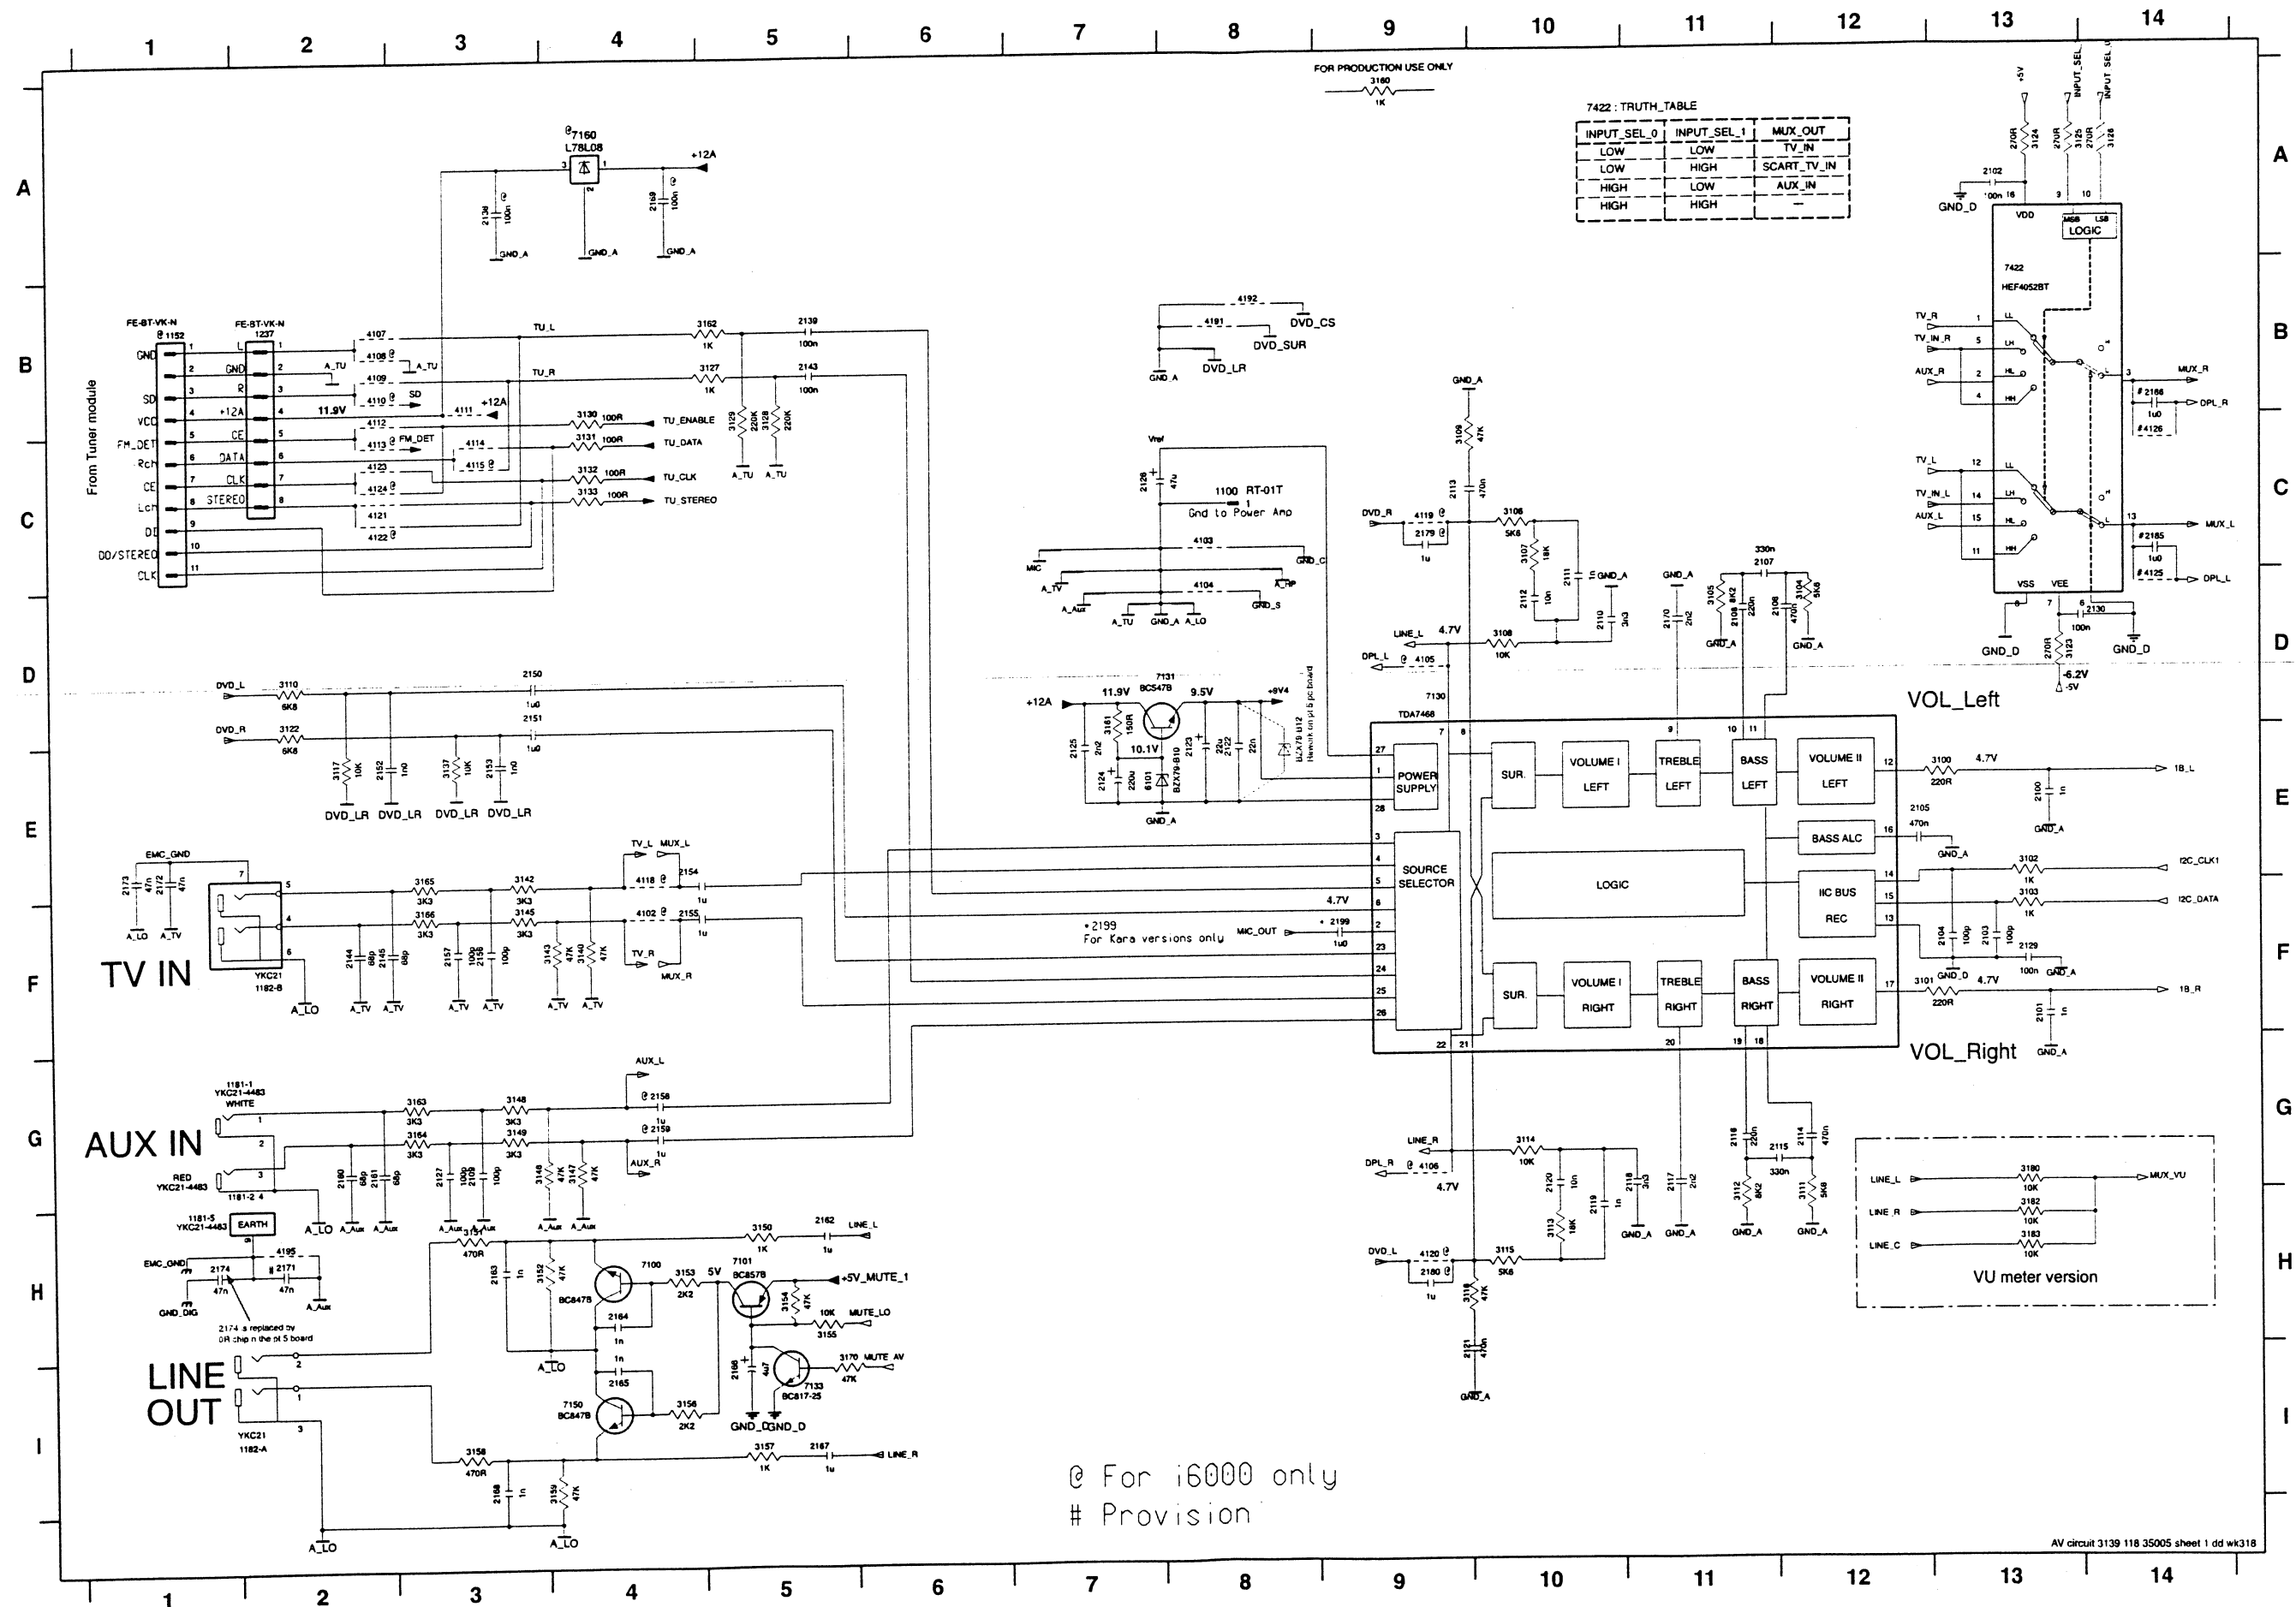

1100 C8
1152 B1
1181-1 G2
1181-2 G2
1181-5 H1
1182-A I2
1182-B F2
1237 B2
2100 E13
2101 F13
2102 A13
2103 F13
2104 F13
2105 E12
2106 D11
2107 C11
2108 D11
2109 C3
2110 D10
2111 D10
2112 D10
2113 C9
2114 G12
2115 G12
2116 G11
2117 G11
2118 H10
2119 H10
2120 G10
2121 B
2122 E8
2123 E8
2124 E7
2125 E7
2126 C7
2127 G3
2129 F13
2130 D14
2136 A3
2139 B5
2143 B5
2144 F2
2145 F2
2150 D3
2151 D3
2152 E2
2153 E3
2154 E4
2155 F4
2156 F3
2157 F3
2158 G4
2159 G4
2160 G2
2161 G2
2162 H5
2163 H3
2164 H4
2165 I4
2166 I5
2167 I5
2168 I3
2169 A4
2170 D11
2171 H2
2172 E1
2173 E1
2174 H1
2179 C9
2180 H9
2185 C14
2186 B14
2199 F9
3100 E13
3101 F12
3102 E13
3103 F13
3104 D12
3105 D11
3106 C10
3107 C10
3108 D10
3109 C9
3110 D2
3111 H12
3112 H11
3113 H10
3114 G10
3115 H10
3116 H9
3117 E2
3122 D2
3123 D13
3124 A13
3125 A13
3126 A14
3127 B5
3128 B5
3129 B5
3130 B4
3131 C4
3132 C4
3133 C4
3137 E3
3140 F4
3142 E3
3143 F4
3145 F3
3146 G3
3147 G4
3148 G3
3149 G3
3150 H5
3151 H3
3152 H3
3153 H4
3154 H5
3155 H5
3156 I4
3157 I5
3158 I4
3159 I4
3160 A9
3161 D7
3162 B5
3163 G3
3164 G3
3165 E3
3166 F3
3170 I5
3180 G13
3182 H13
3183 H13
4102 F4
4103 C8
4104 D8
4105 D9
4106 G9
4107 B2
4108 B2
4109 B2
4110 B2
4111 B3
4112 B2
4113 C2
4114 C3
4115 C3
4116 E4
4118 C9
4119 C9
4120 H9
4121 C2
4122 C2
4123 C2
4124 C2
4125 D14
4126 C14
4191 B8
4192 B8
4195 H2
6101 E7
7100 H4
7101 H5
7131 D7
7133 I5
7150 I4
7160 A4


PRE-AMPLIFIER, SUPPLY & INTERCONNECTION CIRCUIT

1200 E9	1233 E9	1240 D12	1245 D13	2208 F3	2213 C1	2218 G1	2226 G5	2231 H9	2242 E6	2263 D8	3204 B7	3209 A5	3214 B4	3231 D2	3236 E1	3243 H2	3254 G7	3261 G6	3269 G7	3274 E5	3291 A10	4204 H13	4209 A9	5232 F3	6204 H1	6226 H2	7205 G2	7210 G5	7233 A7
1201 E9	1235 A11	1241 A12	1246 A12	2209 D2	2214 D2	2219 G2	2227 F8	2232 G8	2254 G7	3200 A2	3205 A6	3210 B5	3215 H7	3232 F1	3237 C1	3244 H2	3256 B2	3262 H9	3270 D9	3275 E5	4200 F12	4205 A12	4280 C8	6200 A2	6205 F7	6227 E5	7206 G8	7211 H7	7250 B4
1230 B9	1236 B10	1242 A13	2201 A1	2210 E2	2215 C1	2220 G3	2228 H2	2233 C2	2280 D8	3201 A2	3206 A6	3210 A4	3224 D8	3233 D1	3238 F3	3245 G9	3257 C2	3263 H9	3271 D9	3276 E5	4201 F12	4206 A12	4281 D8	6201 A2	6223 G5	6228 E5	7207 H9	7230 D3	7252 E5
1231 D10	1238 G12	1243 B9	2202 B6	2211 D2	2216 F2	2224 G6	2229 H1	2240 H5	2281 D8	3202 H6	3207 A5	3212 B4	3225 D8	3234 F1	3239 H7	3250 H9	3259 G5	3265 G5	3272 E5	3277 E5	4202 F13	4207 A12	5201 H6	6202 H6	6224 G5	7200 A4	7208 F7	7231 A5	7253 E6
1232 C10	1239 D12	1244 G12	2207 D3	2212 F2	2217 F1	2225 G5	2230 H2	2241 H6	2282 C8	3203 B7	3208 B5	3213 A4	3230 E2	3235 D1	3240 H5	3252 F7	3260 H9	3268 H9	3273 E5	3290 A10	4203 F13	4208 A12	5202 G6	6203 H6	6225 F7	7204 F5	7209 G7	7232 A6	9291 A10

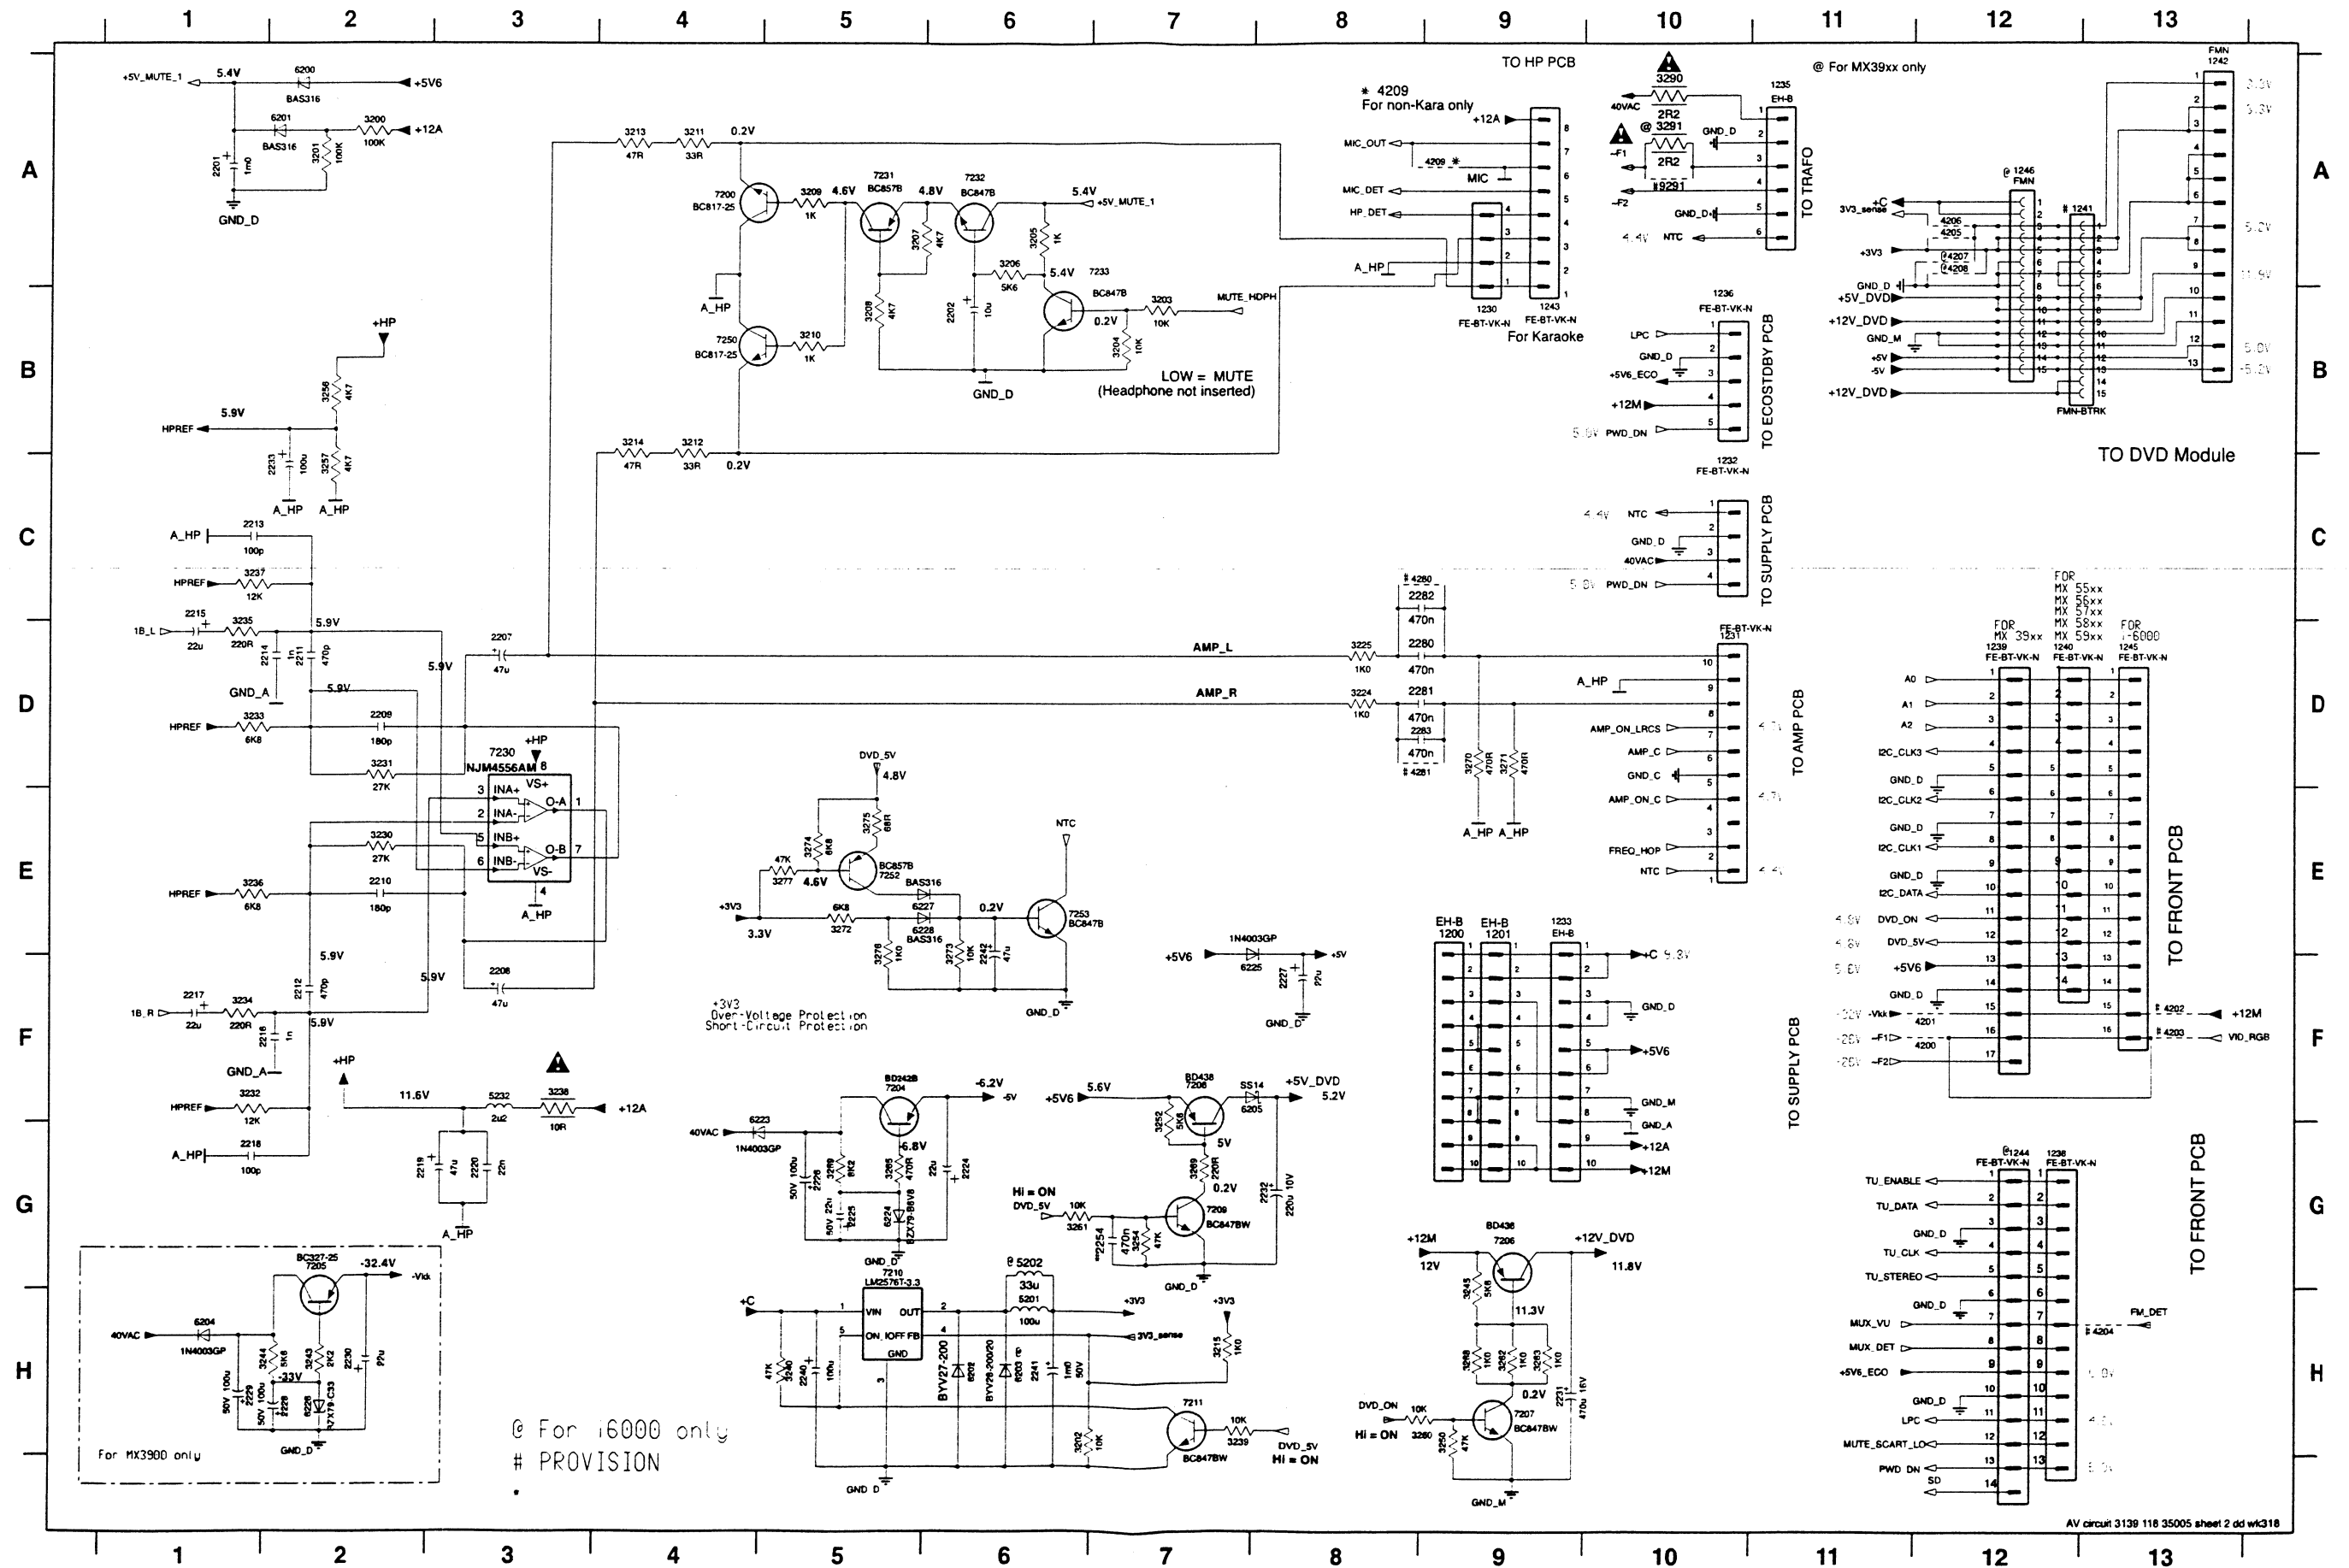

VOLUME CONTROL SURR., CENTER & SW AND CONTROL MULTIPLEXER CIRCUIT

1234 E11 2303 C8 2308 D7 2311 B3 2314 C3 2320 C1 2324 F9 2327 G7 2330 G7 2333 H6 2336 F3 2339 G3 2342 G1 2349 A13 2380 G8 3302 G8 3305 B7 3308 D8 3312 A3 3315 C2 3318 C1 3321 C1 3325 F9 3328 G8 3334 G2 3337 E2 3340 F1 3343 G1 3349 H6 3357 C11 3369 B13 4342 E1
 2128 C7 2304 B7 2309 A5 2312 B3 2318 F8 2321 D1 2325 F7 2328 G7 2331 E5 2334 H6 2337 F3 2340 C7 2343 G1 2352 C8 2381 G8 3303 G7 3306 C8 3310 B6 3313 B2 3316 D2 3319 C1 3322 F7 3326 F8 3329 F8 3333 E6 3336 C7 3339 G2 3342 G2 3347 F1 3355 C11 3359 B11 3370 C13 4341 B1 7301 F8
 2302 B8 2305 B7 2310 D5 2313 B2 2319 C1 2322 D1 2326 F7 2329 G8 2332 H6 2335 H5 2338 F2 2341 F1 2344 H1 2353 G8 3135 H6 3304 B8 3307 C8 3311 D6 3314 C2 3317 D2 3320 C1 3324 F10 3327 F8 3333 E6 3336 C7 3339 G2 3342 G2 3347 F1 3355 C11 3359 B11 3370 C13 4341 B1 7301 F8 7302 F9

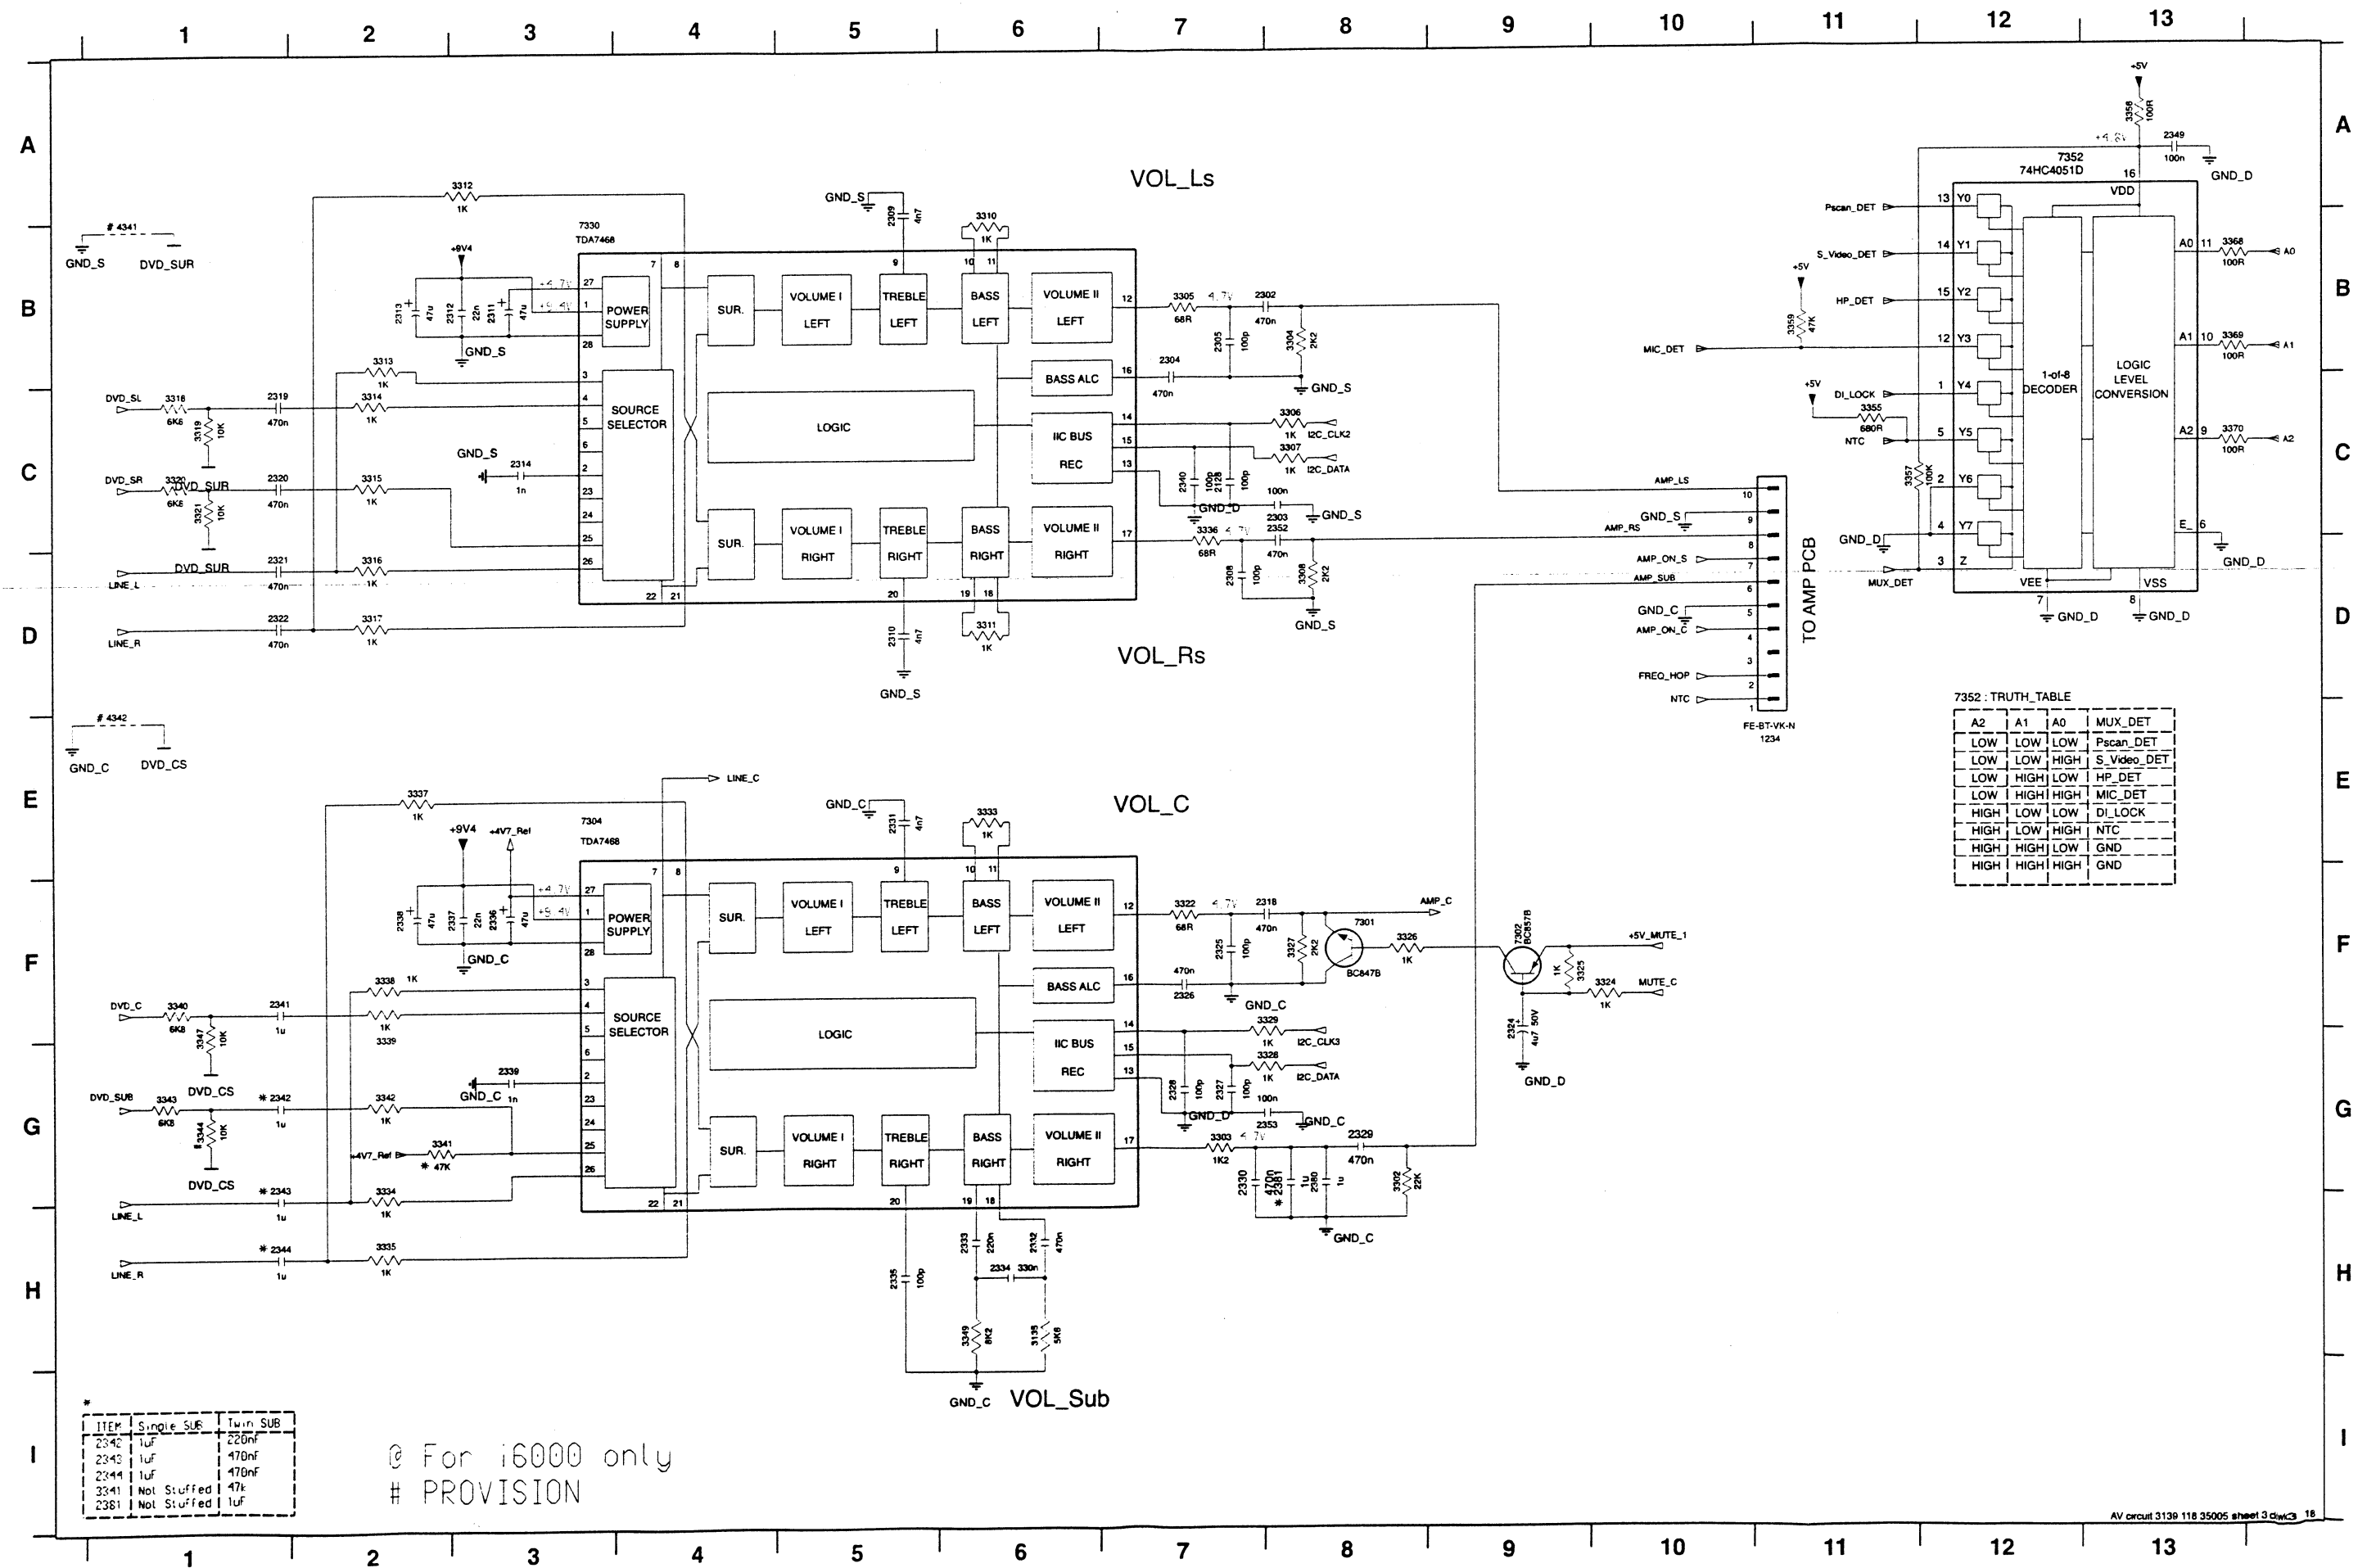

1181-G G1	1401 A1	2403 D12	2412 F13	2421 H6	2428 G3	2435 A9	3405 B11	3418 I10	3426 F12	3434 E8	3444 G2	3451 C3	3459 E4	3466 B8	4115 H13	4406 E8	4413 B13	4421 C6	4430 B12	5405 D9	6404 B13	7405 E7	7431 D11
1181-H G1	1404 A2	2404 D12	2422 I5	2429 H2	2436 B9	3411 B3	3419 I10	3427 E12	3435 F9	3445 I2	3452 C4	3460 A7	3467 A9	4400 H2	4414 B13	4422 C6	4432 C12	5406 D9	6406 E9	7406 E9	7451 D4		
1183-A G13	1405 E2	2407 H14	2414 A10	2423 H1	2430 B8	3400 A12	3413 C12	3420 H9	3428 E12	3436 C12	3446 H2	3461 B7	3468 B9	4401 G3	4408 D9	4415 H8	4424 G11	4436 C12	5407 E10	6406 B13	7407 E11	7452 E4	
1183-B H13	1406 E1	2408 H13	2415 B10	2424 G3	2431 A7	3401 B12	3414 C12	3421 C4	3430 B12	3437 E10	3447 F9	3455 C4	3462 A7	3472 H5	4409 I9	4416 H6	4425 G11	4431 G3	5408 F9	6407 B13	7410 E11	7454 B7	
1184 F13	2400 A11	2409 G12	2417 A4	2425 H2	2432 B7	3402 A11	3415 D10	3422 C4	3438 F11	3446 G10	3453 D4	3463 A8	3473 G6	4403 E9	4410 I9	4418 F9	4426 F12	5402 G2	5409 H9	6408 C13	7411 D10	7455 A8	
1186 A12	2401 B12	2410 G12	2418 A4	2426 H3	2433 A9	3403 A11	3416 D9	3424 G11	3432 F6	3441 A3	3449 H9	3457 E4	3464 B8	3474 G13	4404 E11	4411 F9	4419 G9	4427 F12	5403 E6	6402 A13	6409 D13	7421 H10	
1187 G6	2402 B4	2411 F3	2420 H5	2427 I2	2434 B9	3404 B11	3417 D10	3425 G11	3433 C12	3442 A4	3450 H10	3458 E4	3465 A8	3480 I5	4405 E6	4412 G9	4420 C11	4428 E12	5404 E8	6403 A13	7132 A8	7423 F10	



BOTTOM VIEW - SMD & COMPONENT


1	2	3	4	5	6	7	8
9	10	11	12	13	14	15	16
17	18	19	20	21	22	23	24
25	26	27	28	29	30	31	32
33	34	35	36	37	38	39	40
41	42	43	44	45	46	47	48
49	50	51	52	53	54	55	56
57	58	59	60	61	62	63	64
65	66	67	68	69	70	71	72
73	74	75	76	77	78	79	80
81	82	83	84	85	86	87	88
89	90	91	92	93	94	95	96
97	98	99	100	101	102	103	104
105	106	107	108	109	110	111	112
113	114	115	116	117	118	119	120
121	122	123	124	125	126	127	128
129	130	131	132	133	134	135	136
137	138	139	140	141	142	143	144
145	146	147	148	149	150	151	152
153	154	155	156	157	158	159	160
161	162	163	164	165	166	167	168
169	170	171	172	173	174	175	176
177	178	179	180	181	182	183	184
185	186	187	188	189	190	191	192
193	194	195	196	197	198	199	200
201	202	203	204	205	206	207	208
209	210	211	212	213	214	215	216
217	218	219	220	221	222	223	224
225	226	227	228	229	230	231	232
233	234	235	236	237	238	239	240
241	242	243	244	245	246	247	248
249	250	251	252	253	254	255	256
257	258	259	260	261	262	263	264
265	266	267	268	269	270	271	272
273	274	275	276	277	278	279	280
281	282	283	284	285	286	287	288
289	290	291	292	293	294	295	296
297	298	299	300	301	302	303	304
305	306	307	308	309	310	311	312
313	314	315	316	317	318	319	320
321	322	323	324	325	326	327	328
329	330	331	332	333	334	335	336
337	338	339	340	341	342	343	344
345	346	347	348	349	350	351	352
353	354	355	356	357	358	359	360
361	362	363	364	365	366	367	368
369	370	371	372	373	374	375	376
377	378	379	380	381	382	383	384
385	386	387	388	389	390	391	392
393	394	395	396	397	398	399	400
401	402	403	404	405	406	407	408
409	410	411	412	413	414	415	416
417	418	419	420	421	422	423	424
425	426	427	428	429	430	431	432
433	434	435	436	437	438	439	440
441	442	443	444	445	446	447	448
449	450	451	452	453	454	455	456
457	458	459	460	461	462	463	464
465	466	467	468	469	470	471	472
473	474	475	476	477	478	479	480
481	482	483	484	485	486	487	488
489	490	491	492	493	494	495	496
497	498	499	500	501	502	503	504
505	506	507	508	509	510	511	512
513	514	515	516	517	518	519	520
521	522	523	524	525	526	527	528
529	530	531	532	533	534	535	536
537	538	539	540	541	542	543	544
545	546	547	548	549	550	551	552
553	554	555	556	557	558	559	560
561	562	563	564	565	566	567	568
569	570	571	572	573	574	575	576
577	578	579	580	581	582	583	584
585	586	587	588	589	590	591	592
593	594	595	596	597	598	599	600
601	602	603	604	605	606	607	608
609	610	611	612	613	614	615	616
617	618	619	620	621	622	623	624
625	626	627	628	629	630	631	632
633	634	635	636	637	638	639	640
641	642	643	644	645	646	647	648
649	650	651	652	653	654	655	656
657	658	659	660	661	662	663	664
665	666	667	668	669	670	671	672
673	674	675	676	677	678	679	680
681	682	683	684	685	686	687	688
689	690	691	692	693	694	695	696
697	698	699	700	701	702	703	704
705	706	707	708	709	710	711	712
713	714	715	716	717	718	719	720
721	722	723	724	725	726	727	728
729	730	731	732	733	734	735	736
737	738	739	740	741	742	743	744
745	746	747	748	749	750	751	752
753	754	755	756	757	758	759	760
761	762	763	764	765	766	767	768
769	770	771	772	773	774	775	776
777	778	779	780	781	782	783	784
785	786	787	788	789	790	791	792
793	794	795	796	797	798	799	800
801	802	803	804	805	806	807	808
809	810	811	812	813	814	815	816
817	818	819	820	821	822	823	824
825	826	827	828	829	830	831	832
833	834	835	836	837	838	839	840
841	842	843	844	845	846	847	848
849	850	851	852	853	854	855	856
857	858	859	860	861	862	863	864
865	866	867	868	869	870	871	872
873	874	875	876	877	878	879	880
881	882	883	884	885	886	887	888
889	890	891	892	893	894	895	896
897	898	899	900	901	902	903	904
905	906	907	908	909	910	911	912
913	914	915	916	917	918	919	920
921	922	923	924	925	926	927	928
929	930	931	932	933	934	935	936
937	938	939	940	941	942	943	944
945	946	947	948	949	950	951	952
953	954	955	956	957	958	959	960
961	962	963	964	965	966	967	968
969	970	971	972	973	974	975	976
977	978	979	980	981	982	983	984
985	986	987	988	989	990	991	992
993	994	995	996	997	998	999	1000

This assembly drawing shows a summary of all possible versions. For components used in a specific version see schematic diagram and respective parts list

PART A


The following reworks are made at prod. start-up on the SMD side:

1. 2 chip cap 4.7nF (4822 126 13193) added across Scart connector pins 2/4 and 4/6.
2. Wire added between Scart pin 5 to ground pin 1100.
3. Wire added between Elco 2126 -ve pin and 2123 -ve pin.
4. Zener diode BZX79-C12 (4822 130 34197) is added across Elco 2123 with the cathode to the +ve pin.
5. Wire added between EMC ground to Dig ground below the Digital In/Out socket 1181

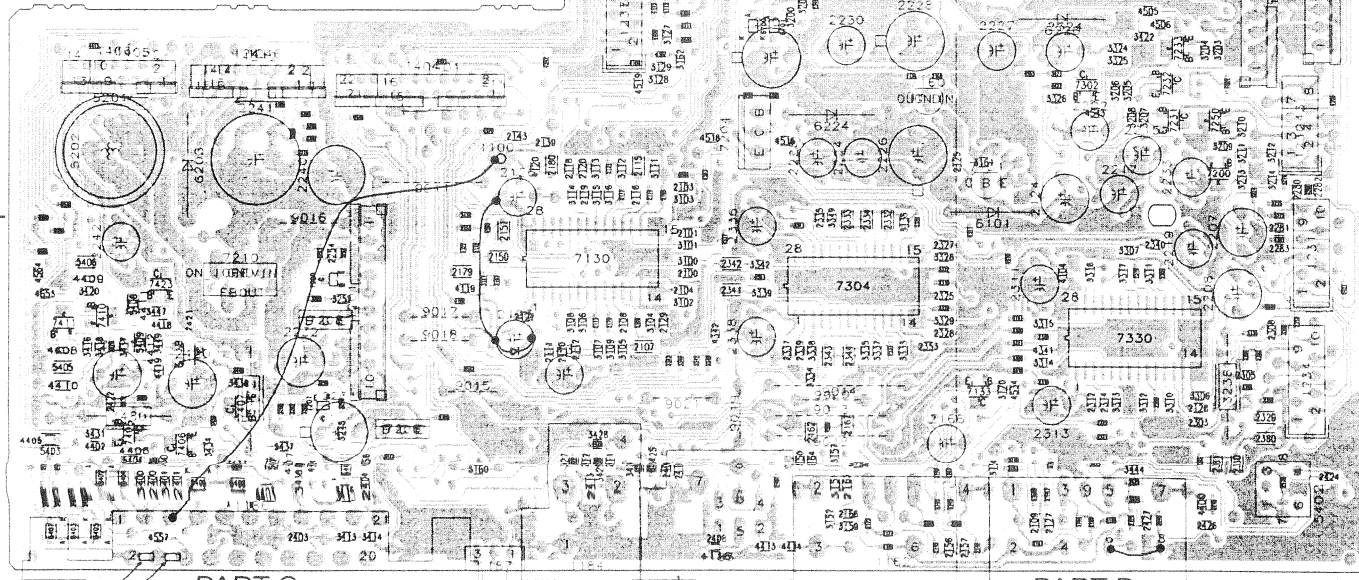


3139 113 3560 p5 do w318


1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80	81	82	83	84	85	86	87	88	89	90	91	92	93	94	95	96	97	98	99	100	101	102	103	104	105	106	107	108	109	110	111	112	113	114	115	116	117	118	119	120	121	122	123	124	125	126	127	128	129	130	131	132	133	134	135	136	137	138	139	140	141	142	143	144	145	146	147	148	149	150	151	152	153	154	155	156	157	158	159	160	161	162	163	164	165	166	167	168	169	170	171	172	173	174	175	176	177	178	179	180	181	182	183	184	185	186	187	188	189	190	191	192	193	194	195	196	197	198	199	200	201	202	203	204	205	206	207	208	209	210	211	212	213	214	215	216	217	218	219	220	221	222	223	224	225	226	227	228	229	230	231	232	233	234	235	236	237	238	239	240	241	242	243	244	245	246	247	248	249	250	251	252	253	254	255	256	257	258	259	260	261	262	263	264	265	266	267	268	269	270	271	272	273	274	275	276	277	278	279	280	281	282	283	284	285	286	287	288	289	290	291	292	293	294	295	296	297	298	299	300	301	302	303	304	305	306	307	308	309	310	311	312	313	314	315	316	317	318	319	320	321	322	323	324	325	326	327	328	329	330	331	332	333	334	335	336	337	338	339	340	341	342	343	344	345	346	347	348	349	350	351	352	353	354	355	356	357	358	359	360	361	362	363	364	365	366	367	368	369	370	371	372	373	374	375	376	377	378	379	380	381	382	383	384	385	386	387	388	389	390	391	392	393	394	395	396	397	398	399	400	401	402	403	404	405	406	407	408	409	410	411	412	413	414	415	416	417	418	419	420	421	422	423	424	425	426	427	428	429	430	431	432	433	434	435	436	437	438	439	440	441	442	443	444	445	446	447	448	449	450	451	452	453	454	455	456	457	458	459	460	461	462	463	464	465	466	467	468	469	470	471	472	473	474	475	476	477	478	479	480	481	482	483	484	485	486	487	488	489	490	491	492	493	494	495	496	497	498	499	500	501	502	503	504	505	506	507	508	509	510	511	512	513	514	515	516	517	518	519	520	521	522	523	524	5
---	---	---	---	---	---	---	---	---	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	---

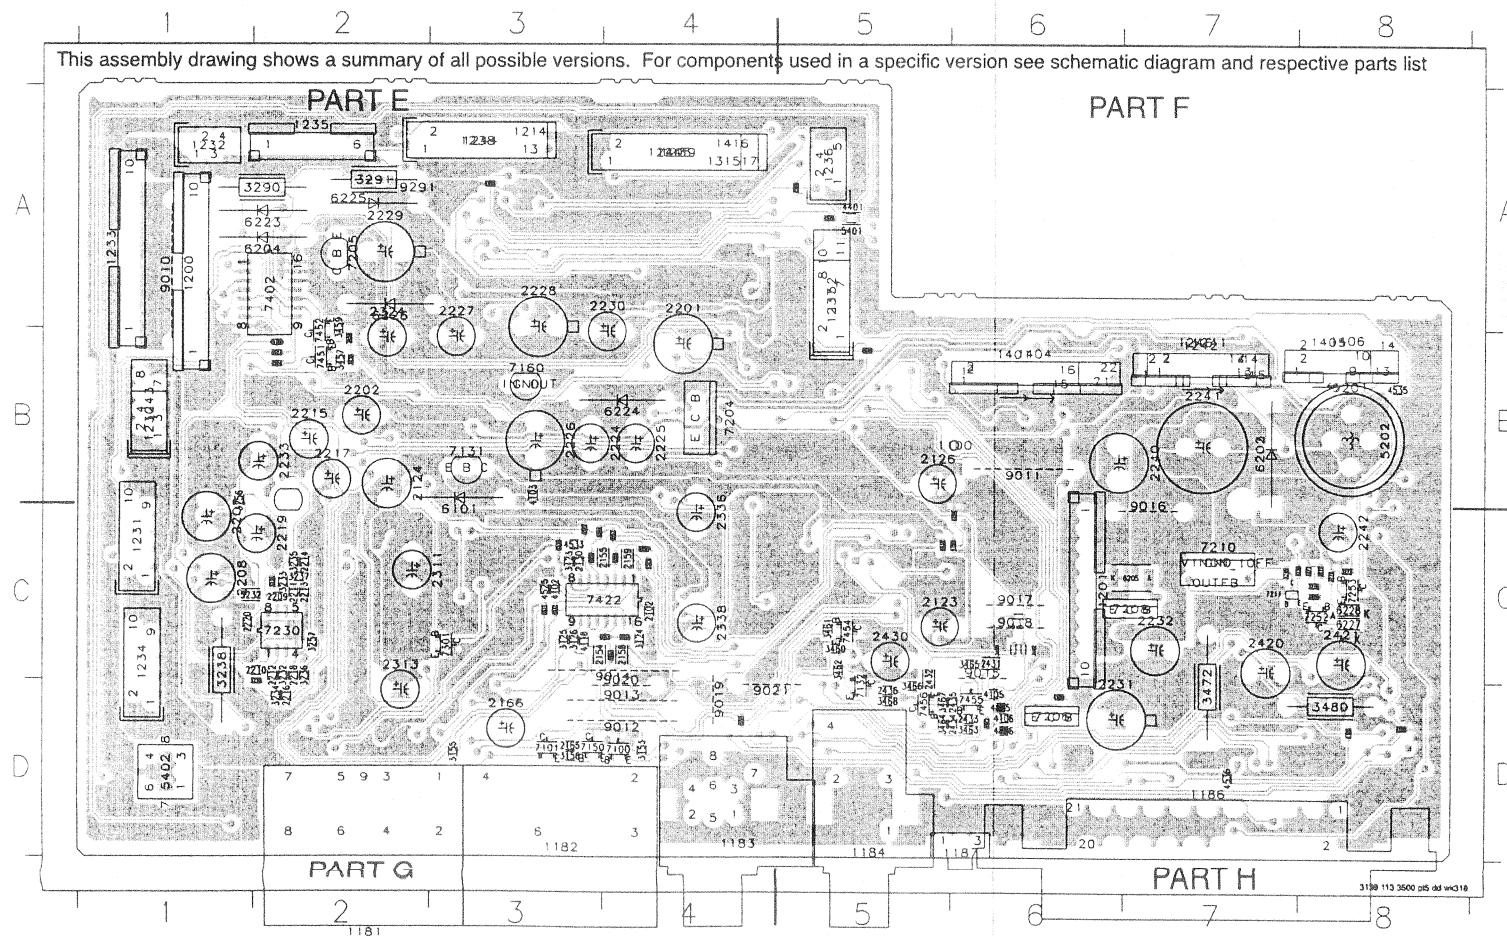


PART A

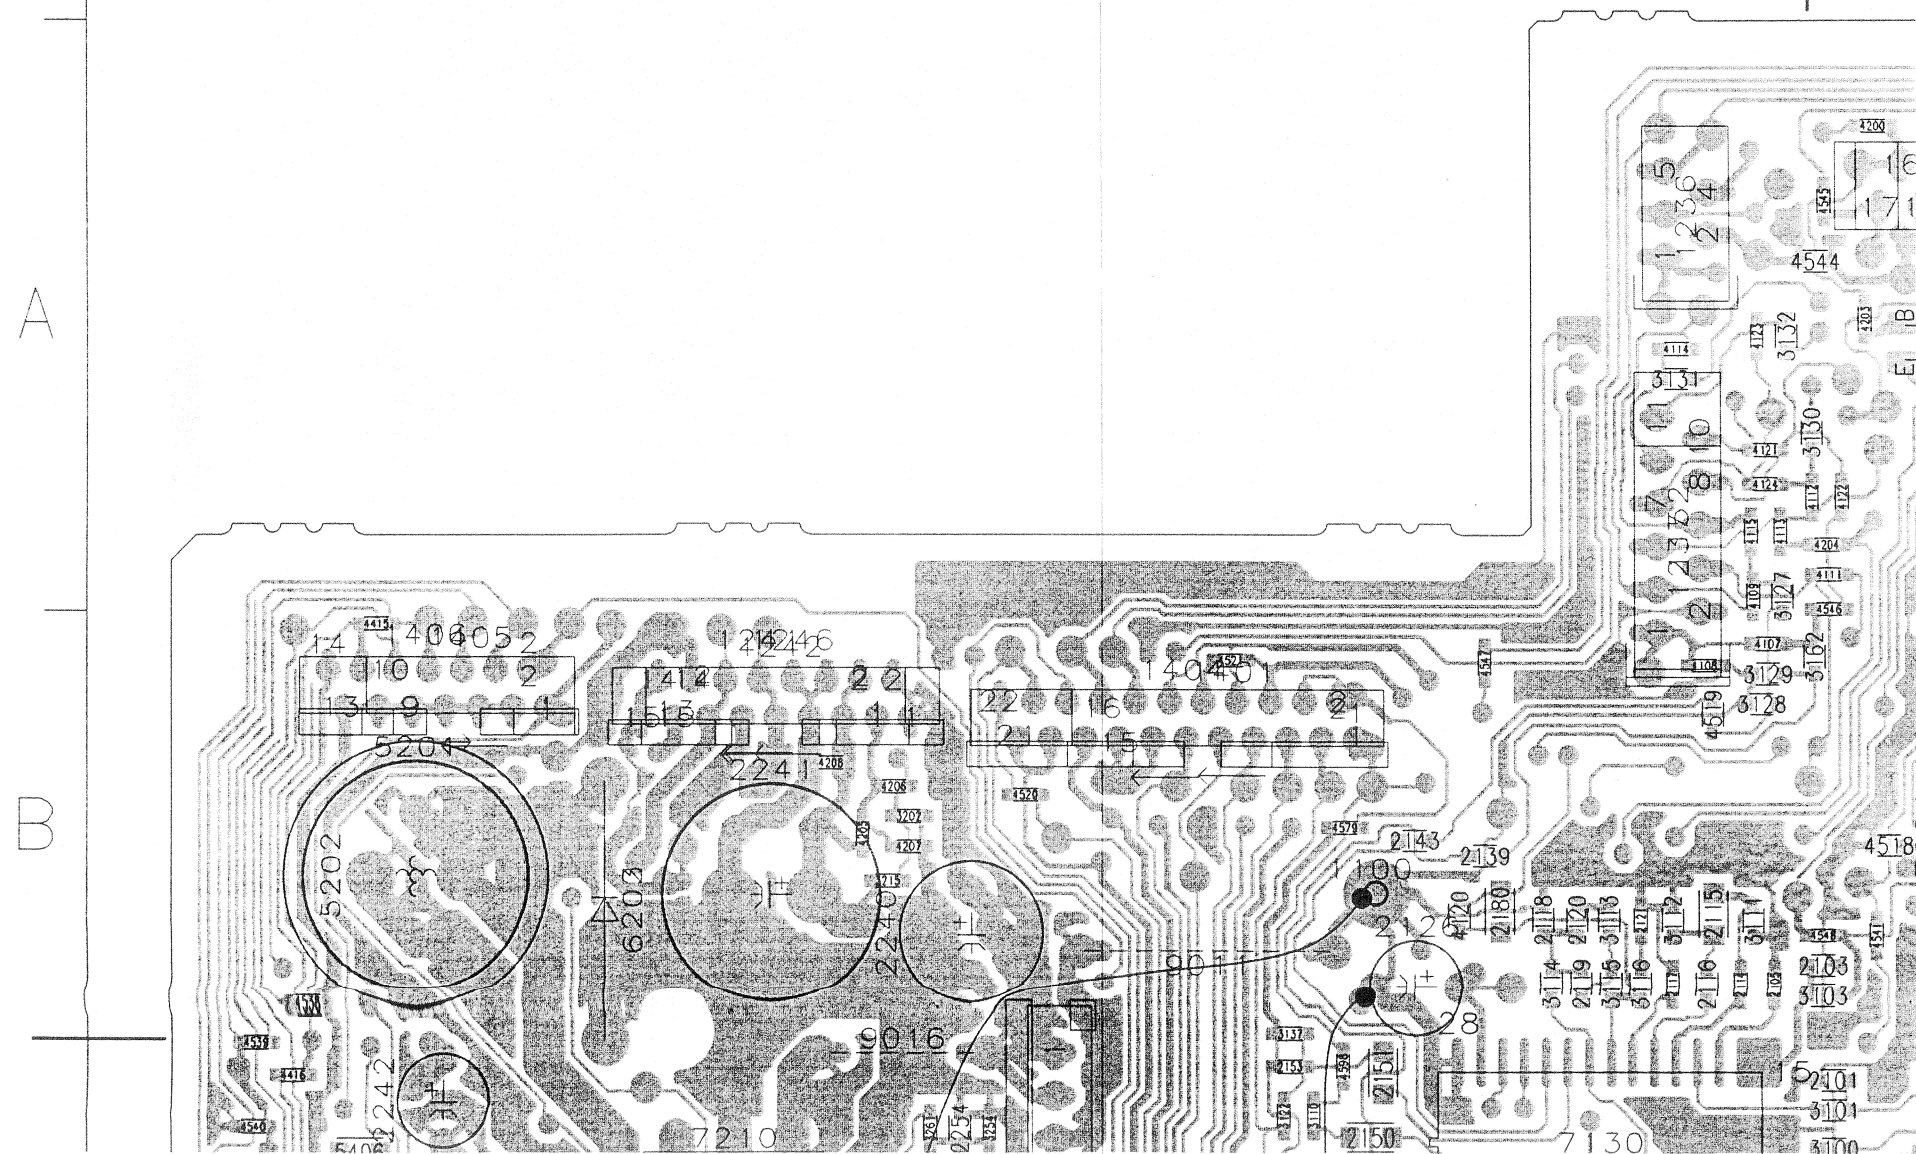


PART B

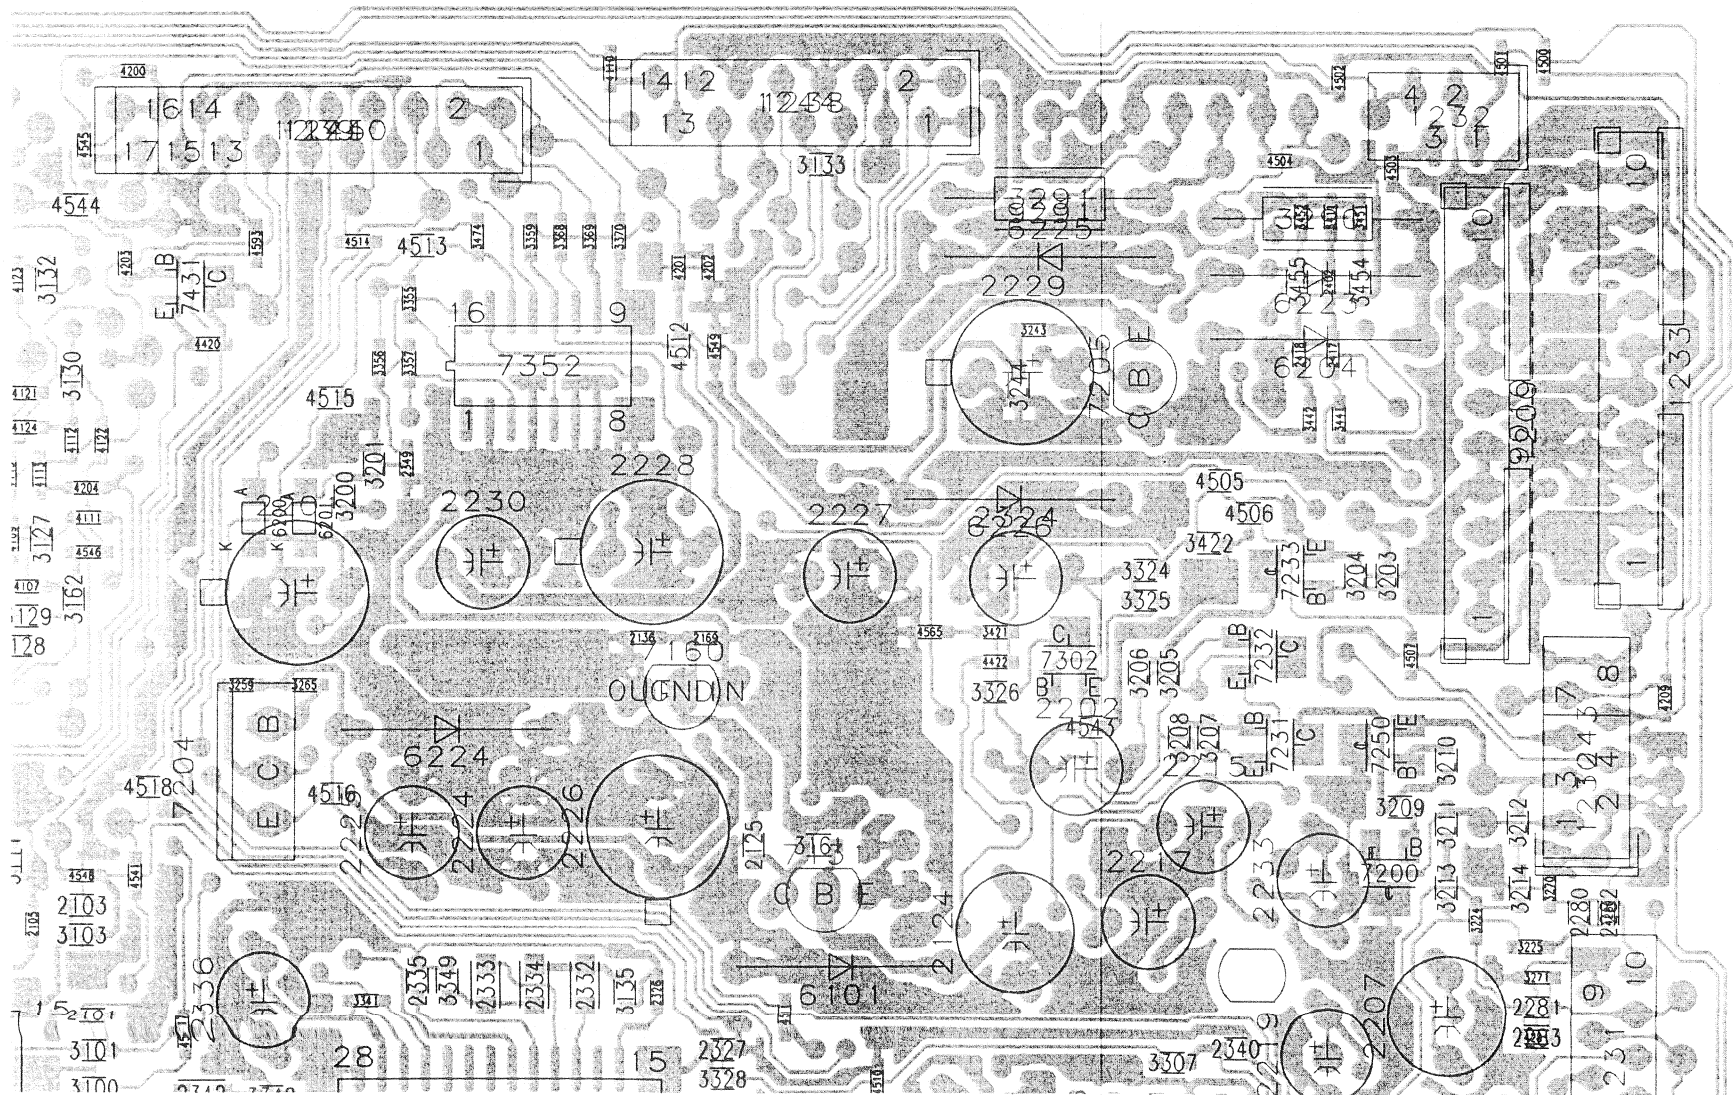

BOTTOM VIEW - PART C

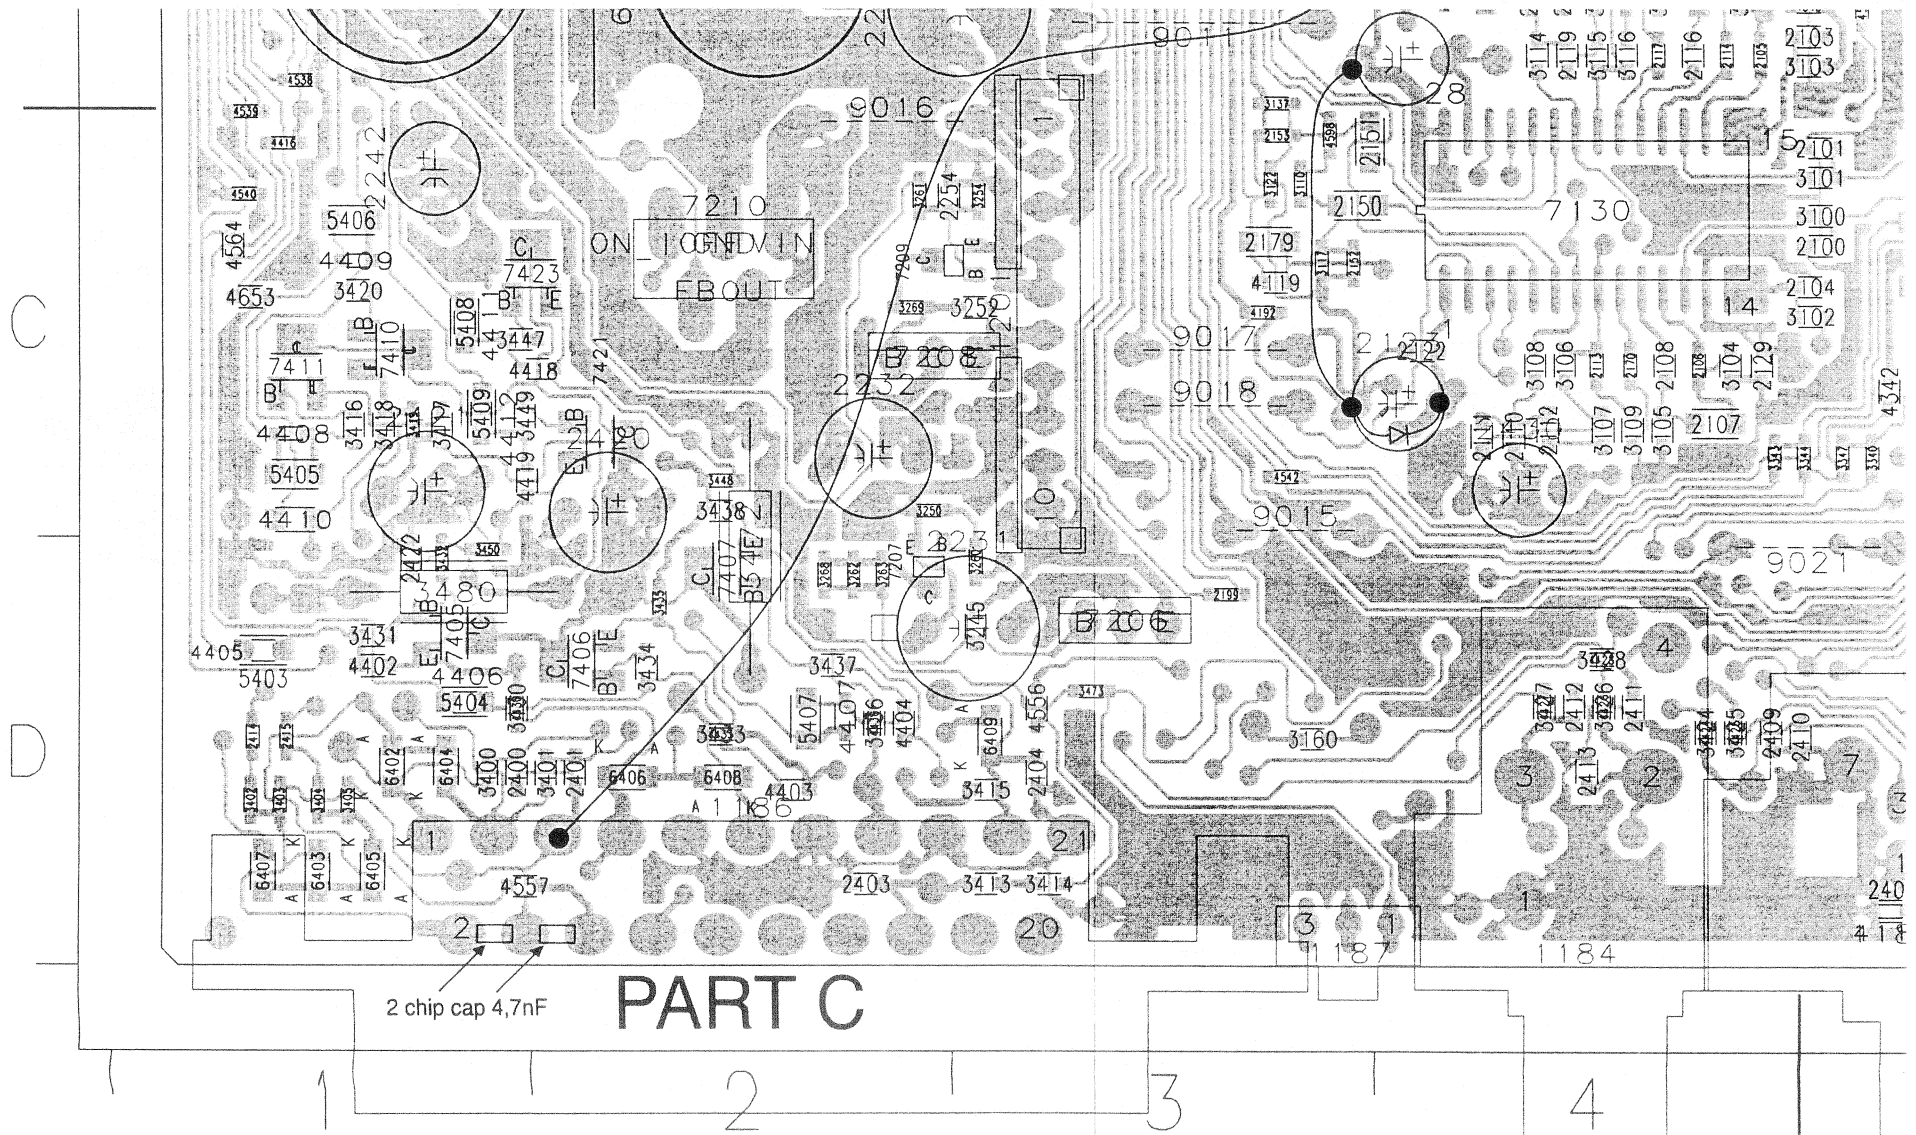


PART D

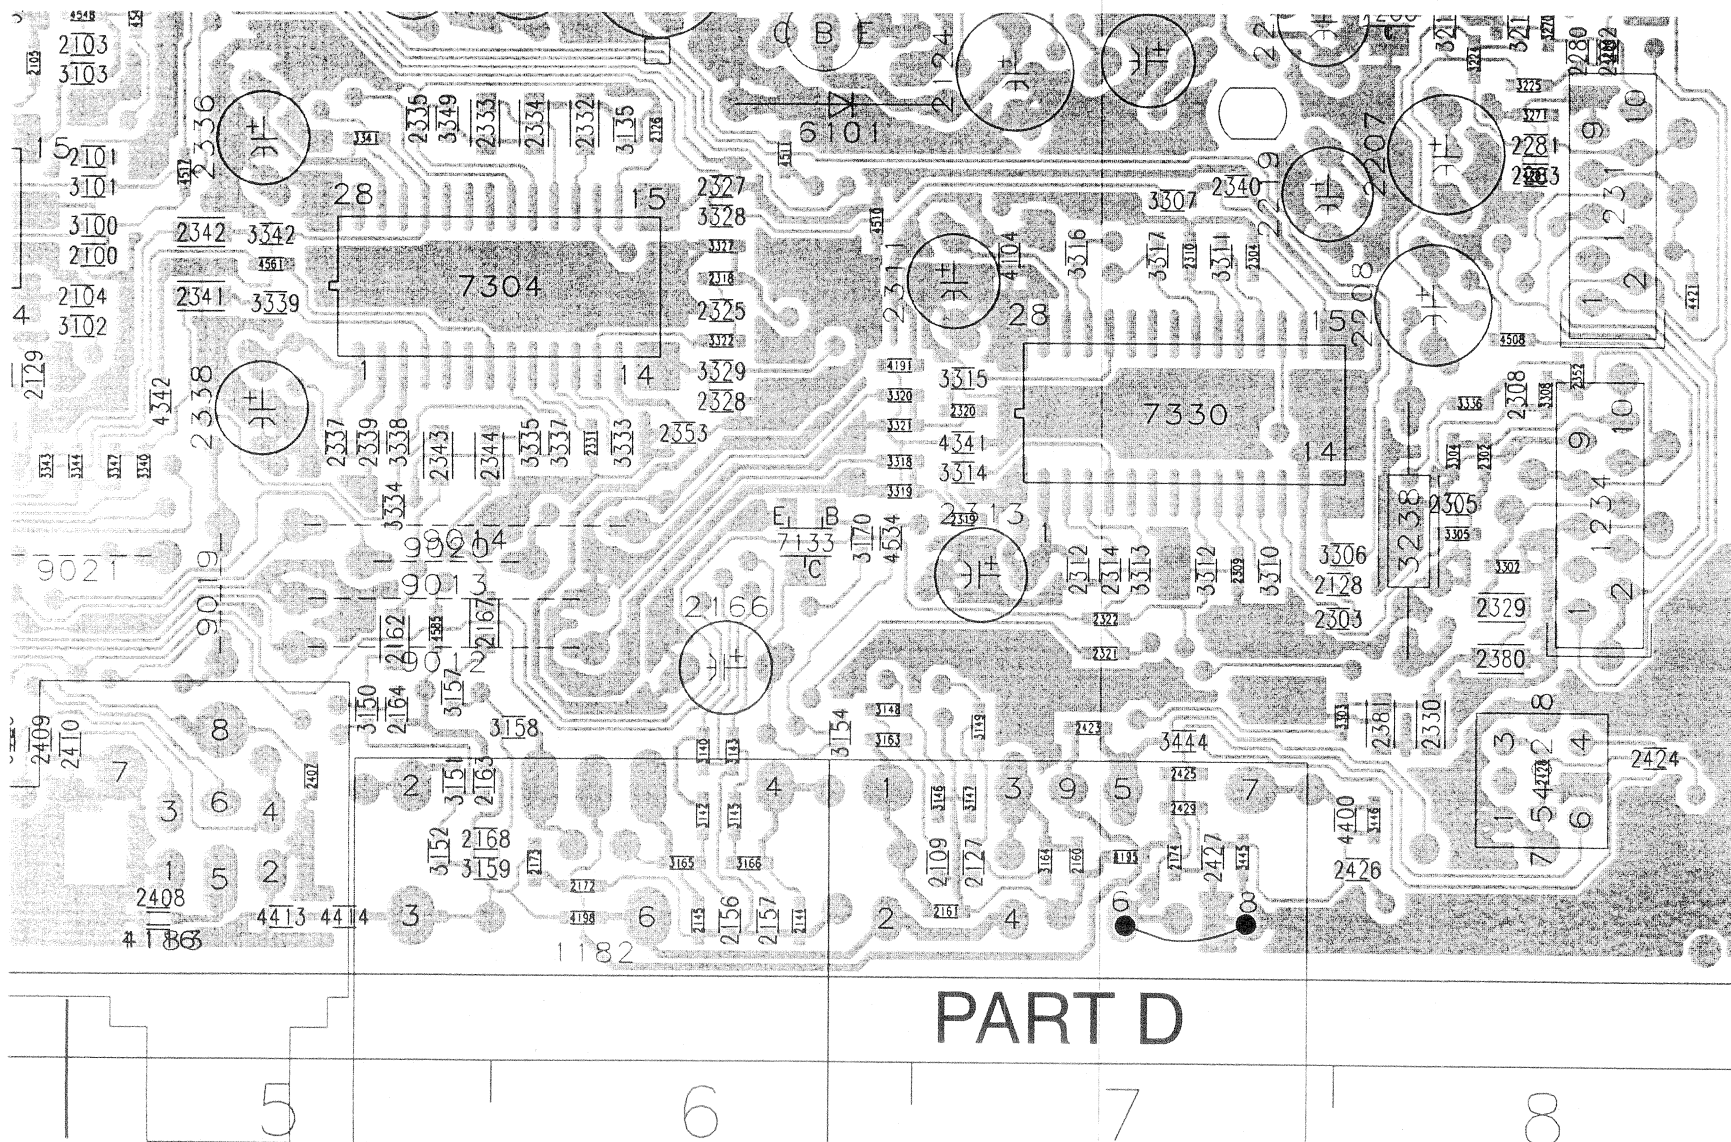


BOTTOM VIEW - PART E


PART E

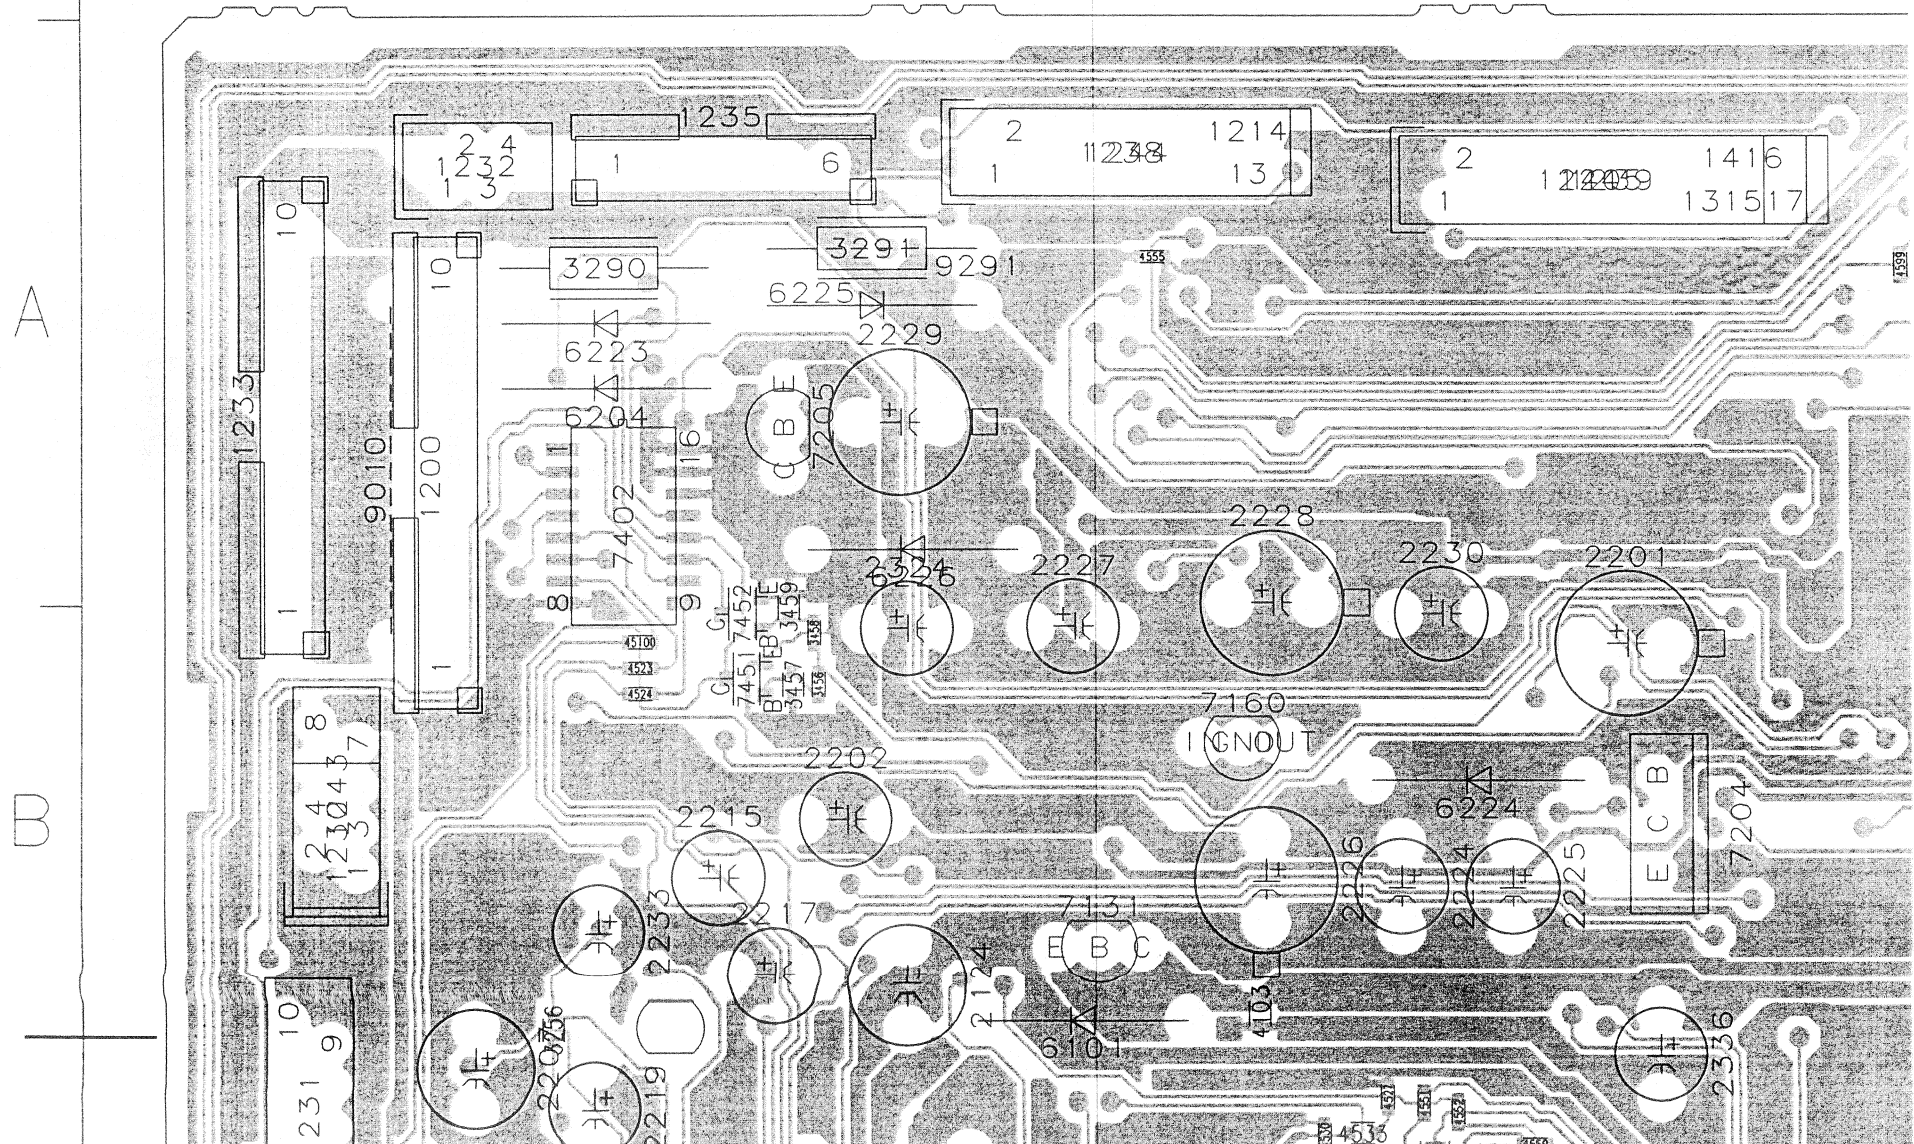


PART F

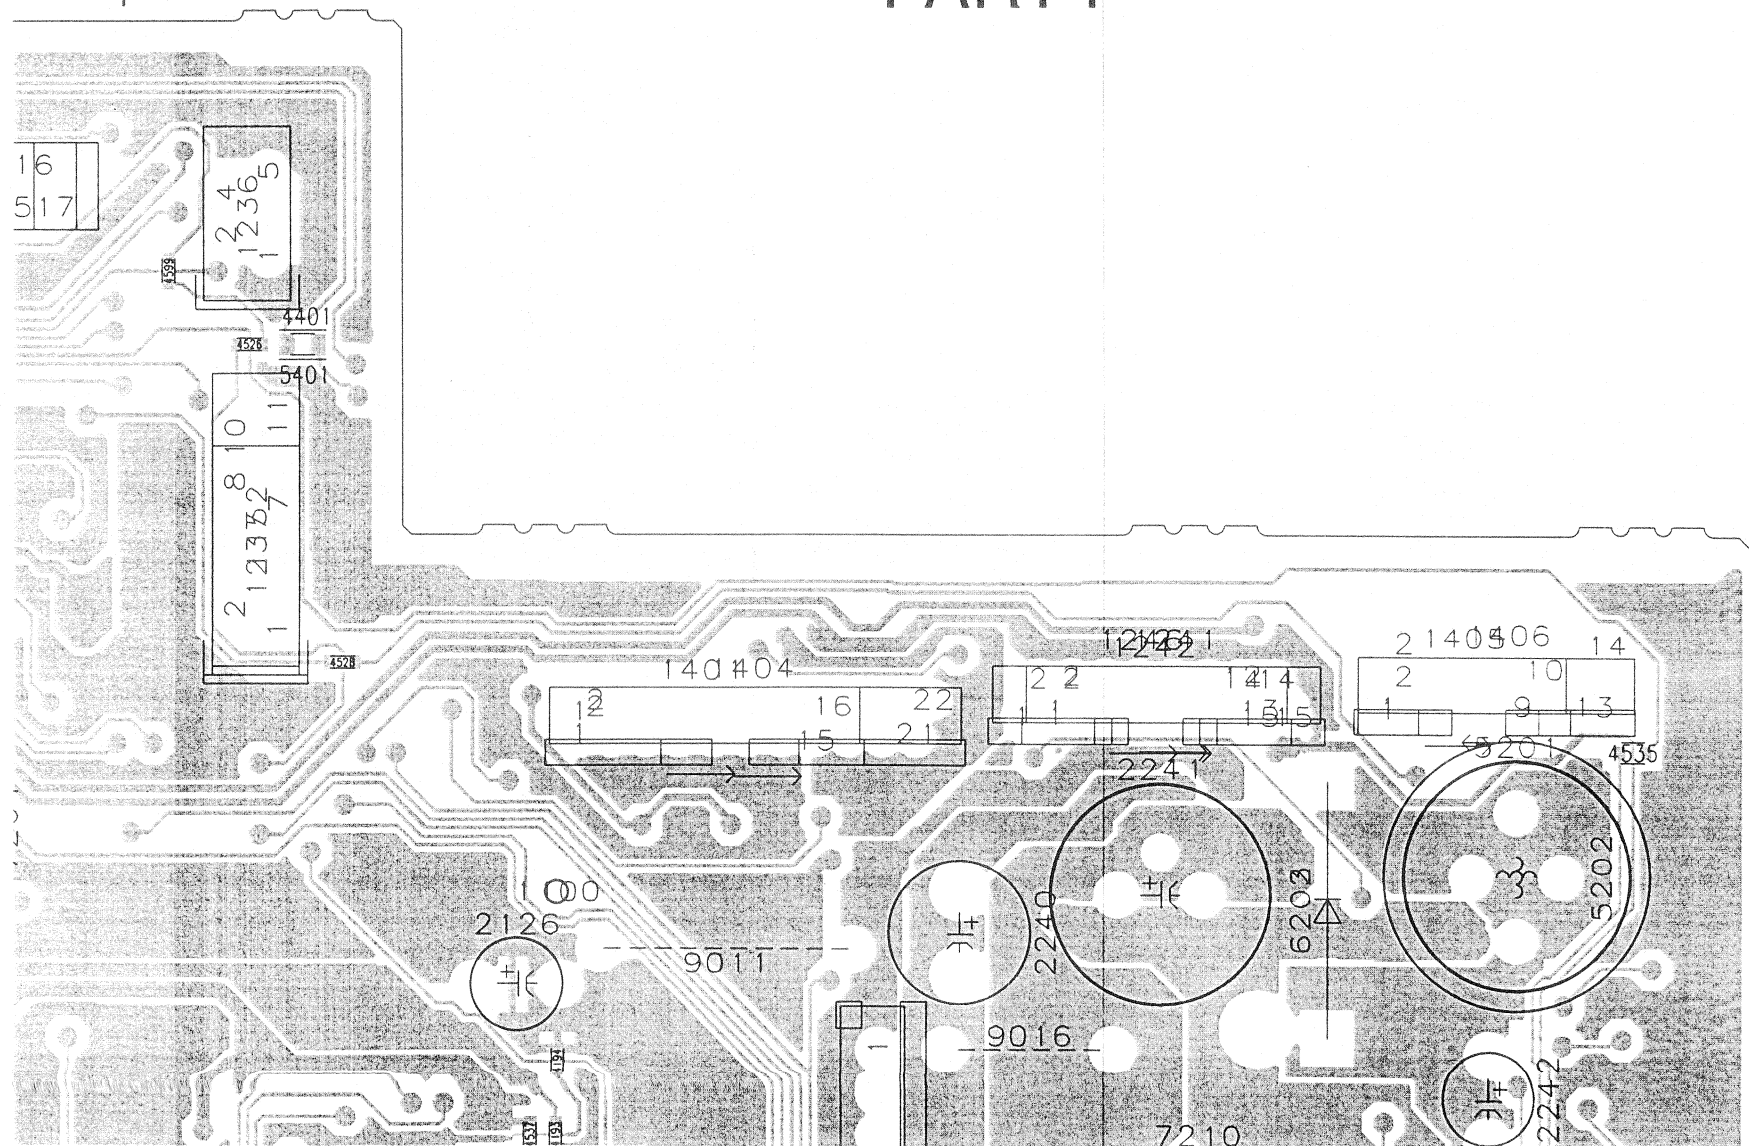

BOTTOM VIEW - PART G

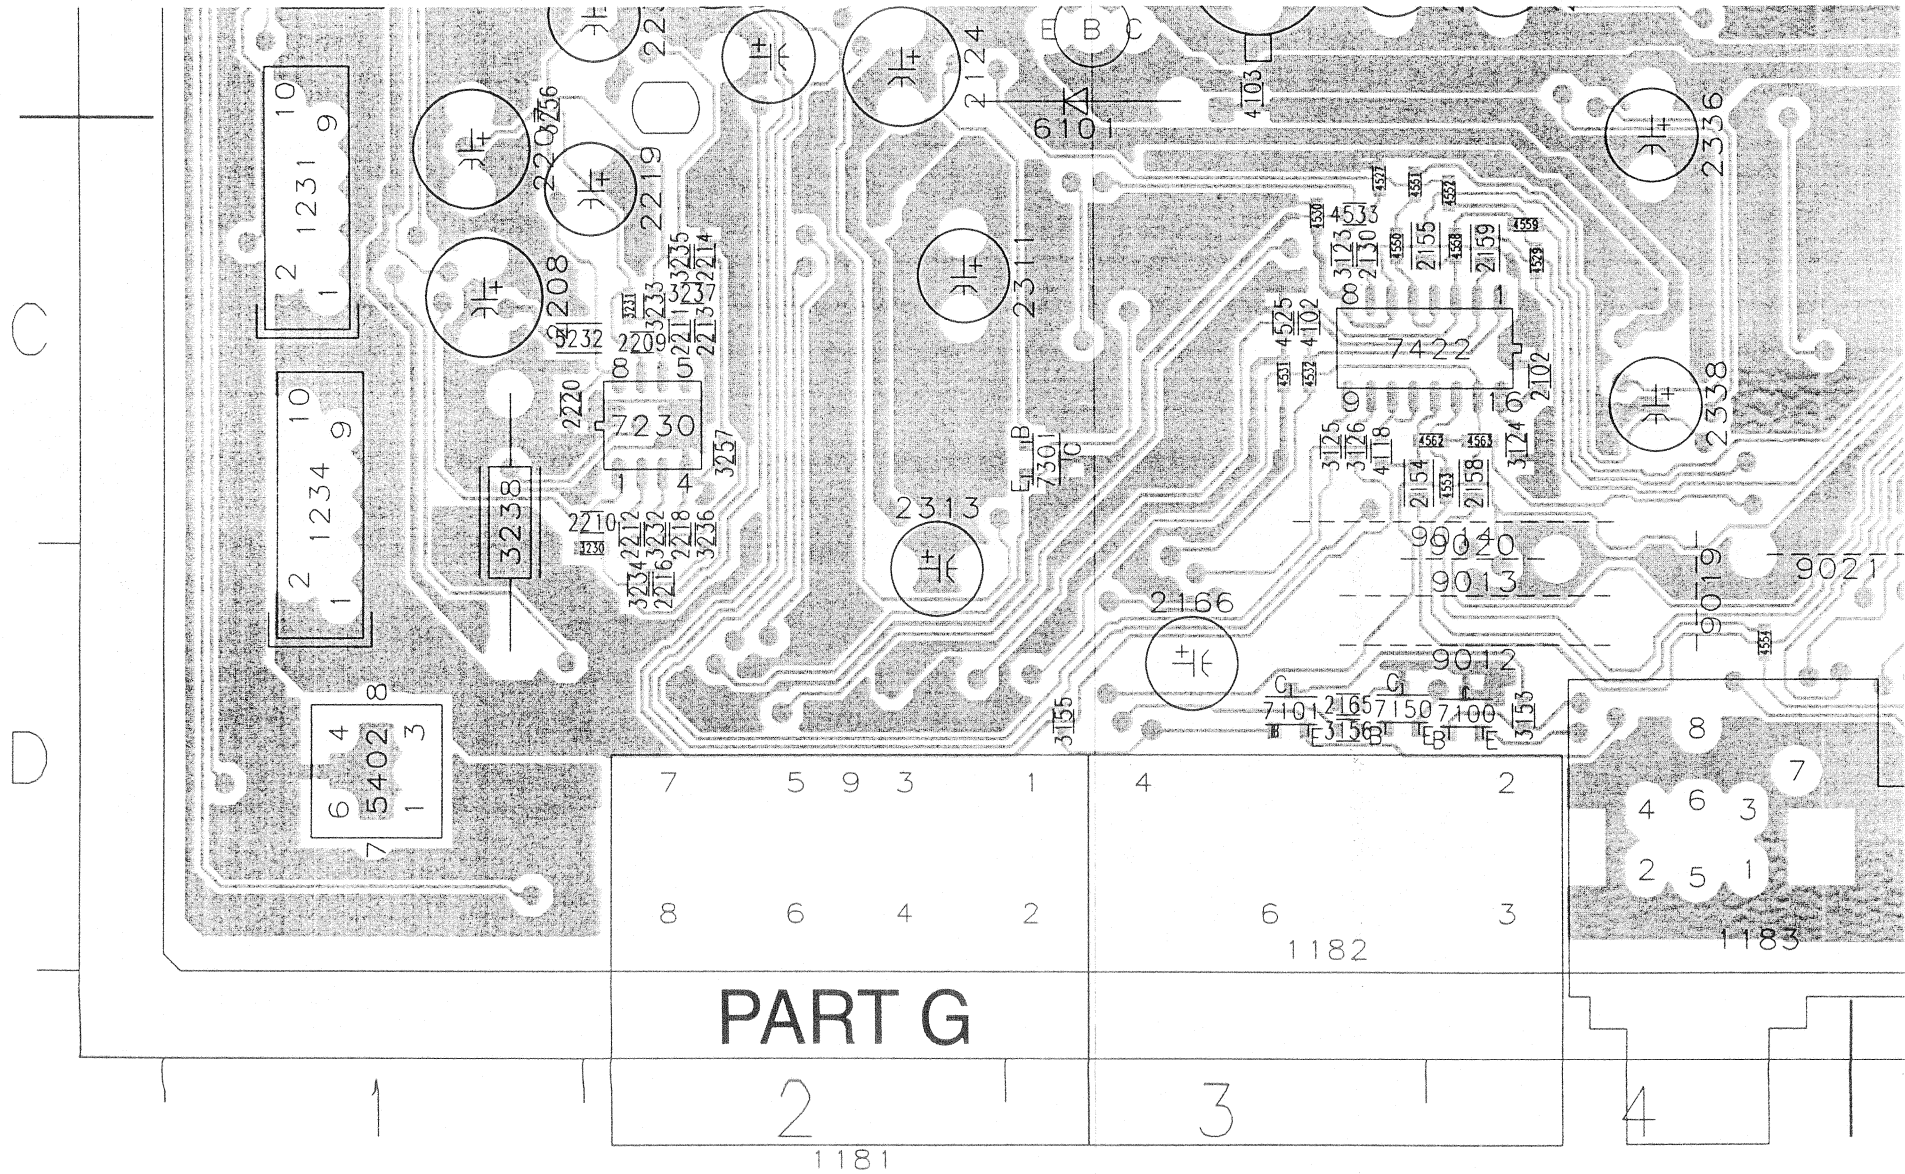

BOTTOM VIEW - PART H

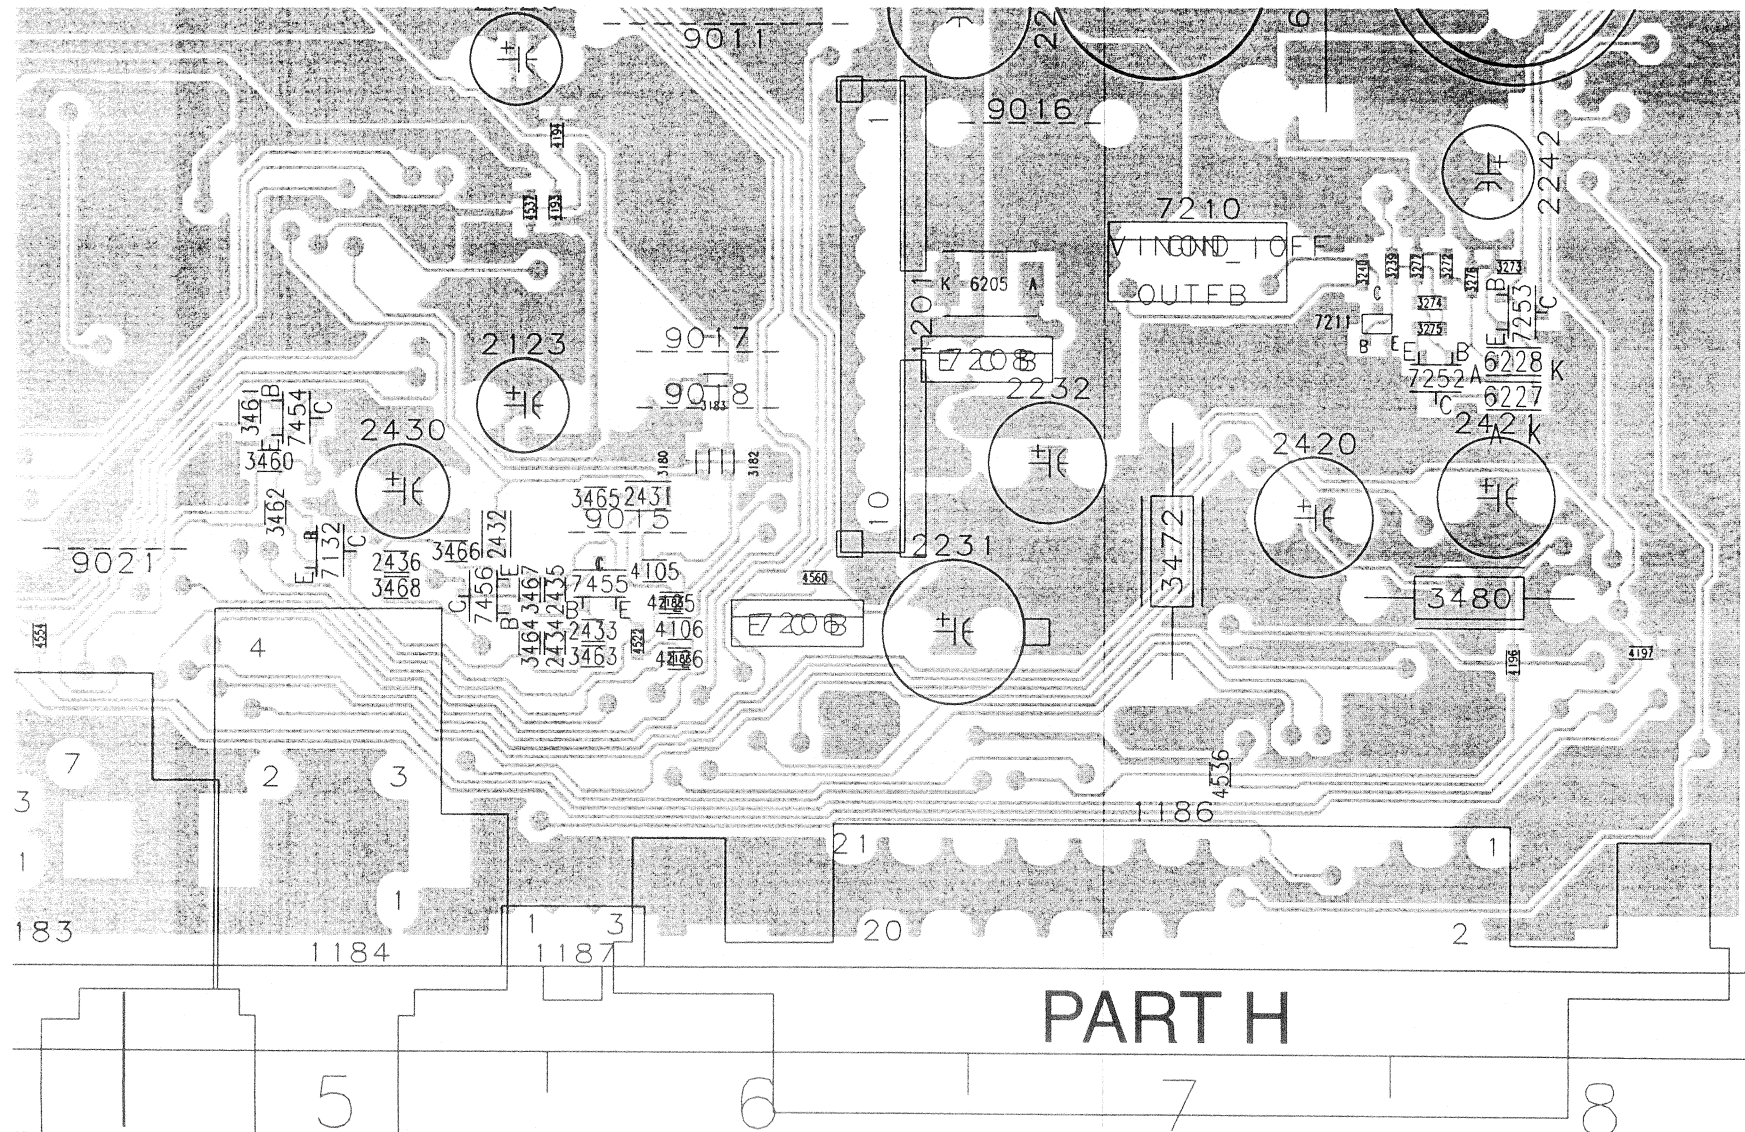

ELECTRICAL PARTS LIST - AV BOARD

RESISTORS

3125	4822 051 30271	270R 5% 0,062W	
3126	4822 051 30271	270R 5% 0,062W	
3127	4822 051 30102	1k 5% 0,062W	
3128	4822 117 12891	220k 1% ERJ3E	
3129	4822 117 12891	220k 1% ERJ3E	
3130	4822 051 30101	100R 5% 0,062W	
3131	4822 051 30101	100R 5% 0,062W	
3132	4822 051 30101	100R 5% 0,062W	
3133	4822 051 30101	100R 5% 0,062W	
3135	4822 051 30562	5k6 5% 0,063W	
3137	4822 051 30103	10k 5% 0,062W	
3140	4822 117 12925	47k 1% 0,063W	
3142	4822 051 30332	3k3 5% 0,062W	
3143	4822 117 12925	47k 1% 0,063W	
3145	4822 051 30332	3k3 5% 0,062W	
3146	4822 117 12925	47k 1% 0,063W	
3147	4822 117 12925	47k 1% 0,063W	
3148	4822 051 30332	3k3 5% 0,062W	
3149	4822 051 30332	3k3 5% 0,062W	
3150	4822 051 30102	1k 5% 0,062W	
3151	4822 051 30471	470R 5% 0,062W	
3152	4822 117 12925	47k 1% 0,063W	
3153	4822 051 30222	2k2 5% 0,062W	
3154	4822 117 12925	47k 1% 0,063W	
3155	4822 051 30103	10k 5% 0,062W	
3156	4822 051 30222	2k2 5% 0,062W	
3157	4822 051 30102	1k 5% 0,062W	
3158	4822 051 30471	470R 5% 0,062W	
3159	4822 117 12925	47k 1% 0,063W	
3160	4822 051 30222	2k2 5% 0,062W	non-Kara
3160	4822 051 30332	3k3 5% 0,062W	non-Kara/Scart
3160	4822 051 30472	4k7 5% 0,062W	Kara
3161	4822 051 30151	150R 5% 0,062W	
3162	4822 051 30102	1k 5% 0,062W	
3163	4822 051 30332	3k3 5% 0,062W	
3164	4822 051 30332	3k3 5% 0,062W	
3165	4822 051 30332	3k3 5% 0,062W	
3166	4822 051 30332	3k3 5% 0,062W	
3170	4822 117 12925	47k 1% 0,063W	
3180	4822 051 30103	10k 5% 0,062W	
3182	4822 051 30103	10k 5% 0,062W	
3183	4822 051 30103	10k 5% 0,062W	
3200	4822 117 13632	100k 1% 0,62W	
3201	4822 117 13632	100k 1% 0,62W	
3202	4822 051 30103	10k 5% 0,062W	
3203	4822 051 30103	10k 5% 0,062W	
3204	4822 051 30103	10k 5% 0,062W	
3205	4822 051 30102	1k 5% 0,062W	
3206	4822 051 30562	5k6 5% 0,063W	
3207	4822 051 30472	4k7 5% 0,062W	
3208	4822 051 30472	4k7 5% 0,062W	
3209	4822 051 30102	1k 5% 0,062W	
3210	4822 051 30102	1k 5% 0,062W	
3211	4822 051 30339	33R 5% 0,062W	
3212	4822 051 30339	33R 5% 0,062W	
3213	4822 051 30479	47R 5% 0,062W	
3214	4822 051 30479	47R 5% 0,062W	
3215	4822 051 30102	1k 5% 0,062W	
3224	4822 051 30102	1k 5% 0,062W	
3225	4822 051 30102	1k 5% 0,062W	
3230	4822 051 30273	27k 5% 0,062W	
3231	4822 051 30273	27k 5% 0,062W	
3232	4822 051 30123	12k 5% 0,062W	
3233	4822 051 30682	6k8 5% 0,062W	
3234	4822 051 30221	220R 5% 0,062W	
3235	4822 051 30221	220R 5% 0,062W	
3236	4822 051 30682	6k8 5% 0,062W	
3237	4822 051 30123	12k 5% 0,062W	
3238	4822 052 10109	10R 5% 0,33W	
3239	4822 051 30103	10k 5% 0,062W	
3240	4822 117 12925	47k 1% 0,063W	
3245	4822 051 30562	5k6 5% 0,063W	
3250	4822 117 12925	47k 1% 0,063W	
3252	4822 051 30562	5k6 5% 0,063W	
3254	4822 117 12925	47k 1% 0,063W	
3256	4822 051 30472	4k7 5% 0,062W	
3257	4822 051 30472	4k7 5% 0,062W	
3259	4822 117 12902	8k2 1% 0,063W	
3260	4822 051 30103	10k 5% 0,062W	
3261	4822 051 30103	10k 5% 0,062W	
3262	4822 051 30102	1k 5% 0,062W	
3263	4822 051 30102	1k 5% 0,062W	
3265	4822 051 30471	470R 5% 0,062W	
3268	4822 051 30102	1k 5% 0,062W	
3269	4822 051 30221	220R 5% 0,062W	
3270	4822 051 30471	470R 5% 0,062W	
3271	4822 051 30471	470R 5% 0,062W	
3272	4822 051 30682	6k8 5% 0,062W	
3273	4822 051 30103	10k 5% 0,062W	
3274	4822 051 30682	6k8 5% 0,062W	
3275	4822 051 30689	68R 5% 0,063W	
3276	4822 051 30102	1k 5% 0,062W	
3277	4822 117 12925	47k 1% 0,063W	
3290	4822 052 10228	2R2 5% 0,33W	
3302	4822 051 30223	22k 5% 0,062W	
3303	4822 117 11817	1k2 1% 1/16W	
3304	4822 051 30222	2k2 5% 0,062W	
3305	4822 051 30689	68R 5% 0,063W	
3306	4822 051 30102	1k 5% 0,062W	
3307	4822 051 30102	1k 5% 0,062W	
3308	4822 051 30222	2k2 5% 0,062W	
3310	4822 051 30102	1k 5% 0,062W	
3311	4822 051 30102	1k 5% 0,062W	
3312	4822 051 30102	1k 5% 0,062W	

ELECTRICAL PARTS LIST - AV BOARD

3313	4822 051 30102	1k 5% 0,062W	
3314	4822 051 30102	1k 5% 0,062W	
3315	4822 051 30102	1k 5% 0,062W	
3316	4822 051 30102	1k 5% 0,062W	
3317	4822 051 30102	1k 5% 0,062W	
3318	4822 051 30682	6k8 5% 0,062W	
3319	4822 051 30103	10k 5% 0,062W	
3320	4822 051 30682	6k8 5% 0,062W	
3321	4822 051 30103	10k 5% 0,062W	
3322	4822 051 30689	68R 5% 0,063W	
3324	4822 051 30102	1k 5% 0,062W	
3325	4822 051 30102	1k 5% 0,062W	
3326	4822 051 30102	1k 5% 0,062W	
3327	4822 051 30222	2k2 5% 0,062W	
3328	4822 051 30102	1k 5% 0,062W	
3329	4822 051 30102	1k 5% 0,062W	
3333	4822 051 30102	1k 5% 0,062W	
3334	4822 051 30102	1k 5% 0,062W	
3335	4822 051 30102	1k 5% 0,062W	
3336	4822 051 30689	68R 5% 0,063W	
3337	4822 051 30102	1k 5% 0,062W	
3338	4822 051 30102	1k 5% 0,062W	
3339	4822 051 30102	1k 5% 0,062W	
3340	4822 051 30682	6k8 5% 0,062W	
3341	4822 051 30103	10k 5% 0,062W	
3342	4822 051 30102	1k 5% 0,062W	
3343	4822 051 30682	6k8 5% 0,062W	
3347	4822 051 30103	10k 5% 0,062W	
3349	4822 117 12902	8k2 1% 0,063W	
3355	4822 051 30681	680R 5% 0,062W	
3356	4822 051 30101	100R 5% 0,062W	
3357	4822 117 13632	100k 1% 0,62W	
3359	4822 117 12925	47k 1% 0,063W	
3368	4822 051 30101	100R 5% 0,062W	
3369	4822 051 30101	100R 5% 0,062W	
3370	4822 051 30101	100R 5% 0,062W	
3400	4822 051 30471	470R 5% 0,062W	
3401	4822 051 30471	470R 5% 0,062W	
3402	4822 117 12902	8k2 1% 0,063W	
3403	4822 051 30223	22k 5% 0,062W	
3404	4822 117 12902	8k2 1% 0,063W	
3405	4822 051 30223	22k 5% 0,062W	
3411	4822 051 30271	270R 5% 0,062W	
3413	4822 051 30479	47R 5% 0,063W	
3414	4822 051 30339	33R 5% 0,063W	
3415	4822 051 30689	68R 5% 0,063W	
3416	4822 051 30101	100R 5% 0,062W	
3417	4822 117 11817	1k2 5% 0,062W	
3418	4822 051 30689	68R 5% 0,063W	
3419	4822 117 11817	1k2 1% 1/16W	
3420	4822 051 30101	100R 5% 0,062W	
3424	4822 051 30689	68R 5% 0,063W	
3425	4822 051 30689	68R 5% 0,063W	
3426	4822 051 30689	68R 5% 0,063W	
3427	4822 051 30689	68R 5% 0,063W	
3428	4822 051 30689	68R 5% 0,063W	
3430	4822 051 30689	68R 5% 0,063W	Scart
3431	4822 051 30101	100R 5% 0,062W	
3432	4822 117 11817	1k2 1% 1/16W	
3433	4822 051 30689	68R 5% 0,063W	Scart
3434	4822 051 30101	100R 5% 0,062W	
3435	4822 117 11817	1k2 1% 1/16W	
3437	4822 051 30101	100R 5% 0,062W	Scart
3438	4822 051 30222	2k2 5% 0,062W	Scart
3441	4822 051 30471	470R 5% 0,062W	
3442	4822 051 30471	470R 5% 0,062W	
3444	4822 051 30339	33R 5% 0,062W	
3445	4822 051 30151	150R 5% 0,062W	
3447	4822 051 30101	100R 5% 0,062W	
3448	4822 117 11817	1k2 1% 1/16W	
3449	4822 051 30101	100R 5% 0,062W	
3450	4822 117 11817	1k2 1% 1/16W	
3451	4822 051 30153	15k 5% 0,062W	
3452	4822 051 30153	15k 5% 0,062W	
3454	4822 117 12925	47k 1% 0,063W	
3455	4822 117 12925	47k 1% 0,063W	
3456	4822 051 30153	15k 5% 0,062W	
3457	4822 117 12925	47k 1% 0,063W	
3458	4822 051 30153	15k 5% 0,062W	
3459	4822 117 12925	47k 1% 0,063W	
3460	4822 051 30103	10k 5% 0,062W	Scart
3461	4822 117 12925	47k 1% 0,063W	Scart
3462	4822 117 12925	47k 1% 0,063W	Scart
3463	4822 051 30222	2k2 5% 0,062W	Scart
3464	4822 051 30222	2k2 5% 0,062W	Scart
3465	4822 051 30102	1k 5% 0,062W	Scart
3466	4822 051 30102	1k 5% 0,062W	Scart
3467	4822 117 12925	47k 1% 0,063W	Scart
3468	4822 117 12925	47k 1% 0,063W	Scart
3472	4822 052 10478	4R7 5% 0,33W	
3473	4822 051 30103	10k 5% 0,062W	
3474	4822 051 30103	10k 5% 0,062W	
3480	4822 052 10478	4R7 5% 0,33W	
4103	4822 051 30008	0R Jumper 0603	
4104	4822 051 30008	0R Jumper 0603	
4107	4822 051 30008	0R Jumper 0603	
4109	4822 051 30008	0R Jumper 0603	
4111	4822 051 30008	0R Jumper 0603	
4112	4822 051 30008	0R Jumper 0603	
4114	4822 051 30008	0R Jumper 0603	
4116	4822 051 30008	0R Jumper 0603	
4121	4822 051 30008	0R Jumper 0603	
4123	4822 051 30008	0R Jumper 0603	
4191	4822 051 30008	0R Jumper 0603	

Twin-SW

Scart

Scart

Scart

Scart

Scart

Scart

Scart

Scart

Scart

Scart

Scart

Scart

Scart

Scart

Scart

ELECTRICAL PARTS LIST - AV BOARD

MISCELLANEOUS

1181	2422 026 05399	Socket Aux-In/Digital-In/Out	
1182	4822 265 11151	Socket TV-In/Line-out	
1183	2422 033 00468	Socket CVBS/S-Video	
1184	2422 026 05342	Socket Pr/Pb/Y	non-Scart
1186	2422 025 12352	Scart Connector	Scart
1187	2422 127 00476	P-Scan Switch	P-scan
1230	4822 267 10733	Flex Socket 4P	non-Kara
1231	4822 267 10729	Flex Socket 10P	
1232	4822 267 10733	Flex Socket 4P	
1234	4822 267 10729	Flex Socket 10P	
1236	4822 267 10954	Flex Socket 5P	
1237	4822 265 11515	Flex Socket 8P	
1238	4822 267 10738	Flex Socket 13P	
1240	4822 267 51255	Flex Socket 14P	
1242	2422 025 16591	Flex Socket 13P	
1243	4822 265 11515	Flex Socket 8P	Kara
1401	2422 025 16525	Flex Socket 16P	non-Kara
1401	2422 025 18239	Flex Socket 18P	Kara
1405	2422 025 16587	Flex Socket 10P	

CAPACITORS

2100	3198 016 31020	1nF 25V	
2101	3198 016 31020	1nF 25V	
2102	2238 586 59812	100nF +80/-20% 50V	
2103	2020 552 94427	100pF 5% 50V	
2104	2020 552 94427	100pF 5% 50V	
2105	3198 017 44740	470nF 10V	
2106	3198 017 44740	470nF 10V	
2107	2020 552 96327	330nF 10% 16V	
2108	4822 126 13879	220nF +80/-20% 16V	
2109	2020 552 94427	100pF 5% 50V	
2110	5322 126 11579	3,3nF 10% 63V	
2111	3198 016 31020	1nF 25V	
2112	5322 126 11583	10nF 10% 50V	
2113	3198 017 44740	470nF 10V	
2114	3198 017 44740	470nF 10V	
2115	2020 552 96327	330nF 10% 16V	
2116	4822 126 13879	220nF +80/-20% 16V	
2117	4822 126 14238	2,2nF 50V	
2118	5322 126 11579	3,3nF 10% 63V	
2119	3198 016 31020	1nF 25V	
2120	5322 126 11583	10nF 10% 50V	
2121	3198 017 44740	470nF 10V	
2122	2238 916 15641	22nF 10% 25V	
2123	4822 124 81151	22uF 50V	
2124	4822 124 40196	220uF 20% 16V	
2125	4822 126 14238	2,2nF 50V	
2126	4822 124 40433	47uF 20% 25V	
2127	2020 552 94427	100pF 5% 50V	
2128	2020 552 94427	100pF 5% 50V	
2129	2238 586 59812	100nF +80/-20% 50V	
2130	2238 586 59812	100nF +80/-20% 50V	

2139	2238 586 59812	100nF +80/-20% 50V	
2143	2238 586 59812	100nF +80/-20% 50V	
2144	4822 126 13956	68pF 5% 63V	
2145	4822 126 13956	68pF 5% 63V	
2150	4822 126 14043	1uF +80/-20% 16V	
2151	4822 126 14043	1uF +80/-20% 16V	
2152	3198 016 31020	1nF 25V	
2153	3198 016 31020	1nF 25V	
2154	4822 126 14043	1uF +80/-20% 16V	
2155	4822 126 14043	1uF +80/-20% 16V	
2156	2020 552 94427	100pF 5% 50V	
2157	2020 552 94427	100pF 5% 50V	
2160	4822 126 13956	68pF 5% 63V	
2161	4822 126 13956	68pF 5% 63V	
2162	4822 126 14043	1uF +80/-20% 16V	
2163	3198 016 31020	1nF 25V	
2164	3198 016 31020	1nF 25V	
2165	3198 016 31020	1nF 25V	
2166	4822 124 40769	4,7uF 20% 100V	
2167	4822 126 14043	1uF +80/-20% 16V	
2168	3198 016 31020	1nF 25V	
2170	4822 126 14238	2,2nF 50V	
2172	3198 017 34730	47nF 16V	
2173	3198 017 34730	47nF 16V	
2174	3198 017 34730	47nF 16V	
2199	3198 017 41050	1uF 10V	Kara
2201	4822 124 40184	1000uF 20% 10V	
2202	4822 124 40248	10uF 20% 63V	
2207	4822 124 41751	47uF 20% 50V	
2208	4822 124 41751	47uF 20% 50V	
2209	4822 126 14508	180pF 5% 50V	
2210	4822 126 14508	180pF 5% 50V	
2211	4822 126 13881	470pF 5% 50V	
2212	4822 126 13881	470pF 5% 50V	
2213	2020 552 94427	100pF 5% 50V	
2214	3198 016 31020	1nF 25V	
2215	4822 124 81151	22uF 50V	
2216	3198 016 31020	1nF 25V	
2217	4822 124 81151	22uF 50V	
2218	2020 552 94427	100pF 5% 50V	
2219	4822 124 40433	47uF 20% 25V	
2220	2238 916 15641	22nF 10% 25V	
2224	4822 124 81151	22uF 50V	
2225	4822 124 81151	22uF 50V	
2226	4822 124 40255	100uF 20% 63V	
2227	4822 124 81151	22uF 50V	
2231	4822 124 80791	470uF 20% 16V	
2232	4822 124 40196	220uF 20% 16V	
2233	4822 124 41584	100uF 20% 10V	
2240	2020 012 93583	100uF 20% 25V	
2241	3198 026 51020	1000uF 20% 50V	
2242	4822 124 40433	47uF 20% 25V	

ELECTRICAL PARTS LIST - AV BOARD

2254	3198 017 44740	470nF 10V	
2280	3198 017 44740	470nF 10V	
2281	3198 017 44740	470nF 10V	
2282	3198 017 44740	470nF 10V	
2283	3198 017 44740	470nF 10V	
2302	3198 017 44740	470nF 10V	
2303	2238 586 59812	100nF +80/-20% 50V	
2304	3198 017 44740	470nF 10V	
2305	2020 552 94427	100pF 5% 50V	
2308	2020 552 94427	100pF 5% 50V	
2309	4822 126 13193	4,7nF 10% 63V	
2310	4822 126 13193	4,7nF 10% 63V	
2311	4822 124 40433	47uF 20% 25V	
2312	2238 916 15641	22nF 10% 25V	
2313	4822 124 40433	47uF 20% 25V	
2314	3198 016 31020	1nF 25V	
2318	3198 017 44740	470nF 10V	
2319	3198 017 44740	470nF 10V	
2320	3198 017 44740	470nF 10V	
2321	3198 017 44740	470nF 10V	
2322	3198 017 44740	470nF 10V	
2324	4822 124 12032	4,7uF 20% 50V	
2325	2020 552 94427	100pF 5% 50V	
2326	3198 017 44740	470nF 10V	
2327	2020 552 94427	100pF 5% 50V	
2328	2020 552 94427	100pF 5% 50V	
2329	2020 552 96684	470nF 10% 25V	
2330	3198 017 44740	470nF 10V	
2331	4822 126 13193	4,7nF 10% 63V	
2332	2020 552 96684	470nF 10% 25V	
2333	2020 552 96326	220nF 10% 16V	
2334	2222 780 15656	330nF 10% 16V	
2335	2020 552 94427	100pF 5% 50V	
2336	4822 124 40433	47uF 20% 25V	
2337	2238 916 15641	22nF 10% 25V	
2338	4822 124 40433	47uF 20% 25V	
2339	3198 016 31020	1nF 25V	
2340	2020 552 94427	100pF 5% 50V	
2341	4822 126 14043	1uF +80/-20% 16V	
2342	4822 126 14043	1uF +80/-20% 16V	Single-SW
2342	4822 126 13879	220nF +80/-20% 16V	Twin-SW
2343	4822 126 14043	1uF +80/-20% 16V	Single-SW
2343	2020 552 96684	470nF 10% 25V	Twin-SW
2344	4822 126 14043	1uF +80/-20% 16V	Single-SW
2344	2020 552 96684	470nF 10% 25V	Twin-SW
2349	2238 586 59812	100nF +80/-20% 50V	
2352	3198 017 44740	470nF 10V	
2353	2238 586 59812	100nF +80/-20% 50V	
2380	4822 126 14472	1uF 10% X7R 0805 10V	
2400	4822 126 13883	220pF 5% 50V	Scart
2401	4822 126 13883	220pF 5% 50V	Scart
2402	2238 586 59812	100nF +80/-20% 50V	

2403	3198 017 42230	22nF 50V	Scart
2404	4822 126 13883	220pF 5% 50V	Scart
2407	4822 126 13883	220pF 5% 50V	
2409	4822 126 13883	220pF 5% 50V	
2410	4822 126 13883	220pF 5% 50V	
2411	2020 552 94427	100pF 5% 50V	
2412	2020 552 94427	100pF 5% 50V	
2413	2020 552 94427	100pF 5% 50V	
2414	3198 017 41050	1uF 10V	Scart
2415	3198 017 41050	1uF 10V	Scart
2417	2020 552 94427	100pF 5% 50V	
2418	2020 552 94427	100pF 5% 50V	
2420	4822 124 40196	220uF 20% 16V	
2421	4822 124 40196	220uF 20% 16V	
2422	2238 586 59812	100nF +80/-20% 50V	
2423	4822 126 14249	560pF 10% 50V	
2424	2238 586 59812	100nF +80/-20% 50V	
2425	2238 586 59812	100nF +80/-20% 50V	
2426	5322 126 11583	10nF 10% 50V	
2427	4822 126 14508	180pF 5% 50V	
2428	4822 126 11785	47pF 5% 50V	
2429	4822 126 14241	330pF 50V	
2430	4822 124 40769	4,7uF 20% 100V	Scart
2431	4822 126 14043	1uF +80/-20% 16V	Scart
2432	4822 126 14043	1uF +80/-20% 16V	Scart
2433	3198 016 31020	1nF 25V	Scart
2434	3198 016 31020	1nF 25V	Scart
2435	3198 016 31020	1nF 25V	Scart
2436	3198 016 31020	1nF 25V	Scart

RESISTORS

3100	4822 051 30221	220R 5% 0,062W	
3101	4822 051 30221	220R 5% 0,062W	
3102	4822 051 30102	1k 5% 0,062W	
3103	4822 051 30102	1k 5% 0,062W	
3104	4822 051 30562	5k6 5% 0,063W	
3105	4822 117 12902	8k2 1% 0,063W	
3106	4822 051 30562	5k6 5% 0,063W	
3107	4822 051 30183	18k 5% 0,062W	
3108	4822 051 30103	10k 5% 0,062W	
3109	4822 117 12925	47k 1% 0,063W	
3110	4822 051 30682	6k8 5% 0,062W	
3111	4822 051 30562	5k6 5% 0,063W	
3112	4822 117 12902	8k2 1% 0,063W	
3113	4822 051 30183	18k 5% 0,062W	
3114	4822 051 30103	10k 5% 0,062W	
3115	4822 051 30562	5k6 5% 0,063W	
3116	4822 117 12925	47k 1% 0,063W	
3117	4822 051 30103	10k 5% 0,062W	
3122	4822 051 30682	6k8 5% 0,062W	
3123	4822 051 30271	270R 5% 0,062W	
3124	4822 051 30271	270R 5% 0,062W	

ELECTRICAL PARTS LIST - AV BOARD

RESISTORS

4192	4822 051 30008	OR Jumper 0603	
4195	4822 051 30008	OR Jumper 0603	
4200	4822 051 30008	OR Jumper 0603	
4201	4822 051 30008	OR Jumper 0603	
4205	4822 051 30008	OR Jumper 0603	
4206	4822 051 30008	OR Jumper 0603	
4209	4822 051 30008	OR Jumper 0603	non-Kara
4341	4822 051 30008	OR Jumper 0603	
4342	4822 051 30008	OR Jumper 0603	
4400	4822 051 30008	OR Jumper 0603	
4404	4822 051 30008	OR Jumper 0603	Non-Scart
4405	4822 051 30008	OR Jumper 0603	
4406	4822 051 30008	OR Jumper 0603	
4407	4822 051 30008	OR Jumper 0603	
4408	4822 051 30008	OR Jumper 0603	Scart
4409	4822 051 30008	OR Jumper 0603	
4410	4822 051 30008	OR Jumper 0603	Non-Scart
4411	4822 051 30008	OR Jumper 0603	
4412	4822 051 30008	OR Jumper 0603	
4414	4822 051 30008	OR Jumper 0603	Scart
4415	4822 051 30008	OR Jumper 0603	
4416	4822 051 30008	OR Jumper 0603	
4420	4822 051 30008	OR Jumper 0603	Scart
4421	4822 051 30008	OR Jumper 0603	
4424	4822 051 30008	OR Jumper 0603	
4425	4822 051 30008	OR Jumper 0603	
4426	4822 051 30008	OR Jumper 0603	
4427	4822 051 30008	OR Jumper 0603	
4428	4822 051 30008	OR Jumper 0603	
4430	4822 051 30008	OR Jumper 0603	Scart
4433	4822 051 30008	OR Jumper 0603	Scart
4436	4822 051 30008	OR Jumper 0603	Scart
4500	4822 051 30008	OR Jumper 0603	
4501	4822 051 30008	OR Jumper 0603	
4502	4822 051 30008	OR Jumper 0603	
4503	4822 051 30008	OR Jumper 0603	
4504	4822 051 30008	OR Jumper 0603	
4505	4822 051 30008	OR Jumper 0603	
4506	4822 051 30008	OR Jumper 0603	
4507	4822 051 30008	OR Jumper 0603	
4508	4822 051 30008	OR Jumper 0603	
4509	4822 051 30008	OR Jumper 0603	
4510	4822 051 30008	OR Jumper 0603	
4511	4822 051 30008	OR Jumper 0603	
4512	4822 051 30008	OR Jumper 0603	
4513	4822 051 30008	OR Jumper 0603	
4514	4822 051 30008	OR Jumper 0603	
4515	4822 051 30008	OR Jumper 0603	
4516	4822 051 30008	OR Jumper 0603	
4517	4822 051 30008	OR Jumper 0603	
4518	4822 051 30008	OR Jumper 0603	
4519	4822 051 30008	OR Jumper 0603	

4520	4822 051 30008	OR Jumper 0603
4521	4822 051 30008	OR Jumper 0603
4522	4822 051 30008	OR Jumper 0603
4523	4822 051 30008	OR Jumper 0603
4524	4822 051 30008	OR Jumper 0603
4525	4822 051 30008	OR Jumper 0603
4526	4822 051 30008	OR Jumper 0603
4527	4822 051 30008	OR Jumper 0603
4528	4822 051 30008	OR Jumper 0603
4529	4822 051 30008	OR Jumper 0603
4530	4822 051 30008	OR Jumper 0603
4531	4822 051 30008	OR Jumper 0603
4532	4822 051 30008	OR Jumper 0603
4533	4822 051 30008	OR Jumper 0603
4534	4822 051 30008	OR Jumper 0603
4535	4822 051 30008	OR Jumper 0603
4536	4822 051 30008	OR Jumper 0603
4537	4822 051 30008	OR Jumper 0603
4538	4822 051 30008	OR Jumper 0603
4539	4822 051 30008	OR Jumper 0603
4540	4822 051 30008	OR Jumper 0603
4541	4822 051 30008	OR Jumper 0603
4542	4822 051 30008	OR Jumper 0603
4543	4822 051 30008	OR Jumper 0603
4544	4822 051 30008	OR Jumper 0603
4545	4822 051 30008	OR Jumper 0603
4546	4822 051 30008	OR Jumper 0603
4547	4822 051 30008	OR Jumper 0603
4548	4822 051 30008	OR Jumper 0603
4549	4822 051 30008	OR Jumper 0603
4550	4822 051 30008	OR Jumper 0603
4551	4822 051 30008	OR Jumper 0603
4552	4822 051 30008	OR Jumper 0603
4553	4822 051 30008	OR Jumper 0603
4554	4822 051 30008	OR Jumper 0603
4555	4822 051 30008	OR Jumper 0603
4556	4822 051 30008	OR Jumper 0603
4557	4822 051 30008	OR Jumper 0603
4558	4822 051 30008	OR Jumper 0603
4559	4822 051 30008	OR Jumper 0603
4560	4822 051 30008	OR Jumper 0603
4564	4822 051 30008	OR Jumper 0603
4579	4822 051 30008	OR Jumper 0603
4585	4822 051 30008	OR Jumper 0603
4593	4822 051 30008	OR Jumper 0603
4598	4822 051 30008	OR Jumper 0603
4599	4822 051 30008	OR Jumper 0603
4653	4822 051 30008	OR Jumper 0603

COILS & FILTERS

5201	2422 536 00548	Fixed Ind, 100uH 15%
5232	4822 157 10586	2,2uH 10%

ELECTRICAL PARTS LIST - AV BOARD

5401	4822 157 10586	2,2uH 10%
5402	4822 157 70601	Inductor 100uH

DIODES

6101	4822 130 61219	BZX79-B10
6200	4822 130 11397	BAS316
6201	4822 130 11397	BAS316
6202	4822 130 10871	SBYV27-200
6205	9322 128 70685	SS14
6223	4822 130 31878	1N4003G
6224	4822 130 34278	BZX79-B6V8
6225	4822 130 31878	1N4003G
6227	4822 130 11397	BAS316
6228	4822 130 11397	BAS316

TRANSISTORS & INTEGRATED CIRCUITS

7100	5322 130 60159	BC847B
7101	4822 130 60373	BC857B
7130	9322 150 74668	TDA7468D
7131	4822 130 40959	BC547B
7132	4822 130 60373	BC857B
7133	4822 130 42804	BC817-25
7150	5322 130 60159	BC847B
7200	4822 130 42804	BC817-25
7204	4822 130 63166	BD242B
7206	4822 130 40995	BD438
7207	3198 010 42310	BC847BW
7208	4822 130 40995	BD438
7209	3198 010 42310	BC847BW
7210	9322 188 75682	LM2576T-3,3
7211	3198 010 42310	BC847BW
7230	4822 209 31378	NJM4556MB
7231	4822 130 60373	BC857B
7232	5322 130 60159	BC847B
7233	5322 130 60159	BC847B
7250	4822 130 42804	BC817-25
7252	4822 130 60373	BC857B
7253	5322 130 60159	BC847B
7301	5322 130 60159	BC847B
7302	4822 130 60373	BC857B
7304	9322 150 74668	TDA7468D
7330	9322 150 74668	TDA7468D
7352	9337 148 20653	74HC4051D
7402	4822 209 17345	M62320FP
7405	5322 130 60159	BC847B
7406	5322 130 60159	BC847B
7407	5322 130 60159	BC847B
7410	5322 130 60159	BC847B
7411	5322 130 60159	BC847B
7421	5322 130 60159	BC847B
7422	5322 209 11102	HEF4052BT
7423	5322 130 60159	BC847B

7451	4822 130 42804	BC817-25
7452	4822 130 42804	BC817-25
7454	4822 130 42804	BC817-25
7455	5322 130 60159	BC847B
7456	5322 130 60159	BC847B

Scart

Scart

Scart


Note: Only the parts mentioned in this list are normal service spare parts.

Scart

Scart

Scart

Scart

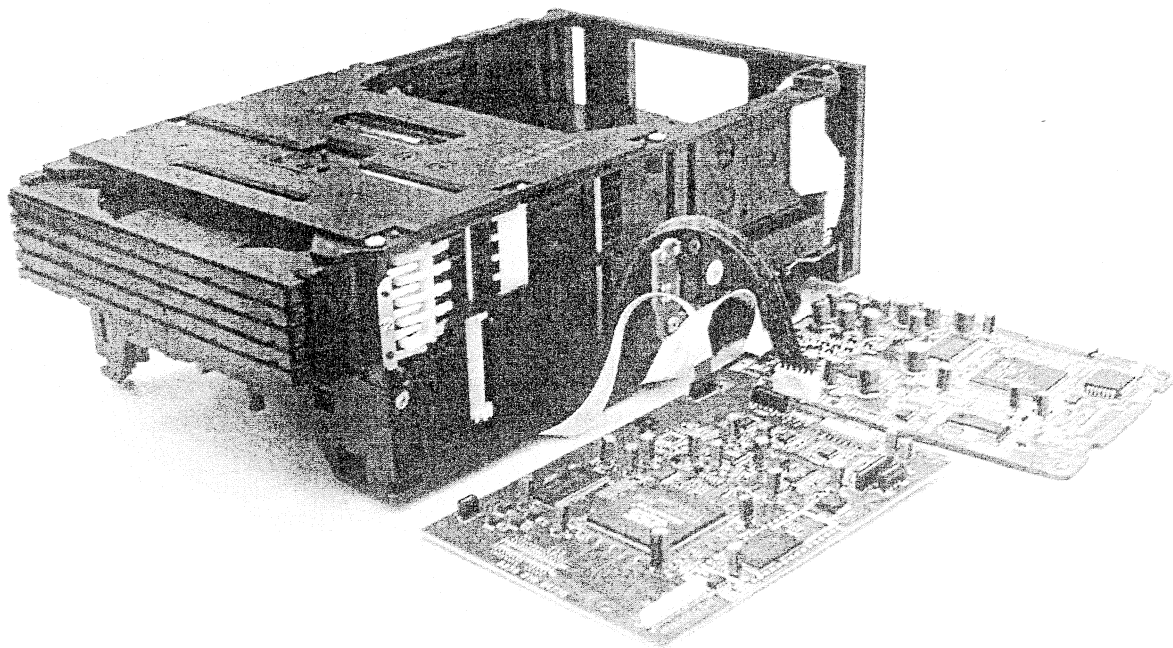

5DTC MODULE

(DVD Version)


TABLE OF CONTENTS

Emergency opening	10-2
Location of switches	10-3
Blockdiagram	10-3
Control Board	
Circuit diagram	10-4
Component Layout	10-4
Exploded view loader	10-5
Mechanical assembly drawing + mechanical parts list	10-6
Electrical parts list	10-7

For Mono-FE (Front End) and Mono-BE (Back End) PCB assemblies information see chapters 11 and 12 in this service documentation.


Emergency opening of the trays

The trays of the 5DTC are mechanically locked.

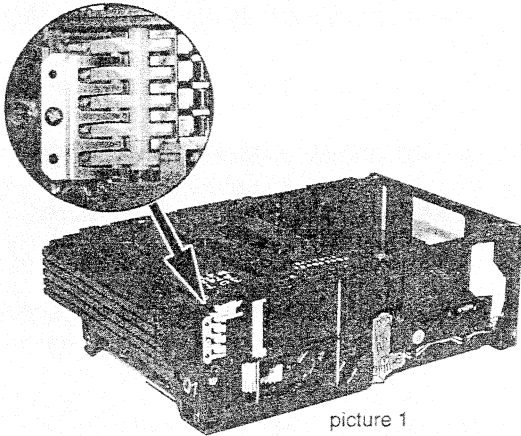


picture 1

To open tray 1, 2 and 3 move lever (pos 29) backwards (e.g. with a screwdriver - see picture 2) to its endposition.

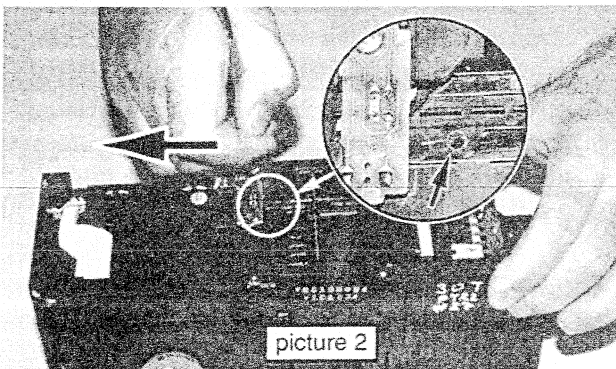


picture 2

Release the locking mechanism and pull out the tray (see picture 3).

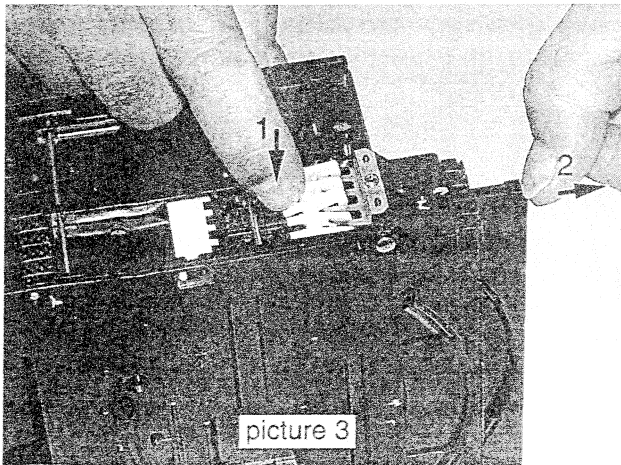


picture 3

To open tray 4 and 5 move lever (pos 29) forward to its endposition (see picture 4).

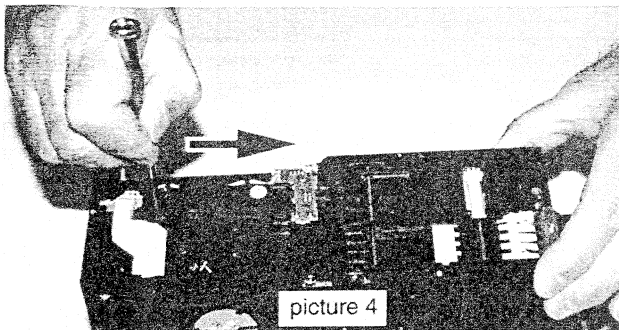

picture 4


Release snap as shown in picture 5 and pull tray out.

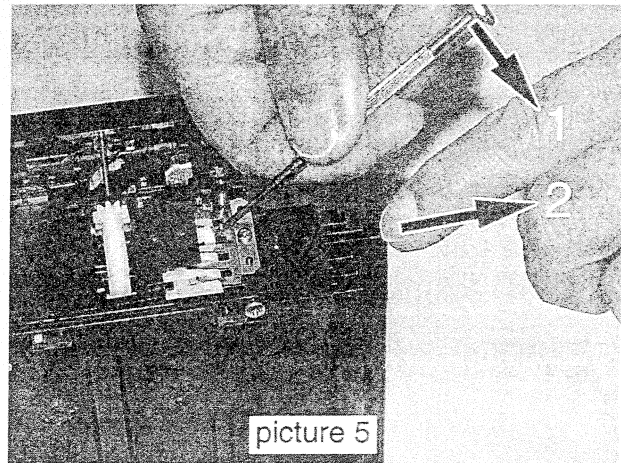

picture 5


To remove a CD from Play Position perform following steps:

1. Open tray 1 as described before.
2. Tear the tray out with speed (see picture 6). The tray can be inserted afterwards without any alignment.

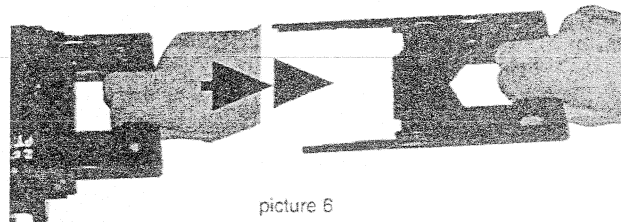

picture 6


3. Move lever (pos 29) forward to its endposition (see picture 4).
4. Push lever (pos 31) forward (see picture 7).

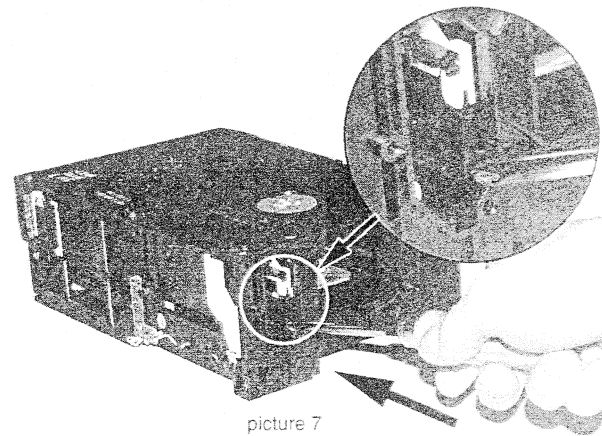


picture 7


5. Remove CD.

Blockdiagram

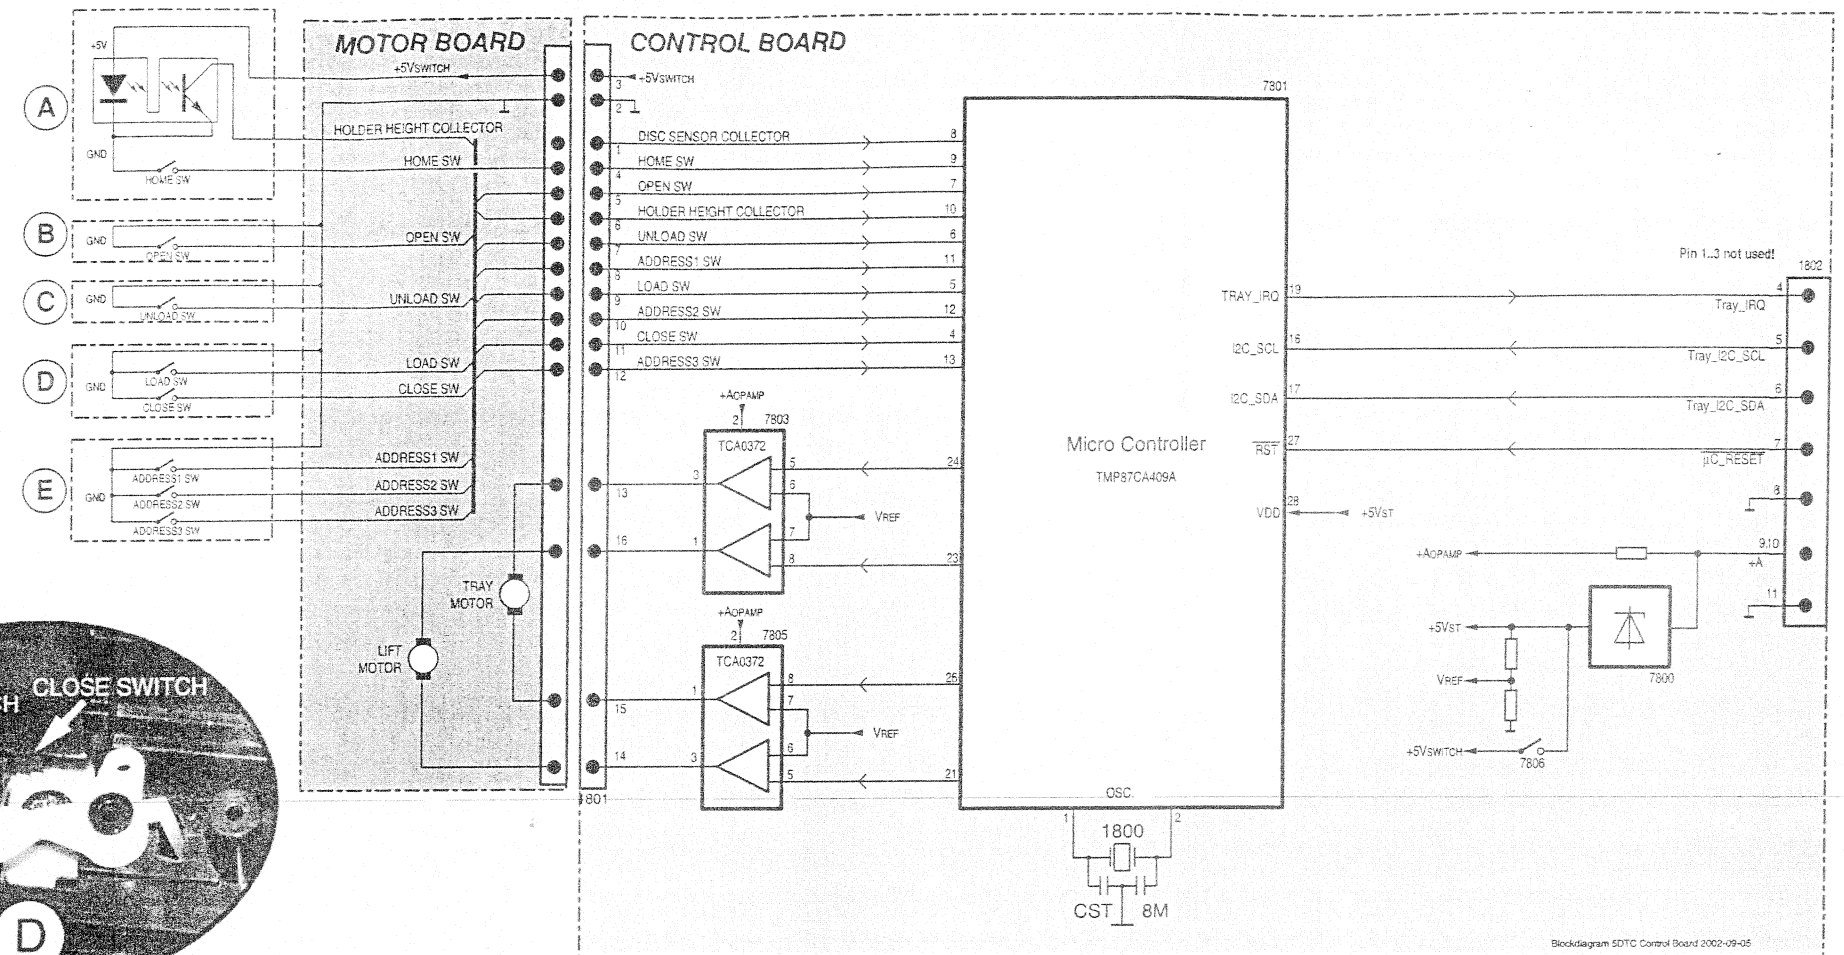

Location of switches

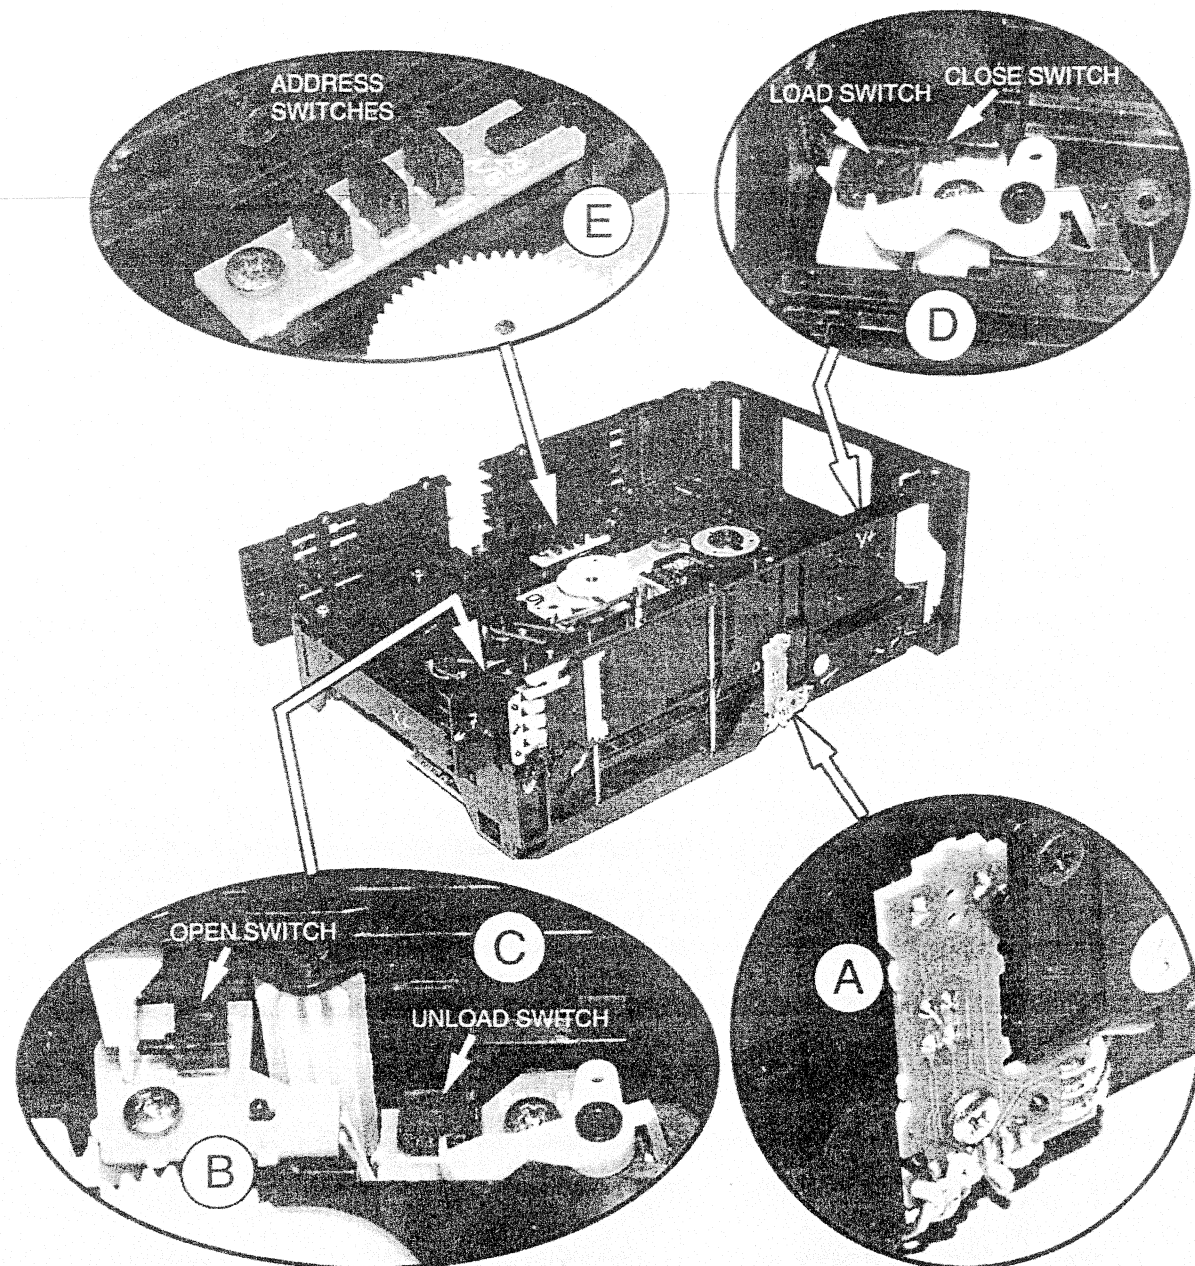

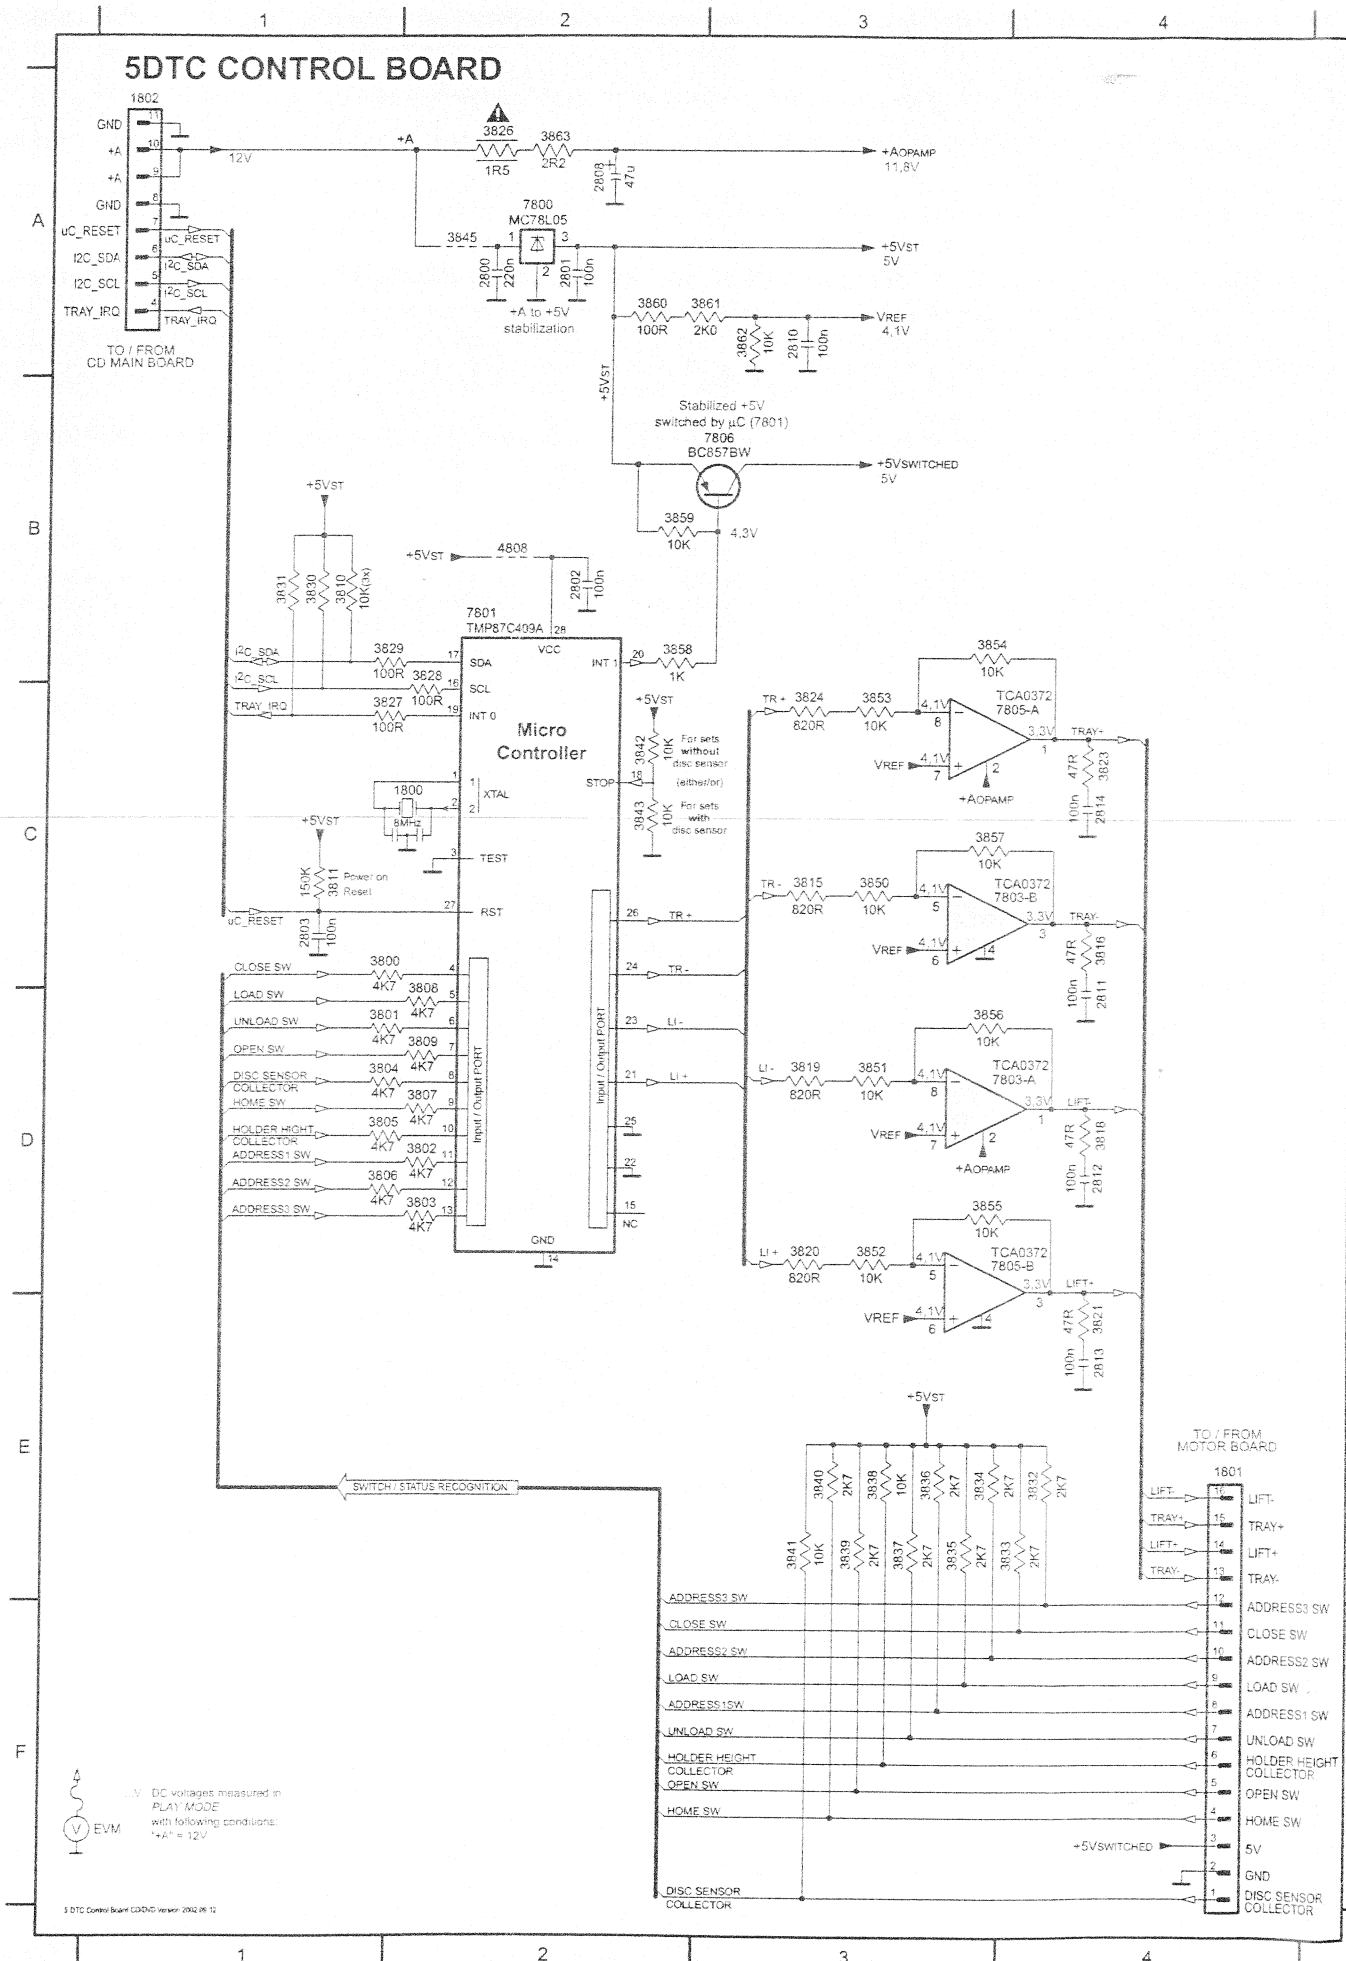


MAPPING FOR CIRCUIT DIAGRAM




1800	C2	2810	A3	3804	D1	3811	C1	3824	C3	3833	E4	3841	E3	3854	B3	3862	A3	7805-B	D3
1801	E4	2811	D4	3805	D1	3815	C3	3826	A2	3834	E2	3842	C2	3855	D3	3863	A2	7806	B3
1802	A1	2812	D4	3806	D1	3816	C4	3827	C1	3835	E3	3843	C2	3856	D3	4808	B2		
2800	A2	2813	E4	3807	D2	3818	D4	3828	C2	3836	E3	3845	A2	3857	C3	7800	A2		
2801	A2	2814	C4	3808	D1	3819	D3	3829	B1	3837	E3	3850	C3	3858	B2	7801	B2		
2802	B2	3800	C1	3808	D2	3820	D3	3830	B1	3836	E3	3851	D3	3859	B3	7803-A	D3		
2803	C1	3802	D2	3809	D2	3821	E4	3831	B1	3839	E3	3852	D3	3860	A2	7803-B	C3		
2808	A2	3803	D2	3810	B1	3823	C4	3832	E4	3840	E3	3853	C3	3861	A2	7805-A	C3		

MAPPING FOR COMPONENT LAYOUT


1800	B2	2810	A5	3806	C4	3819	A4	3832	C4	3843	A2	3857	A5	4804	A2	4816	D2	7803	A5
1801	C4	2811	A5	3807	C3	3820	A4	3833	B2	3845	D2	3858	B5	4805	C1	4817	A6	7804	B2
1802	C2	2812	A6	3808	B2	3821	B5	3834	C4	3847	B1	3859	C5	4806	A2	4818	C5	7806	C5
2800	D2	2813	B5	3809	C3	3823	B6	3835	C2	3848	B1	3860	C5	4807	C1	4819	A6	9801	C5
2801	D2	2814	B6	3810	C2	3824	A4	3836	C4	3850	A4	3861	B5	4808	C2	4820	B5	9802	B2
2802	A2	3800	B2	3811	A2	3826	B6	3837	C3	3851	A4	3862	A5	4809	C5	4821	C3	9804	A5
2803	B1	3801	C3	3812	A1	3827	B2	3838	C4	3852	A4	3863	B6	4810	B2	4822	C3		
2804	C2	3802	C4	3813	B2	3828	C2	3839	C3	3853	A4	4800	C2	4811	C1	6801	B1		
2805	C1	3803	C4	3815	A4	3829	B2	3840	C4	3854	B5	4801	C2	4812	B2	7800	D2		
2808	A6	3804	C3	3816	A5	3830	C2	3841	C3	3855	B5	4802	C2	4813	B6	7801	B4		
2809	C2	3805	C4	3818	A6	3831	C1	3842	A2	3856	A6	4803	D1	4814	A4	7802	A2		

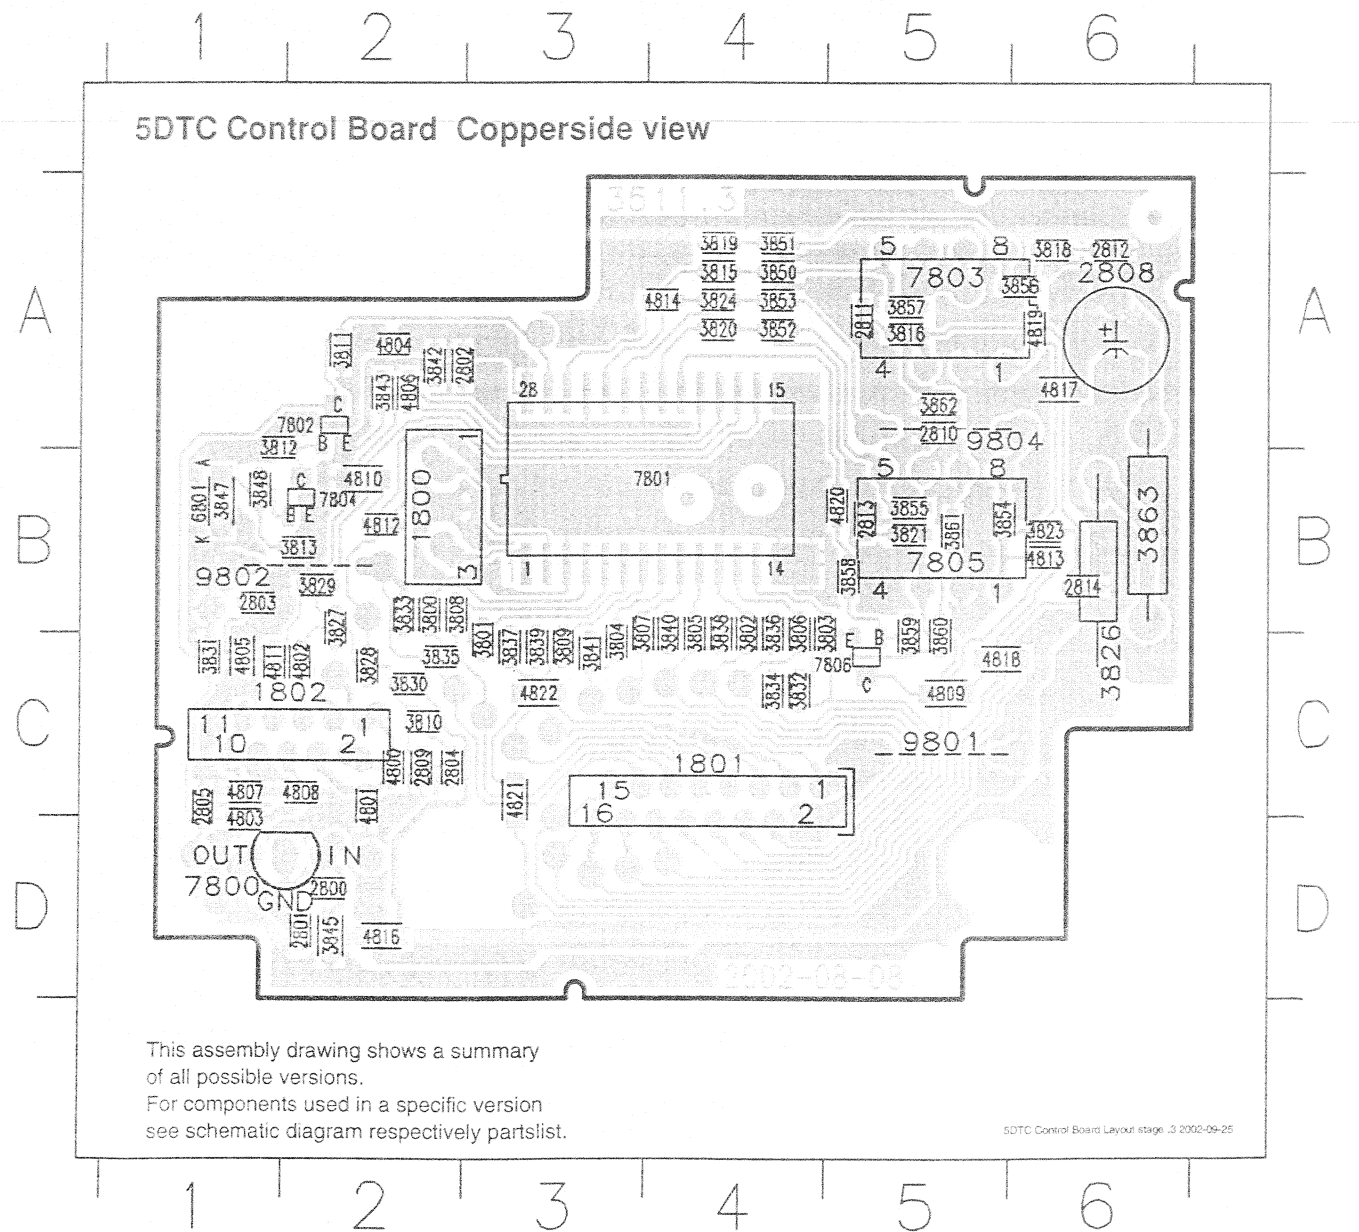

Exploded view 5DTC mechanic - for orientation only

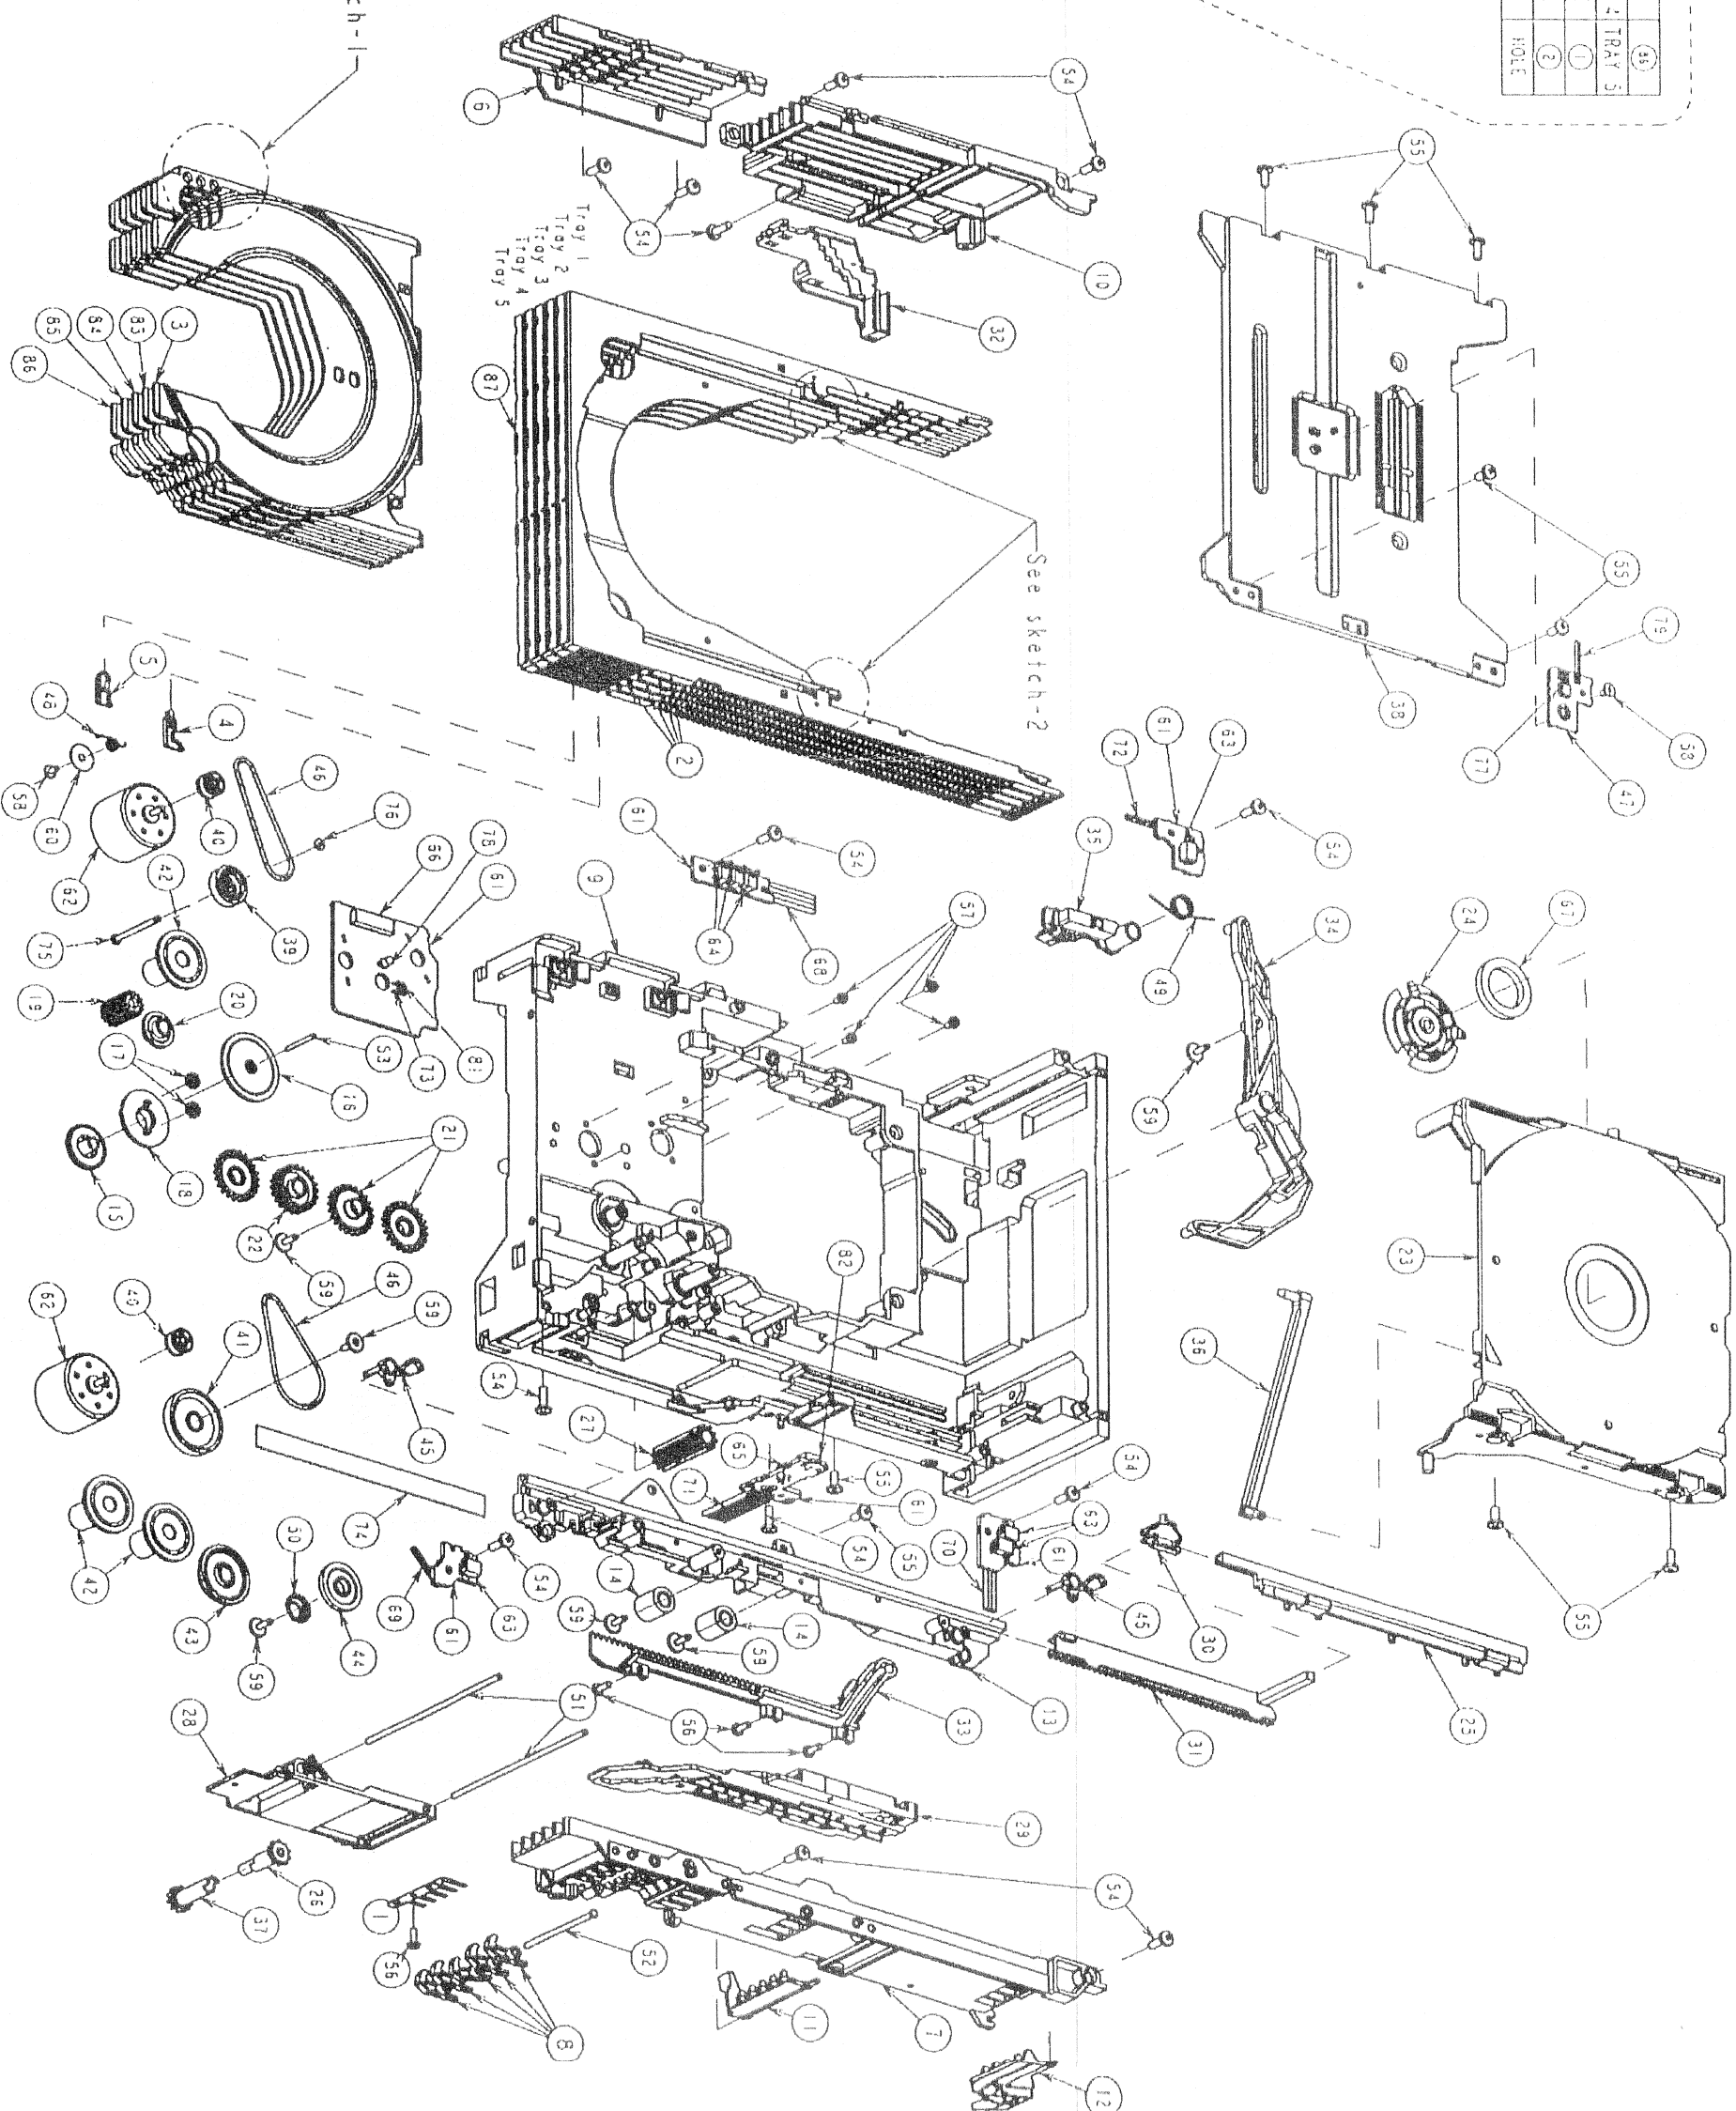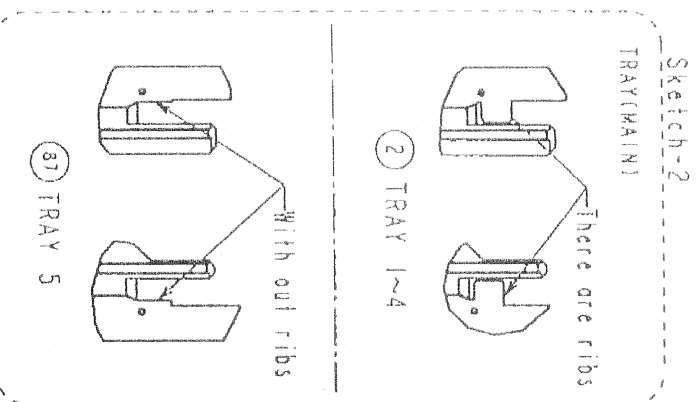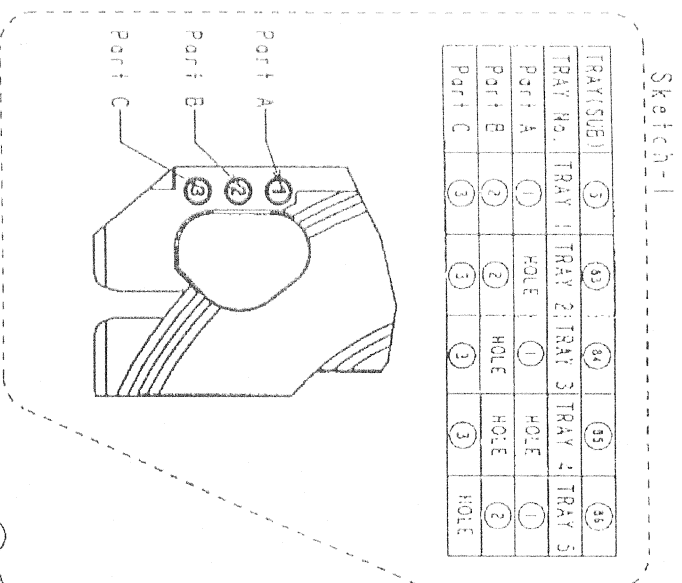

DVD MODULE COMPONENTS

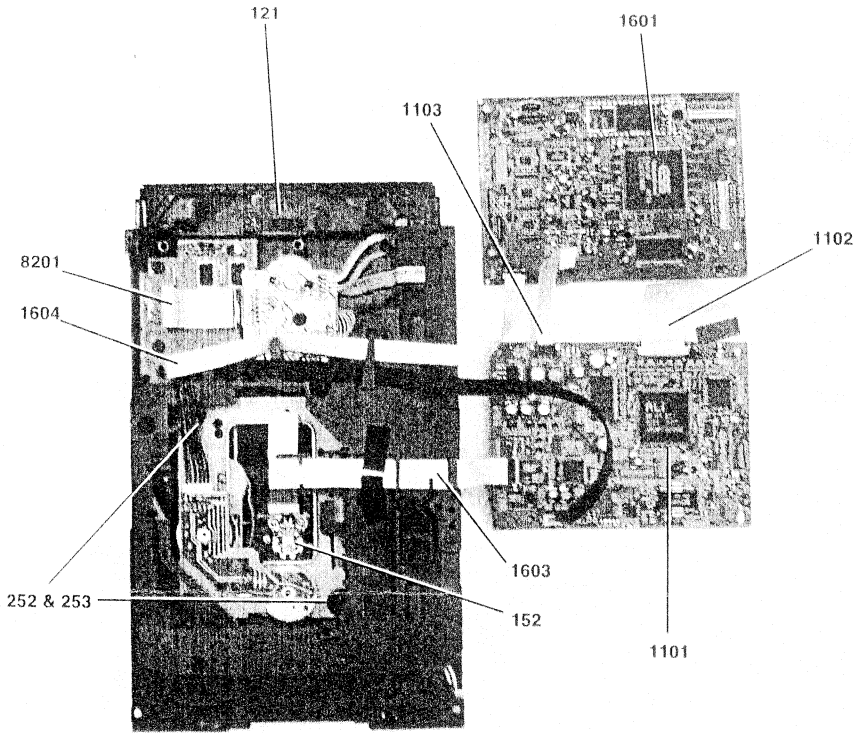

DVD MODULE PARTS LIST

121	3103 308 54710	5DTC Mechanism w/o Electronics
152	3139 119 00311	DVD Mechanism Sanyo-DV33SS
252	3139 113 27501	Damper-Rubber (50 Degrees)
253	3139 113 27501	Damper-Rubber (50 Degrees)
1101	3139 118 56941	Mono FE Board Assy CD222 FE
1102	3139 111 02151	FFC Cable 40P 10cm BD
1103	3139 111 02141	FFC Cable 7P 10cm BD
1601	3139 118 56481	Mono BE Board Assy CD222 P
1601	3139 118 56471	Mono BE Board Assy CD222 PM
1601	3139 118 56461	Mono BE Board Assy CD222 PMK
1603	3139 111 01671	FFC Cable 24P 21cm AD
1604	3139 110 35620	FFC Cable 8P 25cm BD
8021	3103 308 93110	FFC Cable 16P 6cm AD

Note: Only the parts mentioned in this list are normal service spare parts.

Notes:
For Mono FE and Mono BE pc board assembly electrical parts please refer to Chapter 11 and 12.

ELECTRICAL PARTS LIST - CONTROL BOARD

MISCELLANEOUS

1800	4822 242 72066	Ceram Filter 8MHz
1801	2422 025 17065	FFC Connector 16Pin Vert.
1802	2422 025 17788	FFC Connector 8Pin Vert.

CAPACITORS

2800	4822 126 13879	220nF +80/-20% 16V
2801	2238 586 59812	100nF 10% 50V
2802	2238 586 59812	100nF 10% 50V
2803	2238 586 59812	100nF 10% 50V
2808	4822 124 40433	47uF 20% 25V
2810	3198 017 34730	47nF 10% 16V
2811	2238 586 59812	100nF 10% 50V
2812	2238 586 59812	100nF 10% 50V
2813	2238 586 59812	100nF 10% 50V
2814	2238 586 59812	100nF 10% 50V

RESISTORS

3800	4822 051 30472	4k7 5% 0,062W
3801	4822 051 30472	4k7 5% 0,062W
3802	4822 051 30472	4k7 5% 0,062W
3803	4822 051 30472	4k7 5% 0,062W
3804	4822 051 30472	4k7 5% 0,062W
3805	4822 051 30472	4k7 5% 0,062W
3806	4822 051 30472	4k7 5% 0,062W
3807	4822 051 30472	4k7 5% 0,062W
3808	4822 051 30472	4k7 5% 0,062W
3809	4822 051 30472	4k7 5% 0,062W
3810	4822 051 30103	10k 5% 0,062W
3811	4822 051 30154	150k 5% 0,062W
3815	5322 117 13057	820R 1% 0,063W
3816	4822 051 30479	47R 5% 0,062W
3818	4822 051 30479	47R 5% 0,062W
3819	5322 117 13057	820R 1% 0,063W
3820	5322 117 13057	820R 1% 0,063W
3821	4822 051 30479	47R 5% 0,062W
3823	4822 051 30479	47R 5% 0,062W
3824	5322 117 13057	820R 1% 0,063W
3826	4822 052 10228	2R2 5% 0,33W
3827	4822 051 30101	100R 5% 0,062W
3828	4822 051 30101	100R 5% 0,062W
3829	4822 051 30101	100R 5% 0,062W
3830	4822 051 30103	10k 5% 0,062W
3831	4822 051 30103	10k 5% 0,062W
3832	4822 051 30272	2k7 5% 0,062W
3833	4822 051 30272	2k7 5% 0,062W
3834	4822 051 30272	2k7 5% 0,062W
3835	4822 051 30272	2k7 5% 0,062W
3836	4822 051 30272	2k7 5% 0,062W
3837	4822 051 30272	2k7 5% 0,062W
3838	4822 051 30103	10k 5% 0,062W
3839	4822 051 30272	2k7 5% 0,062W
3840	4822 051 30272	2k7 5% 0,062W

3841	4822 051 30103	10k 5% 0,062W
3842	4822 051 30103	10k 5% 0,062W
3845	4822 051 20159	15R 5% 0,1W
3850	4822 117 12706	10k 1% 0,063W
3851	4822 117 12706	10k 1% 0,063W
3852	4822 117 12706	10k 1% 0,063W
3853	4822 117 12706	10k 1% 0,063W
3854	4822 117 12706	10k 1% 0,063W
3855	4822 117 12706	10k 1% 0,063W
3856	4822 117 12706	10k 1% 0,063W
3857	4822 117 12706	10k 1% 0,063W
3858	4822 051 30102	1k 5% 0,062W
3859	4822 051 30103	10k 5% 0,062W
3860	5322 117 13017	100R 1% 0,063W
3861	2322 704 62002	2k 1% 0,063W
3862	4822 117 12706	10k 1% 0,063W
3863	4822 053 10228	2R2 5% 1W
4800	4822 051 30008	0R Jumper 0603
4802	4822 051 30008	0R Jumper 0603
4803	4822 051 30008	0R Jumper 0603
4804	4822 051 30008	0R Jumper 0603
4805	4822 051 20008	0R Jumper 0805
4806	4822 051 30008	0R Jumper 0603
4807	4822 051 30008	0R Jumper 0603
4808	4822 051 30008	0R Jumper 0603
4809	4822 051 20008	0R Jumper 0805
4810	4822 051 20008	0R Jumper 0805
4811	4822 051 30008	0R Jumper 0603
4812	4822 051 30008	0R Jumper 0603
4813	4822 051 30008	0R Jumper 0603
4814	4822 051 30008	0R Jumper 0603
4816	4822 051 20008	0R Jumper 0805
4817	4822 051 20008	0R Jumper 0805
4818	4822 051 20008	0R Jumper 0805
4819	4822 051 30008	0R Jumper 0603
4820	4822 051 30008	0R Jumper 0603
4821	4822 051 20008	0R Jumper 0805
4822	4822 051 20008	0R Jumper 0805

TRANSISTORS & INTEGRATED CIRCUITS

7800	4822 209 72042	MC78L05ACP, Stabilizer
7801	9322 150 41668	TMP87P809M Microcontroller
7803	4822 209 62059	TCA0372DP1, 2-Fold Op-Amp.
7805	4822 209 62059	TCA0372DP1, 2-Fold Op-Amp.
7806	3198 010 42320	BC857BW


Note: Only the parts mentioned in this list are normal service spare parts.

MONO-FE BOARD

TABLE OF CONTENTS

M29F002BT	11-1
M5705 (Ali) Chip	11-2
SP3721A Internal Block Diagram	11-5
Top View - SMD & Component layout	11-6
Bottom View - Component layout	11-7
Servo Amplifiers & Motor Drives Circuit Diagram	11-8
CD/DVD ROM Controller Circuit Diagram	11-9
Electrical parts list	11-10

M29F002BT

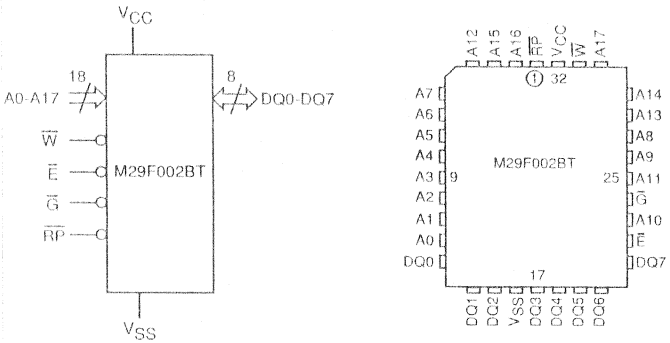

Function Description

A0-A17	Address Inputs
DQ0-DQ7	Data Inputs/Outputs
E	Chip Enable
G	Output Enable
W	Write Enable
RP	M29F002BT, M29F002BB: Reset/Block Temporary Unprotect M29F002BNT, M29F002BNB: Not Connected Internally
VCC	Supply Voltage
VSS	Ground

M5705 Pins Descriptions

Pin Name	Pin No.	Type	Description
Servo Data Slicer Interface Pins			
XSRFIN	2	I/A	Analog RF signal input after passing through the equalizer.
XSIPIN	3	I/A	Inverting input pin of data slicer.
XSDSSLV	5	O/A	Slice level output pin.
XSRSLINT	6	I/A	Reference current setting pin for analog data slicer.
Servo DAC Interface Pins			
XSAWRC	8	O/A	Output for enlarge VCO range. Analog output from DAC buffer.
XSRFGC	9	O/A	RF gain control output.
XSEFGC	10	O/A	E.F gain control output.
XSFOCUS	11	O/A	Output voltage level for focusing buffer IC.
XSTRACK	12	O/A	Output voltage level for tracking buffer IC.
XSSLEG	13	O/A	Output voltage level for sledge buffer IC.
XSMOTOR	15	O/A	Output voltage level for spindle motor buffer IC.
Servo Comparator Interface Pins			
XSRFRPLP	17	I/A	High bandwidth low pass filter input for RFRP.
XSTELP	18	I/A	High bandwidth low pass filter input for TE.
Servo ADC Interface Pins			
XSVREF2	19	I/A	2.1V reference voltage input.
XSRFRP	20	I/A	RF ripple/envelope signal input.
XSTEX	21	I/A	Tracking zero crossing input signal.
XSTEI	23	I/A	Tracking error input signal.
XSFEI	24	I/A	Focus error input signal.
XSCEI	25	I/A	1. Center error input signal. 2. Photo Interrupt Input.
XSSBAD	27	I/A	Sub-beam addition signal input.
Servo PLL Interface Pins			
XSPDIREF	166	I/A	Phase detector reference current generator. Connect a resistor between this pin and ground to set reference current.
XSFDIRF	167	I/A	Frequency detector reference current generator. Connect a resistor between this pin and ground to set reference current.
XSPLLFTR2	169	I/A	Data PLL loop filter pin #2.
XSFDO	171	O/A	Output node of frequency detector charge pump circuit.
XSFTRPI	172	I/A	Input node of loop filter OP circuit.
XSVR_PLL	173	I/A	PLL reference voltage input.
XSPDOFTR2	174	I/A	Phase detector filter pin #1.
XSVREFO	175	O/A	Reference voltage output.
XSAWRCVCO	176	I/A	Auto Wide Range Control VCO input pin. For enlarge VCO range in CAV mode.
Servo Control Interface Pins			
XSDFACT	29	I	Defect detection signal input.
XSCSJ	30	O	Chip select signal for accessing control registers.
XSCCLK	31	O	Clock output for accessing control registers.
XSDATA	32	I/O	Registers data input/output pin.
XSLDC	33	O	Laser diode on/off control output for both CD/DVD.
XSGIN	34	I	Motor Hall sensor input.
XSSPDON	35	O	Spindle motor on output.
XSLAG[3:0]	36,37, 38,39	O	These pins are used to monitor some status of servo control block.

Pin Name	Pin No.	Type	Description
Microcontroller Interface Pins			
XGPIO[2:0]	48,51,52	I/O	1. These pins are used as general purpose I/O bus. 2. When use internal microcontroller, XGPIO[2] can be used as programmable I/O port 3.6.
XMP1_7	40	I/O	Internal microcontroller programmable I/O port 1.7.
XMP1_6	41	I/O	Internal microcontroller programmable I/O port 1.6.
XMP1_5	43	I/O	This pin is now changed to be NC.
XMP1_4	44	I/O	Internal microcontroller programmable I/O port 1.4.
XMP1_3	45	I/O	Internal microcontroller programmable I/O port 1.3.
XMP1_2	47	I/O	Internal microcontroller programmable I/O port 1.2.
XMP1_1	49	I/O	Internal microcontroller programmable I/O port 1.1.
XMP1_0	57	I/O	Internal microcontroller programmable I/O port 1.0. This pin is default used as the A16 (microcontroller address line 16).
XMFSCSJ	46	I/O	Output chip select connected to external flash ROM chip enable pin.
XMPSENJ	54	I/O	Output program store enable connected to external ROM PSENJ pin.
XMALE	56	I/O	This signal is used as address latch signal in address/data mux mode.
XMCSJ	70	I/O	1. This signal must be asserted for all microcontroller accesses to the registers of this chip. 2. When use internal microcontroller, this signal can be used as programmable I/O port 3.1.
XMRDJ	71	I/O	1. This signal is used as the Read Strobe signal. 2. When use internal microcontroller, this signal can be used as programmable I/O port 3.0.
XMWRJ	72	I/O	This signal is used as the Write Strobe signal.
XMINT1J	73	I/O	1. This signal is an interrupt line to the microcontroller. 2. When use internal microcontroller, this signal can be used as programmable I/O port 3.7.
XMA[15:0]	91, 90, 89, 87, 74, 75, 77, 78, 79, 80, 81, 82, 83, 84, 85, 86	I/O	These pins are used as address bus.
XMD[7:0]	69, 68, 67, 66, 65, 64, 63, 62	I/O	These pins are used as data bus for the 16-bit processor mode, or the address/data mux bus for the 8-bit processor mode.
Miscellaneous Pins			
XTPLCK	163	I/O	PLCK test pin.
XTSLRF	164	I/O	SLRF test pin.
XOSC1	59	I	Crystal input/ System clock. The input frequency from outside crystal or oscillator is 33.8688Mhz.
XOSC2	60	O	Crystal output.
XCRSTJ	53	I	Chip Reset. An asserted lowinput generates a component reset that stops all operations within the chip and deasserts all output signals. All input/output signals are set to input.

M5705 (Ali) Features

Data Separator

- Built-in data slicer and data PLL for data recovery from RF signal.
- Supports digital/analog slice level adjustment.
- Built-in auto calibration function.
- Built-in auto wire range control function.

DVD-DSP

- Built-in synchronous pattern/ID detection /protection/separation.
- Built-in EFM+ (8 to 16) demodulation circuit.
- Built-in high performance RSPC ECC circuit.
- Supports up to 6X DVD-ROM system with ECC correcting "on the fly".
- Built-in descrambler/EDC circuit.

CD-DSP

- Synchronous pattern detection, protection and interpolation.
- Built-in EFM demodulation circuit, subcode demodulation circuit.
- Dual C1 correction and quadruple C2 correction.
- Subcode Q data can output with audio data synchronously.

Digital Servo

- Built-in A/D and D/A converters for servo control signals processing.
- Built-in digital controller for focus, tracking servo control of CD/DVD systems.
- Built-in CLV/CAV auxiliary function for spindle servo control.
- Built-in "Seek Sensor" auxiliary circuit for seek control.
- Automatic adjustment of focus servo and tracking servo, for loop gain, offset and balance.
- Built-in RF gain automatic adjustment function.
- Built-in AFC circuit and APC circuit for CLV and AFC circuit for CAV spindle servo of CD/DVD systems.
- Built-in defect and shock protection function.

DRAM Interface

- Supports up to 16 Mb EDO DRAM and SDRAM.
- Separate buffer address pointers and automatic address calculation that save firmware effort.
- Read-ahead cache scheme for multimedia isochronous transfer.
- Protection logic preventing uncorrected sectors being released to the host.

Target Search

- Built-in target sector searching circuit for auto-searching the target sector.
- Automatic data buffering after the target sector has been located.

C3 ECC/EDC

- Programmable Reed-Solomon Product Code (RSPC) that allows different error correction schemes for CD-ROM.
- Built-in On-chip EDC function.
- Support up to 32X CD-ROM system with ECC correcting "on the fly".


Host Interface

- Supports ATA PIO mode 4 timing
- Supports Multiword DMA mode 2 timing
- Compliant with SFF-8020(ATAPI) 2.5, ATA 3(Overlapping feature), and SFF-8090 (ATAPI for DVD) standard
- High current drivers with slew rate control for direct connecting to the ATA bus and noise immunity.
- Automatic Read Control Circuit for host data transfer.
- Automatic wake up from power down on host reset or command write
- Automatic sequence for packet command receiving and Automatic updating of the host task file registers
- Supports ATAPI write command that can let user update firmware from PC.
- Built-in authentication circuit for copy protection.
- Multiplexed MPEG decoder interface (local bus).


Microcontroller Interface

- Embedded microcontroller compatible with Intel 8032 command set
- Supports Intel 8032 series MCUs
- Supports Intel 8032 series MCUs and Hitachi H8 series MCUs.
- Supports automatically download firmware function directly from ATAPI interface to flash memory
- Supports "on-system" upgrade flash memory function from CD-R discs or ATAPI interface
- High speed register (buffer RAM) access to meet the requirement of high performance system
- Supports Direct mapped access to the buffer RAM using ready bit handshaking

M5705 (Ali) Application

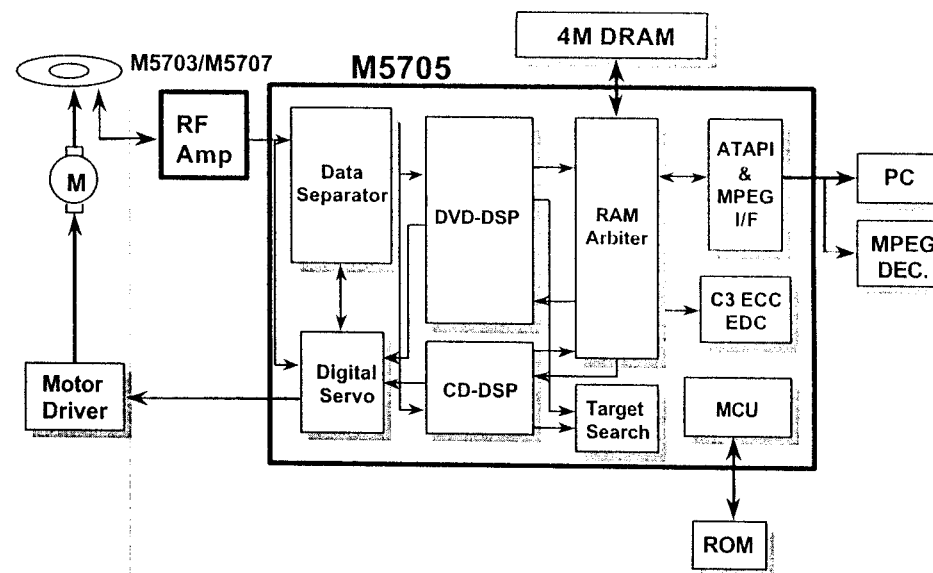

Pin Name	Pin No.	Description
Power Pins		
AVDD5_DS	4	Analog Power +5V for Data Slicer part.
AVDD5_DA	14	Analog Power +5V for DAC part.
AVDD5_AD	26	Analog Power +5V for ADC part.
AVDD5_PL	168	Analog Power +5V for Data PLL part.
VDD	7,55,58, 76,115, 146,150, 162	Power + 3.3V for digital core logic and pad.
AVSS_DS	1	Analog Ground for Data Slicer part.
AVSS_DA	16	Analog Ground for DAC part.
AVSS_AD	22	Analog Ground for ADC part.
AVSS_PL	170	Analog Ground for Data PLL part.
GND	28,42,61, 88,110, 130,138, 154,165	Digital Ground for core logic and pad.

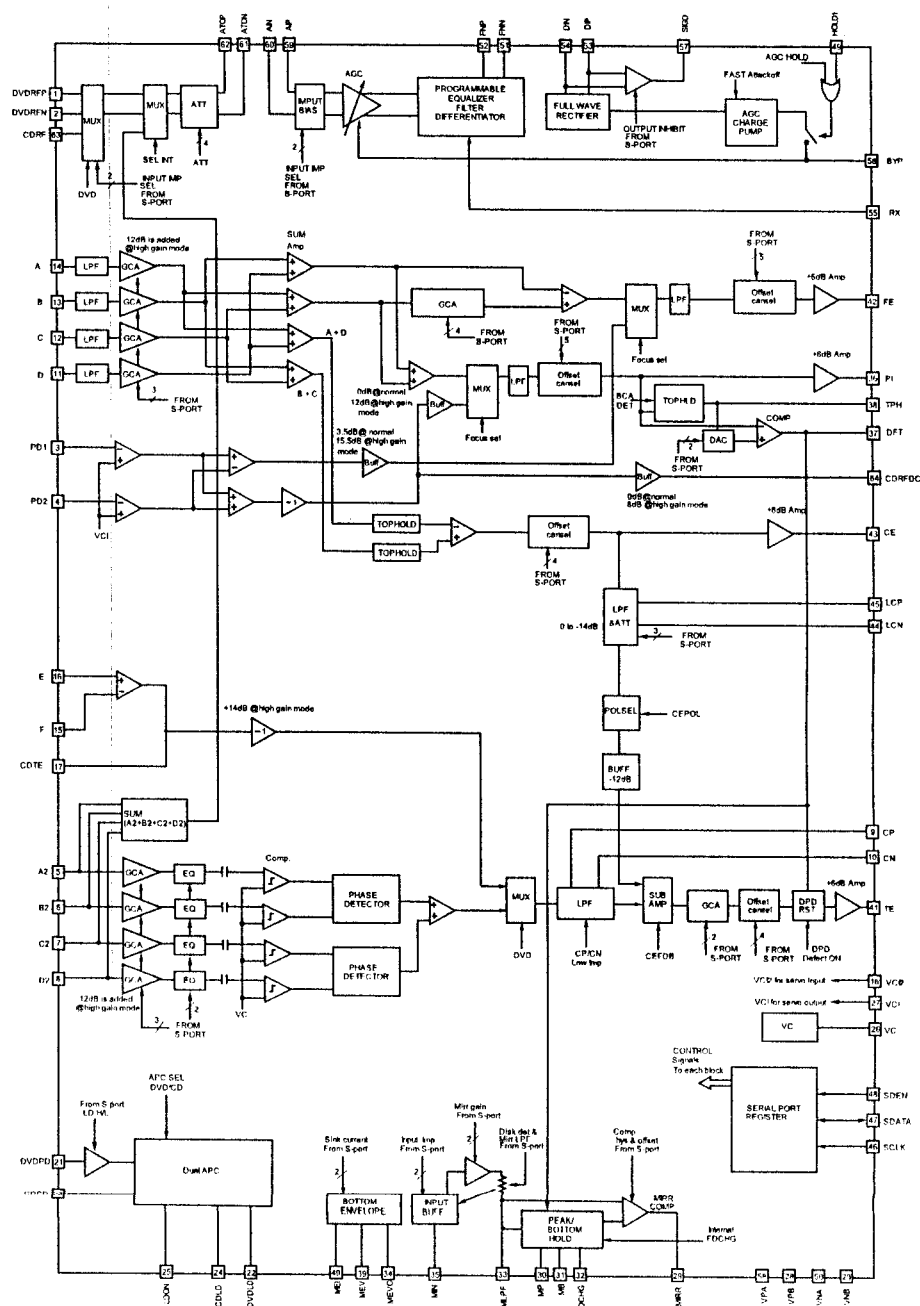


M5705 Pins Descriptions


Pin Name	Pin No.	Type	Description
Host Interface Pins			
XHCS1J	94	I	This pin is used to select the command block task file registers.
XHCS3J	93	I	This pin is used to select the control block task file registers.
XHIORJ	103	I	Asserted by the host during a host I/O read operation.
XHIOWJ	104	I	Asserted by the host during a host I/O write operation.
XHDRQ	105	O	1. DMA request. This pin is configured as the DMA request signal, and is used during DMA transfer between the host and the controller. This pin is tri-stated when DMA transfers are not enabled. 2. MPEG acknowledge. This pin is used as the ACKJ signal when MPEG interface mode is selected.
XHDACKJ	101	I	1. DMA acknowledge. This pin is configured as DACKJ, and is used as the DMA acknowledge signal during DMA data transfers. 2. MPEG request. This pin is used as the REQ signal when MPEG interface mode is selected.
XHCS16J	99	O	1. 16-bit data select. This signal indicates that a 16-bit data transfer is active on the host data bus. This pin is open-drain tri-state output. 2. MPEG clock. This pin is used as the CLOCK signal when MPEG interface mode is selected.
XHRSTJ	50	I	Host Reset. The reset of ATA bus
XHINT	100	O	1. Host interrupt request. This tri-state pin is the host interrupt request, and is asserted to indicate to the host that the controller needs attention. 2. MPEG begin. This pin is used as the BEGIN signal when MPEG interface mode is selected.
XHPDIAGJ	97	I/O	This pin is used as the Passed Diagnostics signal, and may be an input or an open-drain output.
XHDASPJ	92	I/O	This pin is used as the Drive Active/ Slave Presentsignal, and is an input or an open-drain output. This pin is used for Master/Slave drive communication and/or for driving an LED.
XHIORDY	102	O	1. I/O channel ready. This signal is driven low to extend host transfer cycles when the controller is not ready to respond. This pin will be tri-stated when a read or write is not in progress. 2. MPEG error. This pin is used as the ERROR signal when MPEG interface mode is selected.
XHA[2:0]	95, 98, 96	I	Host address lines. The host address lines A[2:0] are used to access the various host control, status, and data registers.
XHD[15:0]	106, 108, 111, 113, 116, 118, 120, 122, 123, 121, 119, 117, 114, 112, 109, 107	I/O	1. Host data bus. This bus is used to transfer data and status between the host and the controller. 2. MPEG data bus 7-0. The HD[7:0] are used as the DATA[7:0] when MPEG interface mode is selected. 3. VCD I/F. Bit3-0 are used as VCD I/F signal when VCD function is enabled. The relationship of bit3-0 and VCD I/F is as follow. HD0 → CD-DATA HD1 → CD-LRCK HD2 → CD-BCK HD3 → CD-C2PO

Pin Name	Pin No.	Type	Description
RAM Interface Pins			
XRSDCLK	143	O	This signal is the clock output for SDRAM.
XROEJ	147	O	This signal is used as the memory output enable for external DRAM buffers. After RSTJ is asserted, this signal will be low.
XRWEJ	142	O	This signal is asserted low when a buffer memory write operation is active.
XRRASJ	144	O	This signal is used as Row address output to external DRAM buffer. After RSTJ is asserted, this signal will be high.
XRCASJ	145	O	This signal is used as column address output to external DRAM. After RSTJ is asserted, this signal will be high.
XRA[11:0]	151, 152, 148, 149, 153, 155, 156, 157, 161, 160, 159, 158	O	1. RAM address lines. These are bits 11-0 for addressing the buffer memory. 2. Hardware setting. The bits 6-0 are used as hardware setting for some functions. RA[9]: FLASH size is 64K/128K 1: FLASH size is 64K. 0: FLASH size is 128K. RA[8]: External CPU is 8032/H8 1: 8032 0: H8 RA[7]: Microcontroller programmable I/O port 1 pin control 1: By internal microcontroller. 0: By registers to decide input/output. RA[6]: System testpin output. 1: Normal operation. 0: System test pin output. RA[5]: For testing purpose, don't need to set RA[4]: IDE master/slave. 1: Slave. 0: Master. RA[3]: For testing purpose, don't need to set RA[2]: For testing purpose, don't need to set RA[1-0]: MCU Mode selection. 11: Normal Mode (internal uP, internal address latch). 10: Outside uP Mode (ICE Mode). 01: Test mode for internal uP testing. 00: Internal uP mode with external address latch.
XRD[15:0]	124, 126, 128, 131, 133, 135, 137, 140, 141, 139, 136, 134, 132, 129, 127, 125	I/O	These signals are the 8-bit parallel data lines to/from the buffer memory.

BOTTOM VIEW - COMPONENT LAYOUT

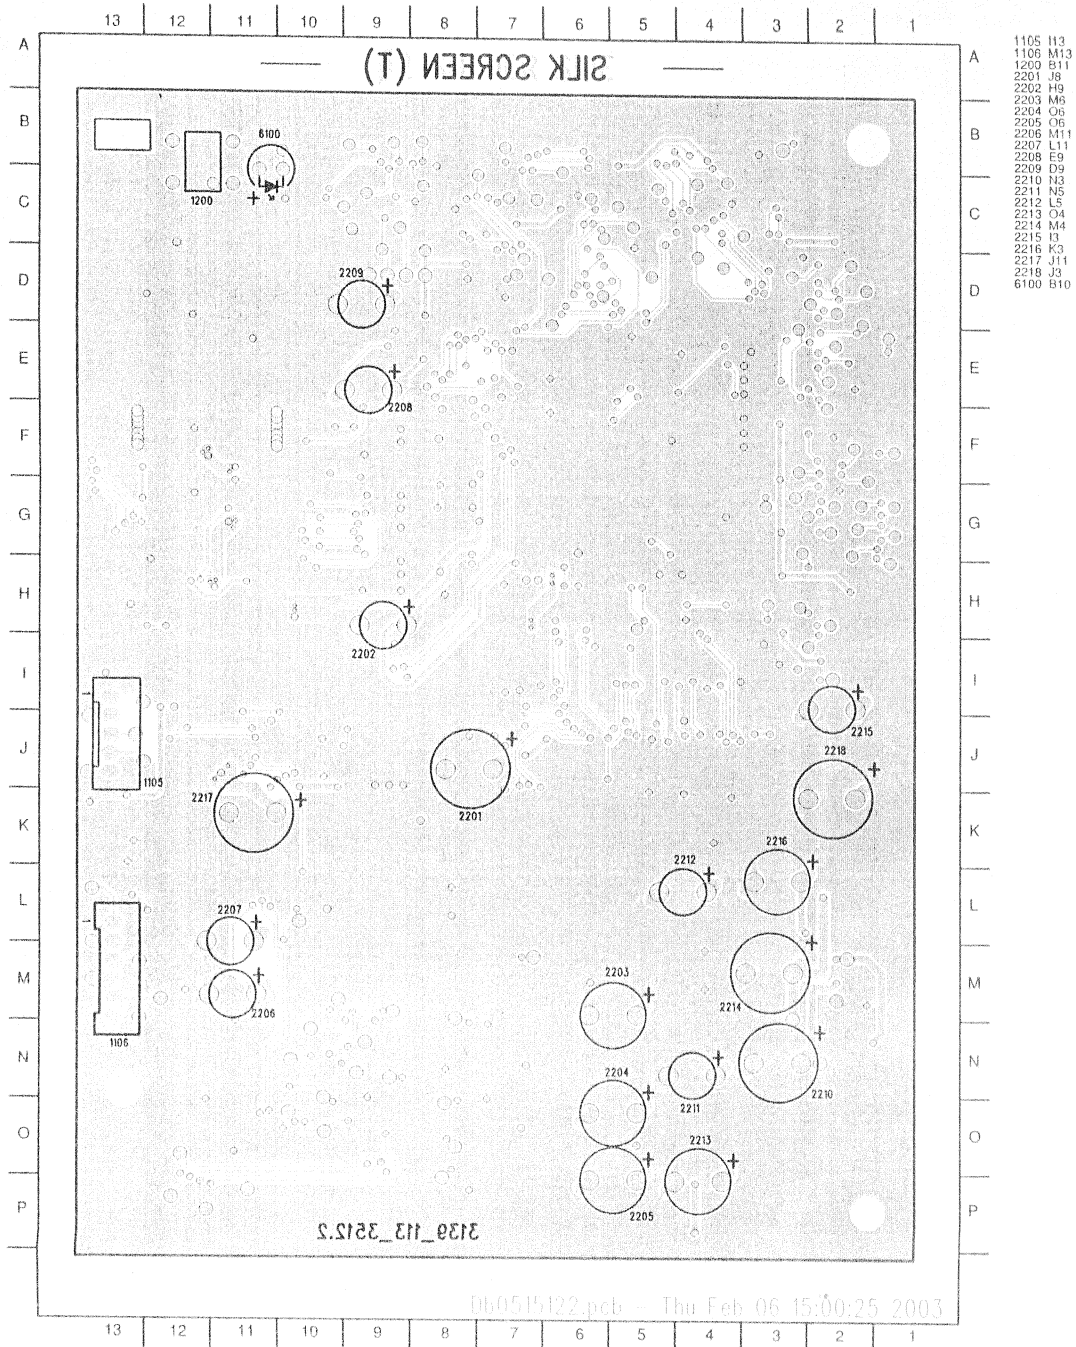


TOP VIEW - SMD & COMPONENT LAYOUT

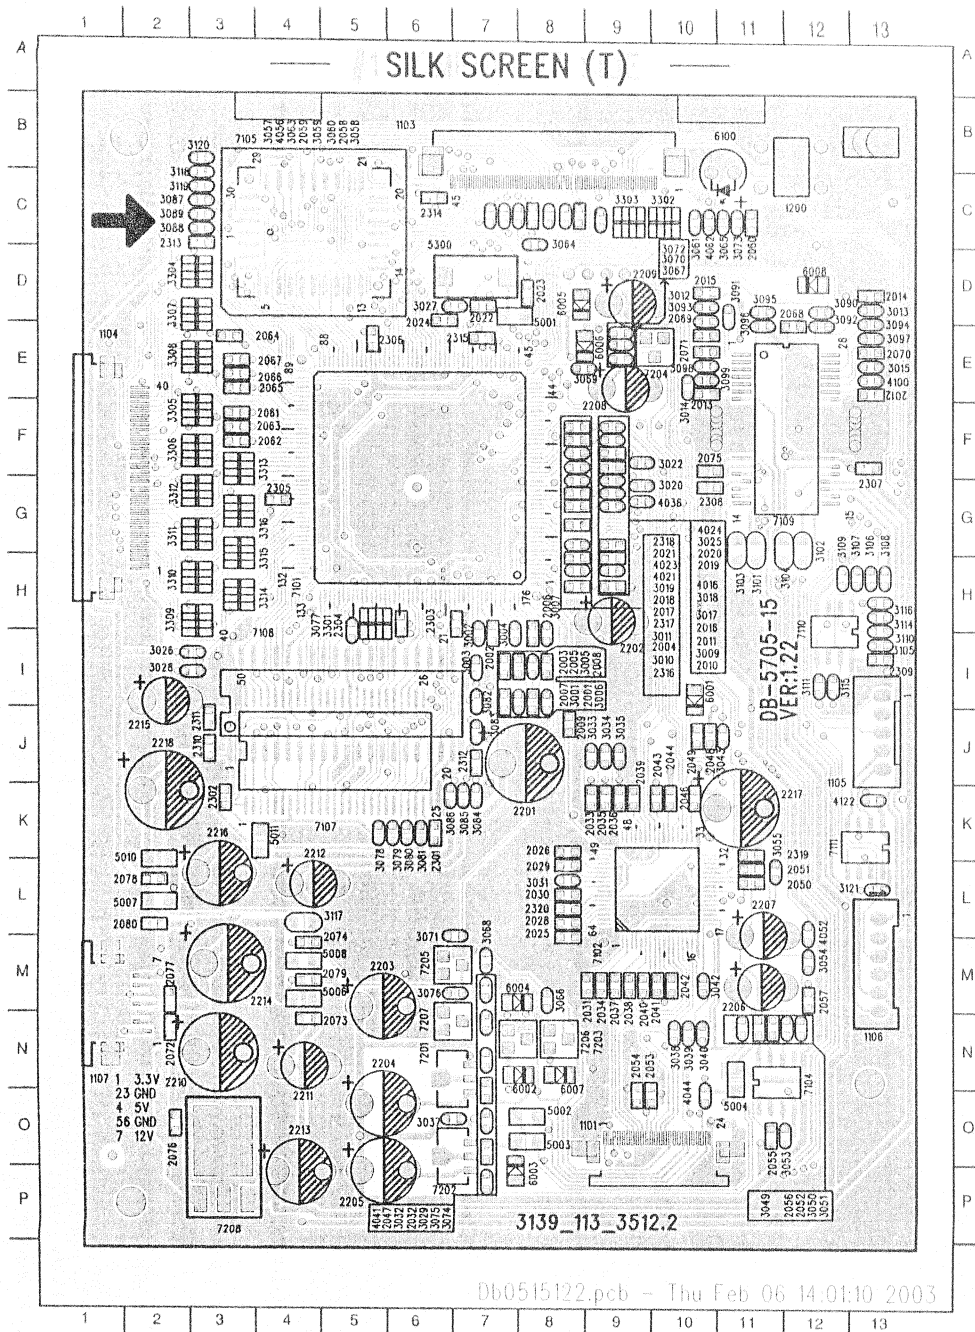


1101 C9	2310 J5	3301 H6
1102 C9	2311 J5	3302 H6
1103 B8	2312 J7	3303 C9
1104 F2	2313 C3	3304 C3
1105 H13	2314 B5	3305 E3
1106 M13	2315 D7	3306 F3
1107 M2	2316 G8	3307 D3
1200 B11	2317 G8	3308 D3
2001 H5	2318 E8	3309 H3
2002 H7	2319 K11	3310 G3
2003 I7	2320 L8	3311 G3
2004 C8	3001 H8	3312 F3
2005 H8	3002 H7	3313 F4
2006 H8	3003 I7	3314 H4
2007 I7	3004 H7	3315 G4
2008 H5	3005 H8	3316 F4
2009 H8	3006 H8	4016 F9
2010 G9	3007 H8	4021 F8
2011 G9	3009 G9	4023 F8
2012 E13	3010 G8	4024 L9
2013 E10	3011 G8	4036 F9
2014 D12	3012 D10	4041 P7
2015 C10	3013 D12	4044 H10
2016 G9	3014 E10	4052 L12
2017 F8	3015 D12	4056 B7
2018 F8	3017 F9	4062 C10
2019 F9	3018 F9	4100 E12
2020 F9	3019 F8	4122 J12
2021 E8	3020 F9	5001 D7
2022 D7	3022 F9	5002 O8
2023 D8	3025 E9	5003 O8
2024 D7	3026 H3	5004 H11
2025 L8	3027 D7	5006 M5
2026 K8	3028 I3	5007 L3
2028 L8	3029 N7	5008 M5
2029 K8	3031 K8	5010 K3
2030 L8	3032 O7	5011 K4
2031 M8	3033 J9	5300 C7
2032 N7	3034 J9	6001 H10
2033 J9	3035 J9	6002 N8
2034 M9	3037 O7	6003 O7
2035 J9	3038 N10	6004 M8
2036 J9	3039 N10	6005 D8
2037 M9	3040 N10	6006 D8
2038 M9	3042 M10	6007 N8
2039 J9	3043 J10	6008 C12
2040 M9	3049 M11	6100 B10
2041 M9	3050 M11	7101 F6
2042 M10	3051 M11	7102 L9
2043 J9	3053 C11	7104 H11
2044 J10	3054 M12	7105 C5
2046 J10	3055 K11	7107 J5
2047 O7	3057 B7	7108 I5
2048 J10	3058 C9	7109 E11
2049 J10	3059 B8	7110 H12
2050 L11	3060 B8	7111 K12
2051 K11	3061 C10	7201 N7
2052 M11	3063 B8	7202 O7
2053 N9	3064 C8	7203 N8
2054 N9	3065 C10	7204 D9
2055 O11	3066 M8	7205 M7
2056 M11	3067 D9	7206 N8
2057 M12	3068 M7	7207 M7
2058 B8	3069 E8	7208 O3
2059 B8	3070 D9	
2060 C11	3071 L7	
2061 E4	3072 D9	
2062 F4	3073 C11	
2063 E4	3074 M7	
2064 D4	3075 M7	
2065 E4	3076 M7	
2066 E4	3077 H5	
2067 D4	3078 K6	
2068 D11	3079 K6	
2069 D10	3080 K6	
2070 D12	3081 K6	
2071 D10	3082 I7	
2072 M3	3083 I7	
2073 M5	3084 J7	
2074 L5	3085 J7	
2075 F10	3086 J7	
2076 O3	3087 B3	
2077 M3	3088 C3	
2078 K2	3089 B3	
2079 M5	3090 D12	
2080 L2	3091 D10	
2201 J6	3092 D12	
2202 H9	3093 D10	
2203 M6	3094 D12	
2204 O6	3095 D11	
2205 O6	3096 D11	
2206 M11	3097 D12	
2207 L11	3098 D10	
2208 E9	3099 E10	
2209 D9	3101 G11	
2210 N3	3102 G11	
2211 N5	3103 G11	
2212 L5	3104 G11	
2213 O4	3105 H13	
2214 M4	3106 G12	
2215 I3	3107 G12	
2218 K3	3108 G13	
2217 J11	3109 G12	
2218 J3	3110 H13	
2301 K6	3111 H12	
2302 J3	3114 H13	
2303 H7	3115 H12	
2304 H6	3116 H13	
2305 F4	3117 L5	
2306 D6	3118 B3	
2307 F12	3119 B3	
2308 F10	3120 B3	
2309 H13	3121 L13	

SERVO AMPLIFIERS & MOTOR DRIVERS CIRCUIT

1101 F2	2029 C10	2035 D11	2041 E7	2048 G11	2054 G7	2070 B2	2077 H1	2207 H10	2307 A4	3031 D9	3038 F7	3050 E14	3068 G8	3091 B1	3097 B2	3104 B5	3110 B7	4041 I8	5006 I3	6008 D2	7201 I7	7206 I2
1106 D1	2030 C9	2036 D11	2042 E7	2049 G11	2055 H12	2071 C2	2079 I4	2210 I1	2308 A4	3032 I8	3039 F7	3051 F13	3071 H8	3092 D2	3098 C2	3105 A7	3111 B11	4052 F12	5006 I4	7102 E9	7202 I6	
1107 F1	2031 C8	2037 E6	2043 E11	2050 H10	2056 F14	2072 I1	2079 I4	2211 I3	2309 A8	3033 D12	3040 G7	3053 H12	3074 H7	3093 B2	3099 C1	3106 A8	3114 B7	4100 C2	6002 I7	7104-A I13	7203 G6	
2025 C9	2032 I7	2038 E8	2044 F12	2051 H10	2057 F13	2073 I3	2079 I4	2212 I2	2319 H11	3034 D12	3042 G8	3054 F13	3075 H6	3094 A1	3101 B5	3107 A7	3115 A12	5002 I6	6003 I6	7104-B F14	7205 H8	
2026 C10	2033 D11	2039 E11	2046 F11	2052 G6	2058 C1	2075 I2	2079 I4	2214 H1	2320 H11	3035 D12	3043 H11	3055 F12	3076 H7	3095 C1	3102 A5	3108 A9	3116 C7	5003 I5	6004 G6	7110-A A12	7206 H6	
2028 C9	2034 D7	2040 E6	2047 I6	2053 G6	2059 C2	2076 I1	2079 I4	2217 I4	2329 I7	3037 I6	3049 H12	3066 G6	3090 D2	3096 C2	3103 B5	3109 A7	4036 E12	5004 G6	6007 H6	7110A-A B8	7207 H7	

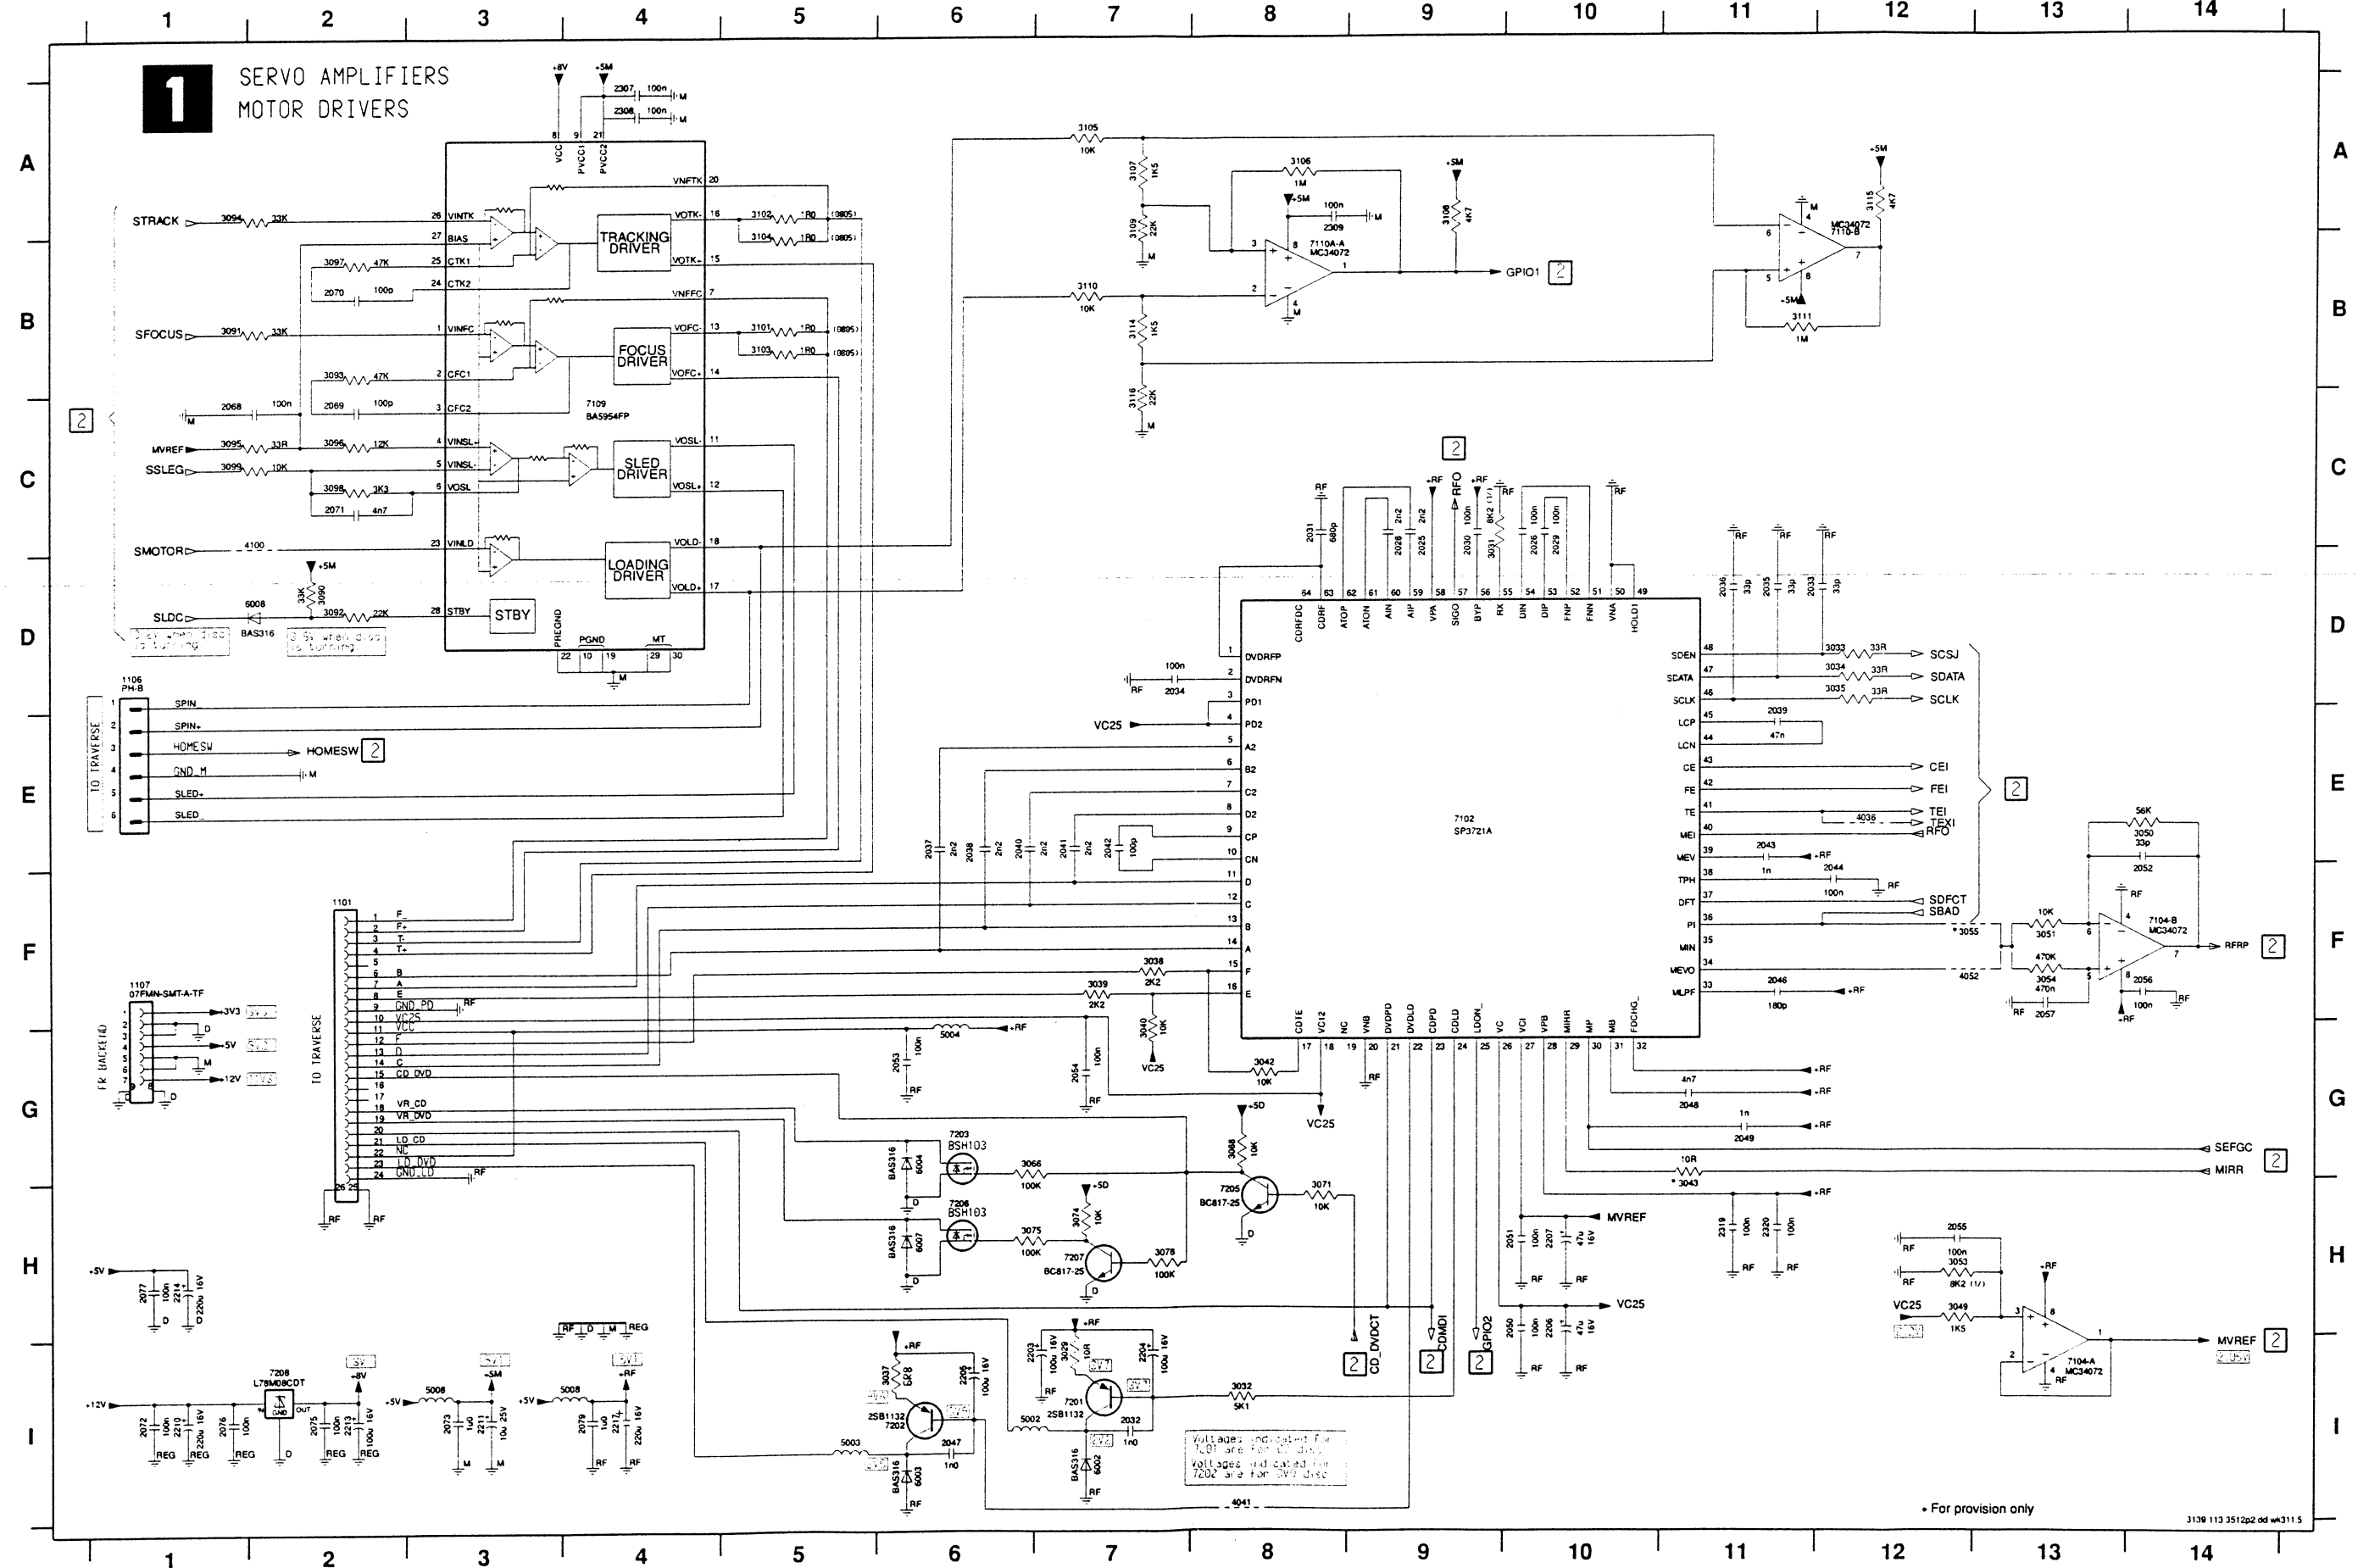

CD/DVD ROM CONTROLLER CIRCUIT

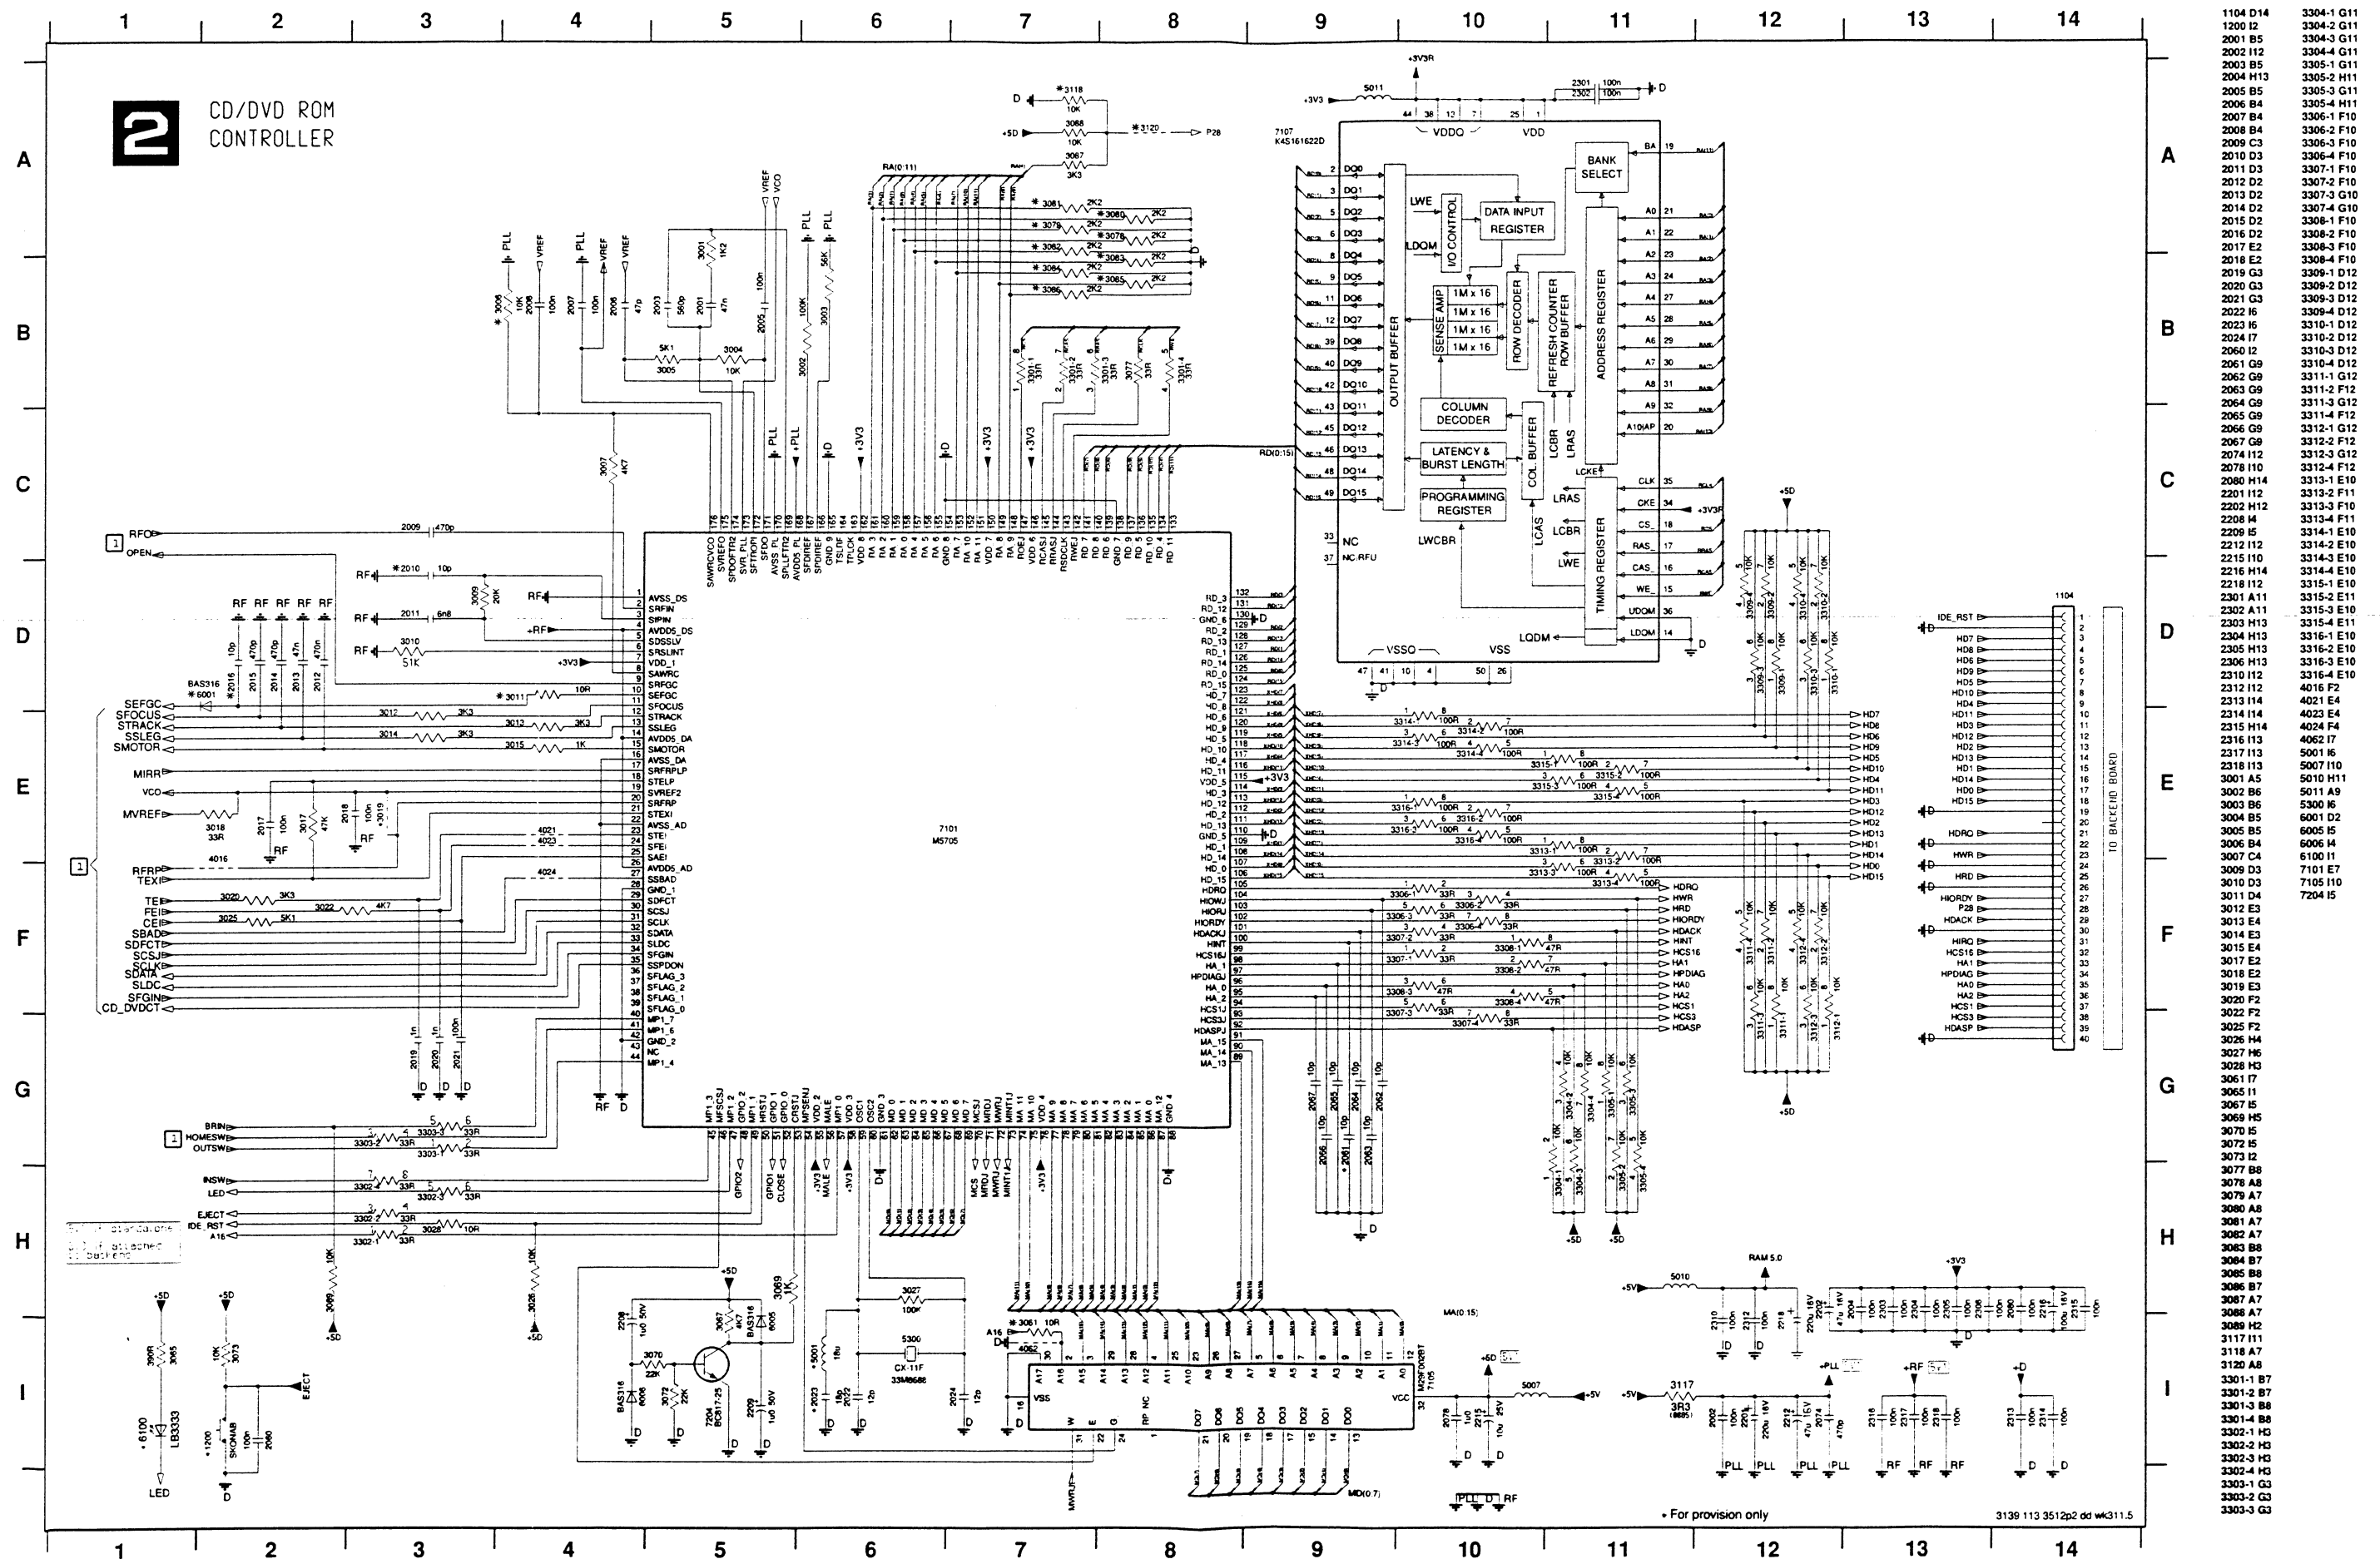

ELECTRICAL PARTS LIST - MONO-FE BOARD

RESISTORS

3311	4822 117 13578	RES NETWORK 4 X 10k 5% 1206
3312	4822 117 13578	RES NETWORK 4 X 10k 5% 1206
3313	3198 031 11010	RST NETWORK 4 X 100R 5% 1206
3314	3198 031 11010	RST NETWORK 4 X 100R 5% 1206
3315	3198 031 11010	RST NETWORK 4 X 100R 5% 1206
3316	3198 031 11010	RST NETWORK 4 X 100R 5% 1206
4016	4822 051 30008	0R JUMPER 0603
4021	4822 051 30008	0R JUMPER 0603
4023	4822 051 30008	0R JUMPER 0603
4024	4822 051 30008	0R JUMPER 0603
4036	4822 051 30008	0R JUMPER 0603
4041	4822 051 30008	0R JUMPER 0603
4044	4822 051 30008	0R JUMPER 0603
4052	4822 051 30008	0R JUMPER 0603
4056	4822 051 30008	0R JUMPER 0603
4062	4822 051 30008	0R JUMPER 0603
4100	4822 051 30008	0R JUMPER 0603

7207 4822 130 42804 BC817-25
7208 9322 163 24668 L78M08CDT

Note: Only the parts mentioned in this list are normal service spare parts.

COILS & FILTERS

5002	4822 157 71206	IND FXD 100MHZ 600R
5003	4822 157 71206	IND FXD 100MHZ 600R
5004	4822 157 71206	IND FXD 100MHZ 600R
5006	4822 157 71206	IND FXD 100MHZ 600R
5007	4822 157 71206	IND FXD 100MHZ 600R
5008	4822 157 71206	IND FXD 100MHZ 600R
5010	4822 157 71206	IND FXD 100MHZ 600R
5011	4822 157 71206	IND FXD 100MHZ 600R
5300	4822 242 10757	XTAL RESONATOR 33,868MHZ 20P

DIODES

6002	4822 130 11397	BAS316
6003	4822 130 11397	BAS316
6004	4822 130 11397	BAS316
6005	4822 130 11397	BAS316
6006	4822 130 11397	BAS316
6007	4822 130 11397	BAS316
6008	4822 130 11397	BAS316

TRANSISTORS & INTEGRATED CIRCUITS

7101	9322 186 11671	M5705
7102	9322 185 60671	SP3721AAA0PM
7104	4822 209 32073	MC34072D
7105	9965 000 19029	M29F002BT-70K1 with SW program
7107	9322 159 55668	K4S161622D-TC70
7109	9322 187 63668	BA5954FP
7110	4822 209 32073	MC34072D
7201	4822 130 11565	2SB1132
7202	4822 130 11565	2SB1132
7203	9340 547 13215	BSH103
7204	4822 130 42804	BC817-25
7205	4822 130 42804	BC817-25
7206	9340 547 13215	BSH103

ELECTRICAL PARTS LIST - MONO-FE BOARD

MISCELLANEOUS

	3139 118 56941	FE (Front End) PCB Assembly CD222
1101	2422 025 17529	FFC Socket 24P Hort.
1104	2422 025 17371	FFC Socket 40P Hort.
1107	2422 025 16806	FFC Socket 7P Hort.

CAPACITORS

2001	3198 017 34730	47nF 16V
2002	2238 586 59812	100nF 50V
2003	4822 126 14249	560pF 10% 50V
2004	2238 586 59812	100nF 50V
2005	2238 586 59812	100nF 50V
2006	4822 126 11785	47pF 5% 50V
2007	2238 586 59812	100nF 50V
2008	2238 586 59812	100nF 50V
2009	4822 126 13881	470pF 5% 50V
2011	5322 126 11582	6,8nF 10% 63V
2012	3198 017 44740	470nF 10V
2013	3198 017 34730	47nF 16V
2014	4822 126 13881	470pF 5% 50V
2015	4822 126 13881	470pF 5% 50V
2017	2238 586 59812	100nF 50V
2018	2238 586 59812	100nF 50V
2019	3198 016 31020	1nF 25V
2020	3198 016 31020	1nF 25V
2021	2238 586 59812	100nF 50V
2022	4822 126 11663	12pF 50V
2024	4822 126 11663	12pF 50V
2025	4822 126 14238	2,2nF 50V
2026	2238 586 59812	100nF 50V
2028	4822 126 14238	2,2nF 50V
2029	2238 586 59812	100nF 50V
2030	2238 586 59812	100nF 50V
2031	3198 016 36810	680pF 25V
2032	3198 016 31020	1nF 25V
2033	2222 867 15339	33pF 5% 50V
2034	2238 586 59812	100nF 50V
2035	2222 867 15339	33pF 5% 50V
2036	2222 867 15339	33pF 5% 50V
2037	4822 126 14238	2,2nF 50V
2038	4822 126 14238	2,2nF 50V
2039	3198 017 34730	47nF 16V
2040	4822 126 14238	2,2nF 50V
2041	4822 126 14238	2,2nF 50V
2042	2020 552 94427	100pF 5% 50V
2043	3198 016 31020	1nF 25V
2044	2238 586 59812	100nF 50V
2046	4822 126 14508	180pF 5% 50V
2047	3198 016 31020	1nF 25V
2048	4822 126 13193	4,7nF 10% 63V
2049	3198 016 31020	1nF 25V
2050	2238 586 59812	100nF 50V
2051	2238 586 59812	100nF 50V

2052	2222 867 15339	33pF 5% 50V
2053	2238 586 59812	100nF 50V
2054	2238 586 59812	100nF 50V
2055	2238 586 59812	100nF 50V
2056	2238 586 59812	100nF 50V
2057	3198 017 44740	470nF 10V
2058	4822 126 11785	47pF 5% 50V
2059	4822 126 11785	47pF 5% 50V
2060	2238 586 59812	100nF 50V
2062	4822 122 33741	10pF 10% 50V
2063	4822 122 33741	10pF 10% 50V
2064	4822 122 33741	10pF 10% 50V
2065	4822 122 33741	10pF 10% 50V
2066	4822 122 33741	10pF 10% 50V
2067	4822 122 33741	10pF 10% 50V
2068	2238 586 59812	100nF 50V
2069	2020 552 94427	100pF 5% 50V
2070	2020 552 94427	100pF 5% 50V
2071	4822 126 13193	4,7nF 10% 63V
2072	2238 586 59812	100nF 50V
2073	3198 017 41050	1uF 10V
2074	4822 126 13881	470pF 5% 50V
2075	2238 586 59812	100nF 50V
2076	2238 586 59812	100nF 50V
2077	2238 586 59812	100nF 50V
2078	3198 017 41050	1uF 10V
2079	3198 017 41050	1uF 10V
2080	2238 586 59812	100nF 50V
2201	2022 020 00625	220uF 20% 16V
2202	4822 124 80231	47uF 20% 16V
2203	4822 124 23052	100uF 20% 16V
2204	4822 124 23052	100uF 20% 16V
2205	4822 124 23052	100uF 20% 16V
2206	4822 124 80231	47uF 20% 16V
2207	4822 124 80231	47uF 20% 16V
2208	4822 124 22651	1uF 20% 50V
2209	4822 124 22651	1uF 20% 50V
2210	2022 020 00625	220uF 20% 16V
2211	4822 124 21732	10uF 20% 25V
2212	4822 124 80231	47uF 20% 16V
2213	4822 124 23052	100uF 20% 16V
2214	2022 020 00625	220uF 20% 16V
2215	4822 124 21732	10uF 20% 25V
2216	4822 124 23052	100uF 20% 16V
2217	2022 020 00625	220uF 20% 16V
2218	2022 020 00625	220uF 20% 16V
2301	2238 586 59812	100nF 50V
2302	2238 586 59812	100nF 50V
2303	2238 586 59812	100nF 50V
2304	2238 586 59812	100nF 50V
2305	2238 586 59812	100nF 50V
2306	2238 586 59812	100nF 50V

ELECTRICAL PARTS LIST - MONO-FE BOARD

2307	2238 586 59812	100nF 50V
2308	2238 586 59812	100nF 50V
2309	2238 586 59812	100nF 50V
2310	2238 586 59812	100nF 50V
2312	2238 586 59812	100nF 50V
2313	2238 586 59812	100nF 50V
2314	2238 586 59812	100nF 50V
2315	2238 586 59812	100nF 50V
2316	2238 586 59812	100nF 50V
2317	2238 586 59812	100nF 50V
2318	2238 586 59812	100nF 50V
2319	2238 586 59812	100nF 50V
2320	2238 586 59812	100nF 50V

RESISTORS

3001	4822 117 11817	1k2 1% 1/16W
3002	4822 117 13632	100k 1% 0,062W
3003	4822 051 30563	56k 5% 0,062W
3004	4822 051 30103	10k 5% 0,062W
3005	2322 704 65102	5k1 1% 0,062W
3007	4822 051 30472	4k7 5% 0,062W
3009	2322 704 62003	20k 1% 0,062W
3010	2322 704 65103	51k 1% 0,062W
3012	4822 051 30332	3k3 5% 0,062W
3013	4822 051 30332	3k3 5% 0,062W
3014	4822 051 30332	3k3 5% 0,062W
3015	4822 051 30102	1k 5% 0,062W
3017	4822 117 12925	47k 1% 0,063W
3018	4822 051 30339	33R 5% 0,062W
3020	4822 051 30332	3k3 5% 0,062W
3022	4822 051 30472	4k7 5% 0,062W
3025	2322 704 65102	5k1 1% 0,062W
3026	4822 051 30103	10k 5% 0,062W
3027	4822 117 13632	100k 1% 0,062W
3028	4822 051 30109	10R 5% 0,062W
3029	4822 051 30109	10R 5% 0,062W
3031	5322 117 13056	8k2 1% 0,063W
3032	2322 704 65102	5k1 1% 0,062W
3033	4822 051 30339	33R 5% 0,062W
3034	4822 051 30339	33R 5% 0,062W
3035	4822 051 30339	33R 5% 0,062W
3037	2322 702 60688	6R8 5% 0,062W
3038	4822 051 30222	2k2 5% 0,062W
3039	4822 051 30222	2k2 5% 0,062W
3040	4822 051 30103	10k 5% 0,062W
3042	4822 051 30103	10k 5% 0,062W
3049	4822 051 30152	1k5 5% 0,062W
3050	4822 051 30563	56k 5% 0,062W
3051	4822 051 30103	10k 5% 0,062W
3053	5322 117 13056	8k2 1% 0,063W
3054	4822 051 30474	470k 5% 0,062W
3059	4822 051 30339	33R 5% 0,062W

3060	4822 051 30339	33R 5% 0,062W
3065	4822 051 30391	390R 5% 0,062W
3066	4822 117 13632	100k 1% 0,062W
3067	4822 051 30472	4k7 5% 0,062W
3068	4822 051 30103	10k 5% 0,062W
3069	4822 051 30102	1k 5% 0,062W
3070	4822 051 30223	22k 5% 0,062W
3071	4822 051 30103	10k 5% 0,062W
3072	4822 051 30223	22k 5% 0,062W
3073	4822 051 30103	10k 5% 0,062W
3074	4822 051 30103	10k 5% 0,062W
3075	4822 117 13632	100k 1% 0,062W
3076	4822 117 13632	100k 1% 0,062W
3077	4822 051 30339	33R 5% 0,062W
3087	4822 051 30332	3k3 5% 0,062W
3088	4822 051 30103	10k 5% 0,062W
3089	4822 051 30103	10k 5% 0,062W
3090	4822 051 30333	33k 5% 0,062W
3091	4822 051 30333	33k 5% 0,062W
3092	4822 051 30223	22k 5% 0,062W
3093	4822 117 12925	47k 1% 0,063W
3094	4822 051 30333	33k 5% 0,062W
3095	4822 051 30339	33R 5% 0,062W
3096	4822 051 30123	12k 5% 0,062W
3097	4822 117 12925	47k 1% 0,063W
3098	4822 051 30332	3k3 5% 0,062W
3099	4822 051 30103	10k 5% 0,062W
3101	4822 051 20108	1R 5% 0,1W
3102	4822 051 20108	1R 5% 0,1W
3103	4822 051 20108	1R 5% 0,1W
3104	4822 051 20108	1R 5% 0,1W
3105	4822 051 30103	10k 5% 0,062W
3106	4822 051 30105	1M 5% 0,062W
3107	4822 051 30152	1k5 5% 0,062W
3108	4822 051 30472	4k7 5% 0,062W
3109	4822 051 30223	22k 5% 0,062W
3110	4822 051 30103	10k 5% 0,062W
3111	4822 051 30105	1M 5% 0,062W
3114	4822 051 30152	1k5 5% 0,062W
3115	4822 051 30472	4k7 5% 0,062W
3116	4822 051 30223	22k 5% 0,062W
3117	4822 051 20338	3R30 5% 0,1W
3301	4822 117 13576	RES NETWORK 4 X 33R 5% 1206
3302	4822 117 13576	RES NETWORK 4 X 33R 5% 1206
3303	4822 117 13576	RES NETWORK 4 X 33R 5% 1206
3304	4822 117 13578	RES NETWORK 4 X 10k 5% 1206
3305	4822 117 13578	RES NETWORK 4 X 10k 5% 1206
3306	4822 117 13576	RES NETWORK 4 X 33R 5% 1206
3307	4822 117 13576	RES NETWORK 4 X 33R 5% 1206
3308	4822 117 13573	RES NETWORK 4 X 47R 5% 1206
3309	4822 117 13578	RES NETWORK 4 X 10k 5% 1206
3310	4822 117 13578	RES NETWORK 4 X 10k 5% 1206

[illegible]

MONO-BE BOARD


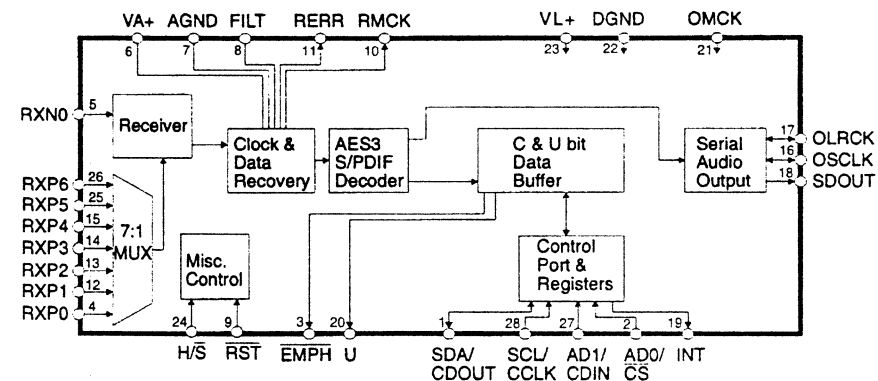


TABLE OF CONTENTS

CS8415A & M29F800DT Internal Block Diagram	12-1
Bottom View - Component Layout	12-2
Top View - SMDs & Component Layout.....	12-3
Top View - SMDs & Component Layout Part A	12-4
Top View - SMDs & Component Layout Part B	12-5
Circuit Diagram 1	12-6
Circuit Diagram 2	12-7
Circuit Diagram 3	12-8
Electrical parts list	12-9

Logic Diagram

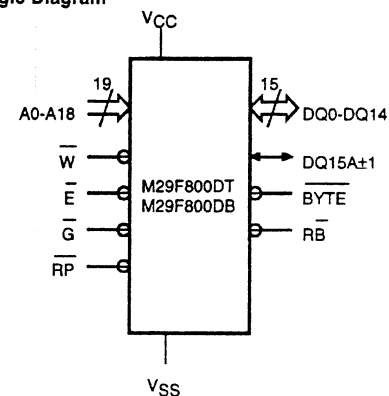

Pins connection


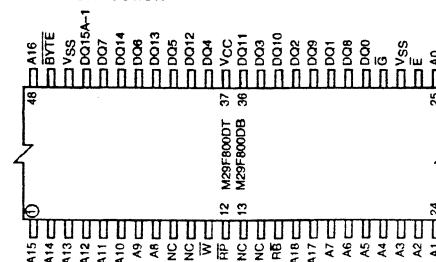



Table 1. Signal Names

A0-A18	Address Inputs
DQ0-DQ7	Data Inputs/Outputs
DQ8-DQ14	Data Inputs/Outputs
DQ15A±1	Data Input/Output or Address Input
$\overline{E}$	Chip Enable
$\overline{G}$	Output Enable
$\overline{W}$	Write Enable
$\overline{RP}$	Reset/Block Temporary Unprotect
$\overline{RB}$	Ready/Busy Output (not available on SO44 package)
BYTE	Byte/Word Organization Select
V _{CC}	Supply Voltage
V _{SS}	Ground
NC	Not Connected Internally


TOP VIEW - SMD & COMPONENT LAYOUT

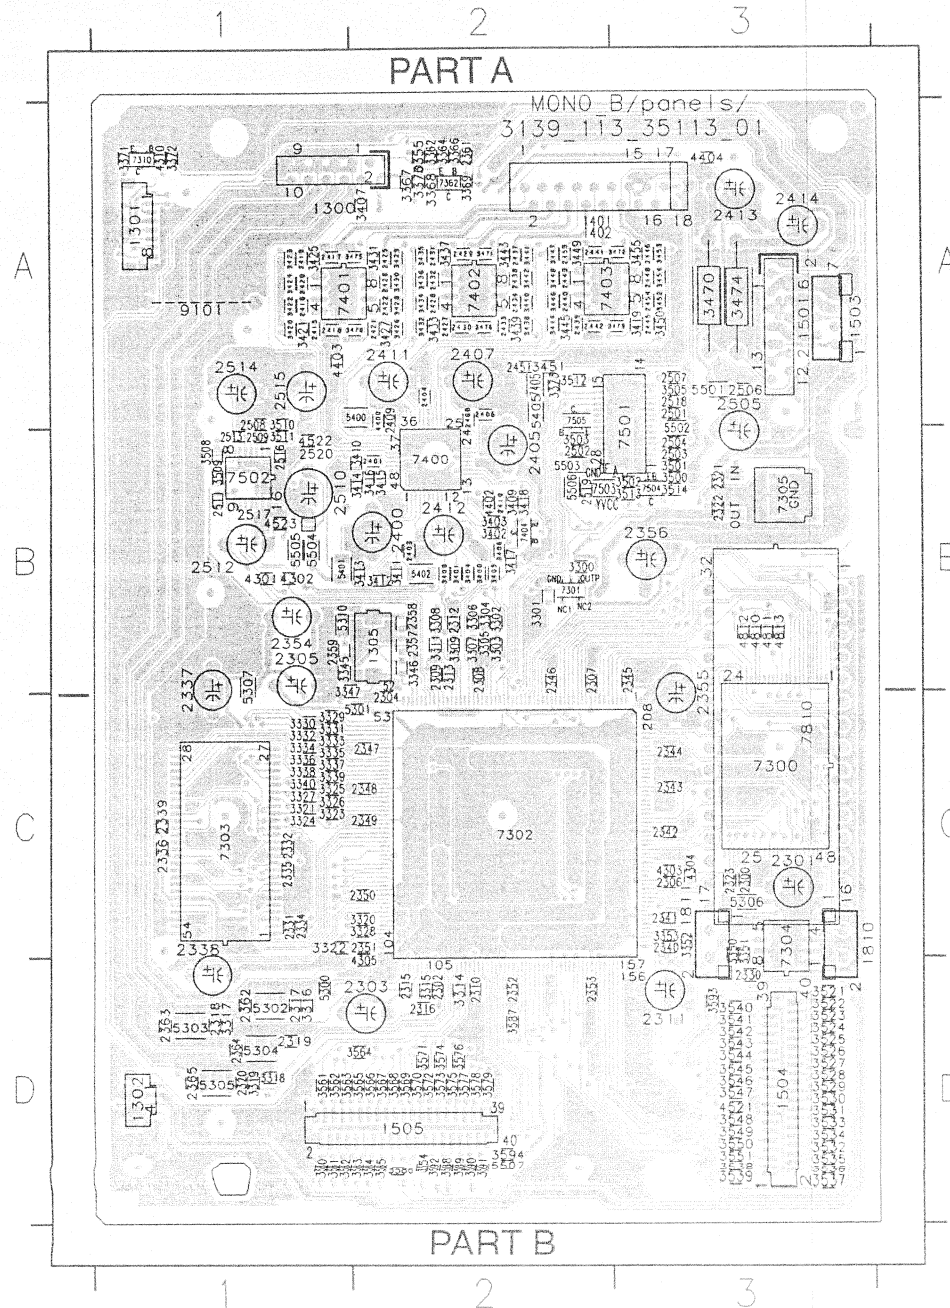


PART A

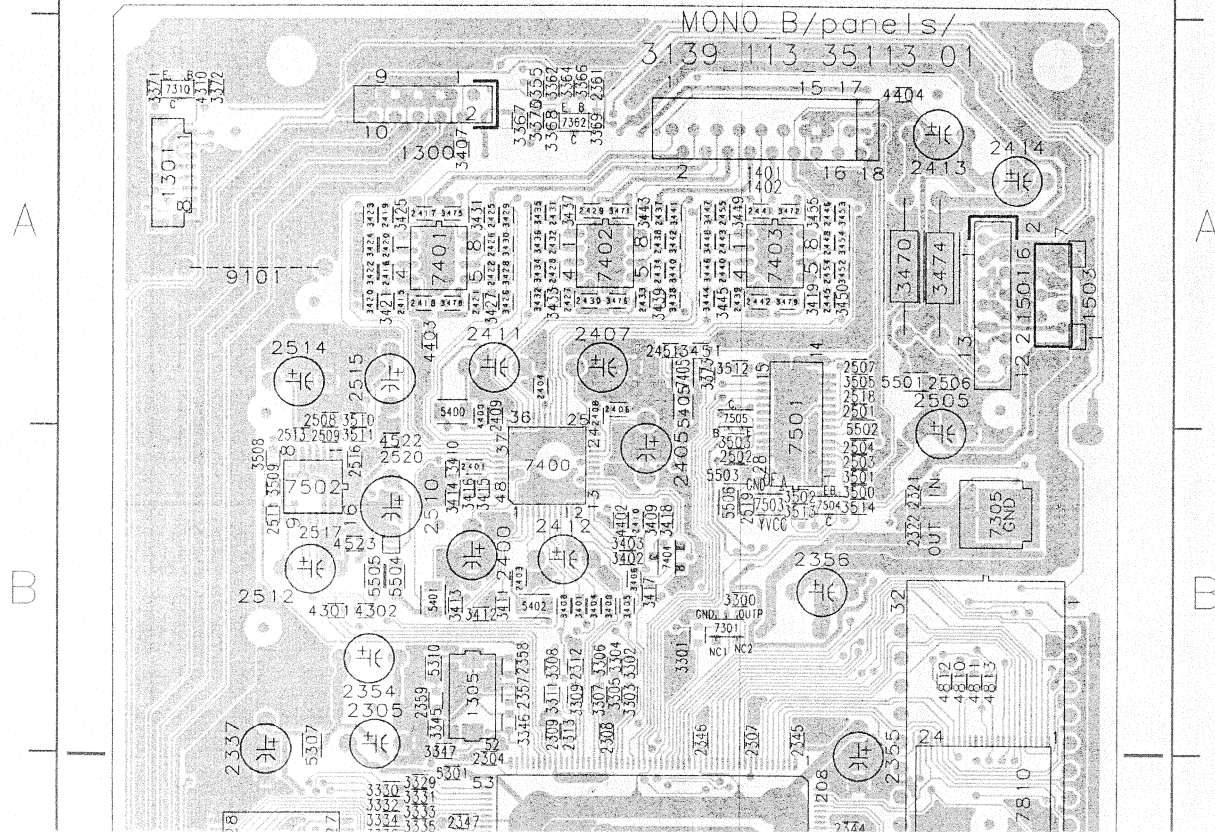


PART B

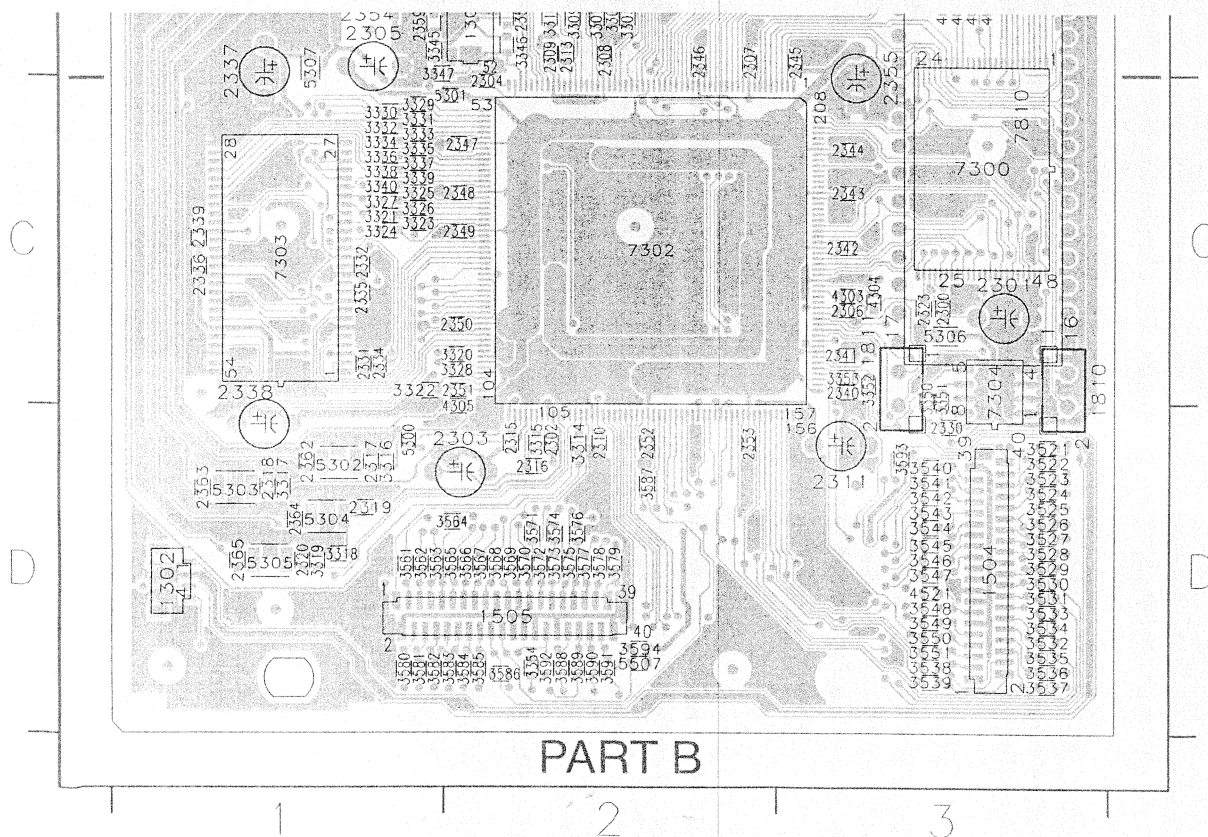


1300 C14	1811 I1	2304 B4	2309 B8	2315 D9	2320 D11	2331 H10	2337 H11	2342 A4	2347 A6	2352 A7	2357 H8	2363 D12	3302 B9	3307 B10	3315 D9	3320 E8	3325 E8	3330 E9	3335 F8	3340 H9	3352 H8	3364 B12	3370 B13	3302 A11	4810 I1	5301 A5	5306 B1	7302 E6	7810 F1
1301 I10	2300 B1	2305 B4	2320 B8	2311 B8	2316 D9	2321 A9	2332 H10	2343 A5	2348 A6	2353 A7	2358 H8	2364 D12	3303 B9	3308 B10	3316 D9	3321 E9	3326 E9	3331 F8	3336 F9	3345 H9	3358 H8	3366 B13	3371 A4	4303 C4	4811 I1	5302 D11	5307 F10	7304 I11	
1302 I14	2301 B1	2306 A8	2311 B8	2316 D9	2321 A9	2334 H10	2339 E13	2344 A5	2349 A6	2354 A8	2359 H8	2365 D12	3304 B9	3309 B8	3317 D10	3322 E8	3327 E8	3332 F8	3337 F8	3346 H8	3353 G9	3364 B13	3371 A4	4304 C4	4812 I1	5303 D11	5310 H9	7305 A9	
1305 I8	2302 A4	2307 A8	2312 B8	2318 D10	2323 E3	2335 H11	2340 A4	2345 A5	2350 A7	2355 A8	2361 B14	3300 A3	3305 B10	3311 B10	3318 D10	3323 E8	3328 E8	3333 F8	3338 F9	3347 H8	3354 H8	3367 A14	3372 I5	4304 C4	4812 I1	5303 D11	5310 H9	7305 A9	
1810 I1	2303 A4	2308 A8	2313 B9	2319 D10	2320 I12	2336 H11	2341 A4	2346 A5	2351 A7	2356 A8	2362 D12	3301 B5	3306 B10	3314 D8	3319 D11	3324 E9	3329 E8	3334 F9	3339 F8	3350 I10	3355 H8	3368 B13	3373 C11	4305 A11	4813 H2	5304 D11	7300 B2	7310 I5	

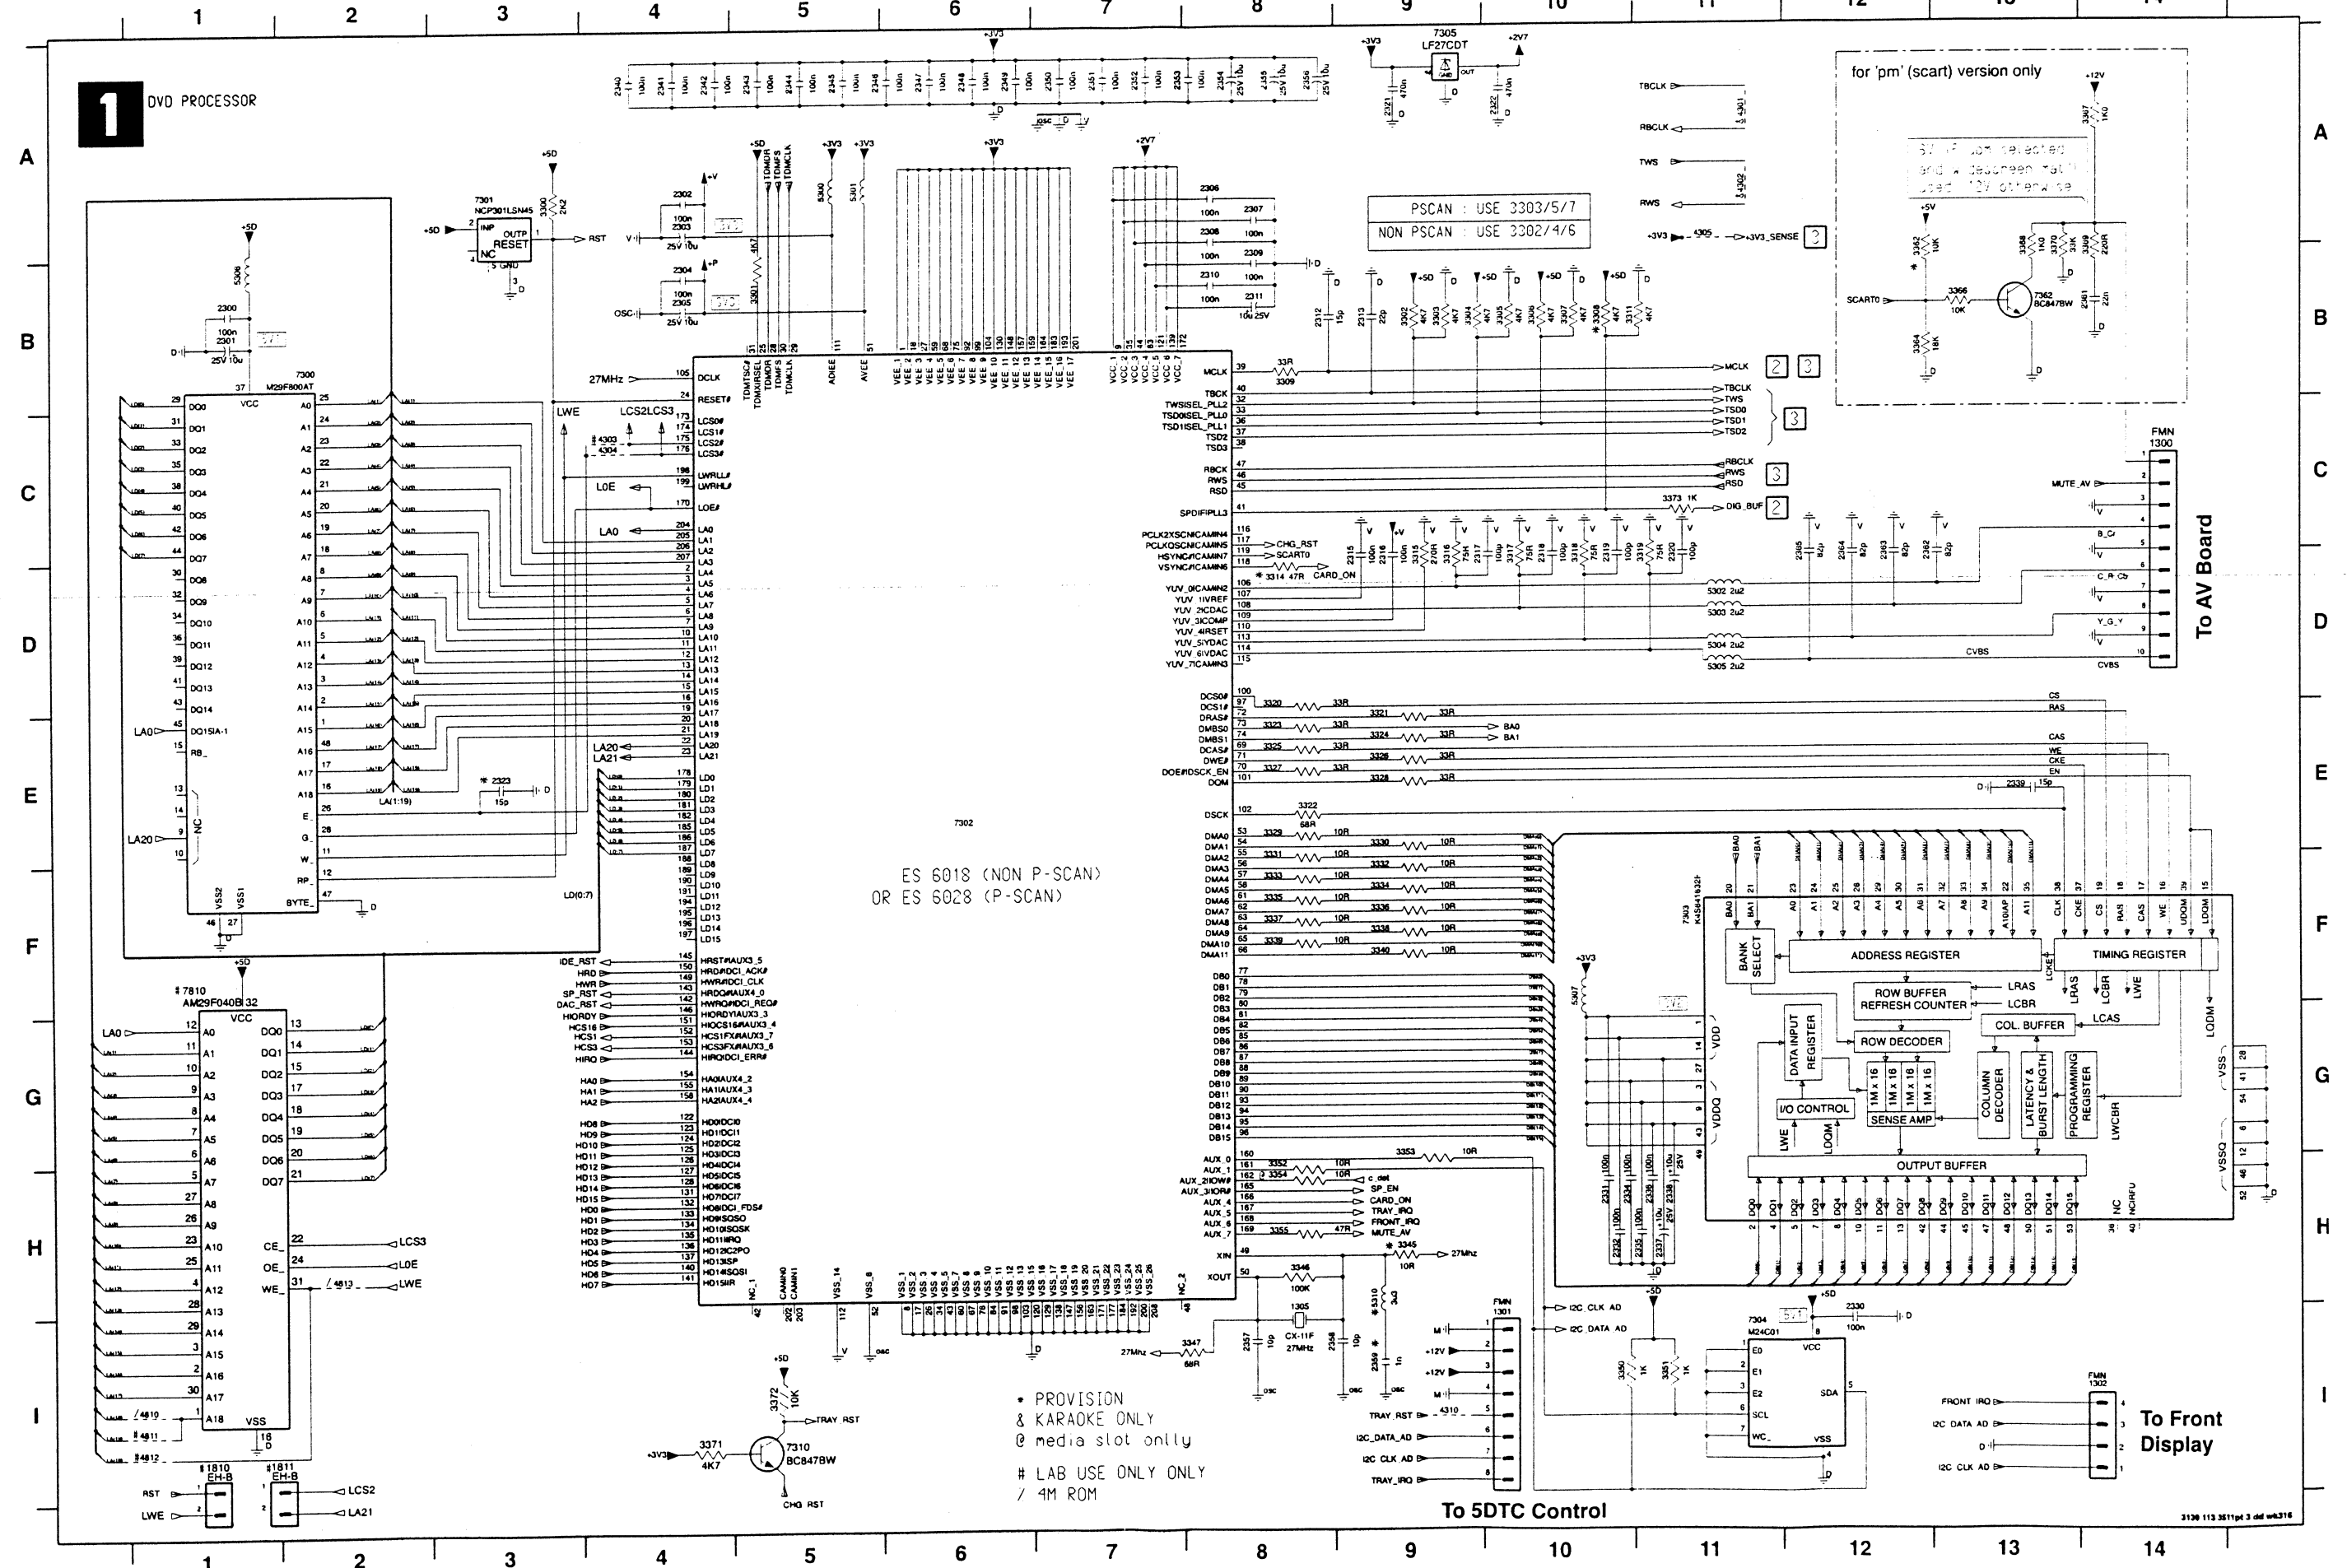

CIRCUIT DIAGRAM 2

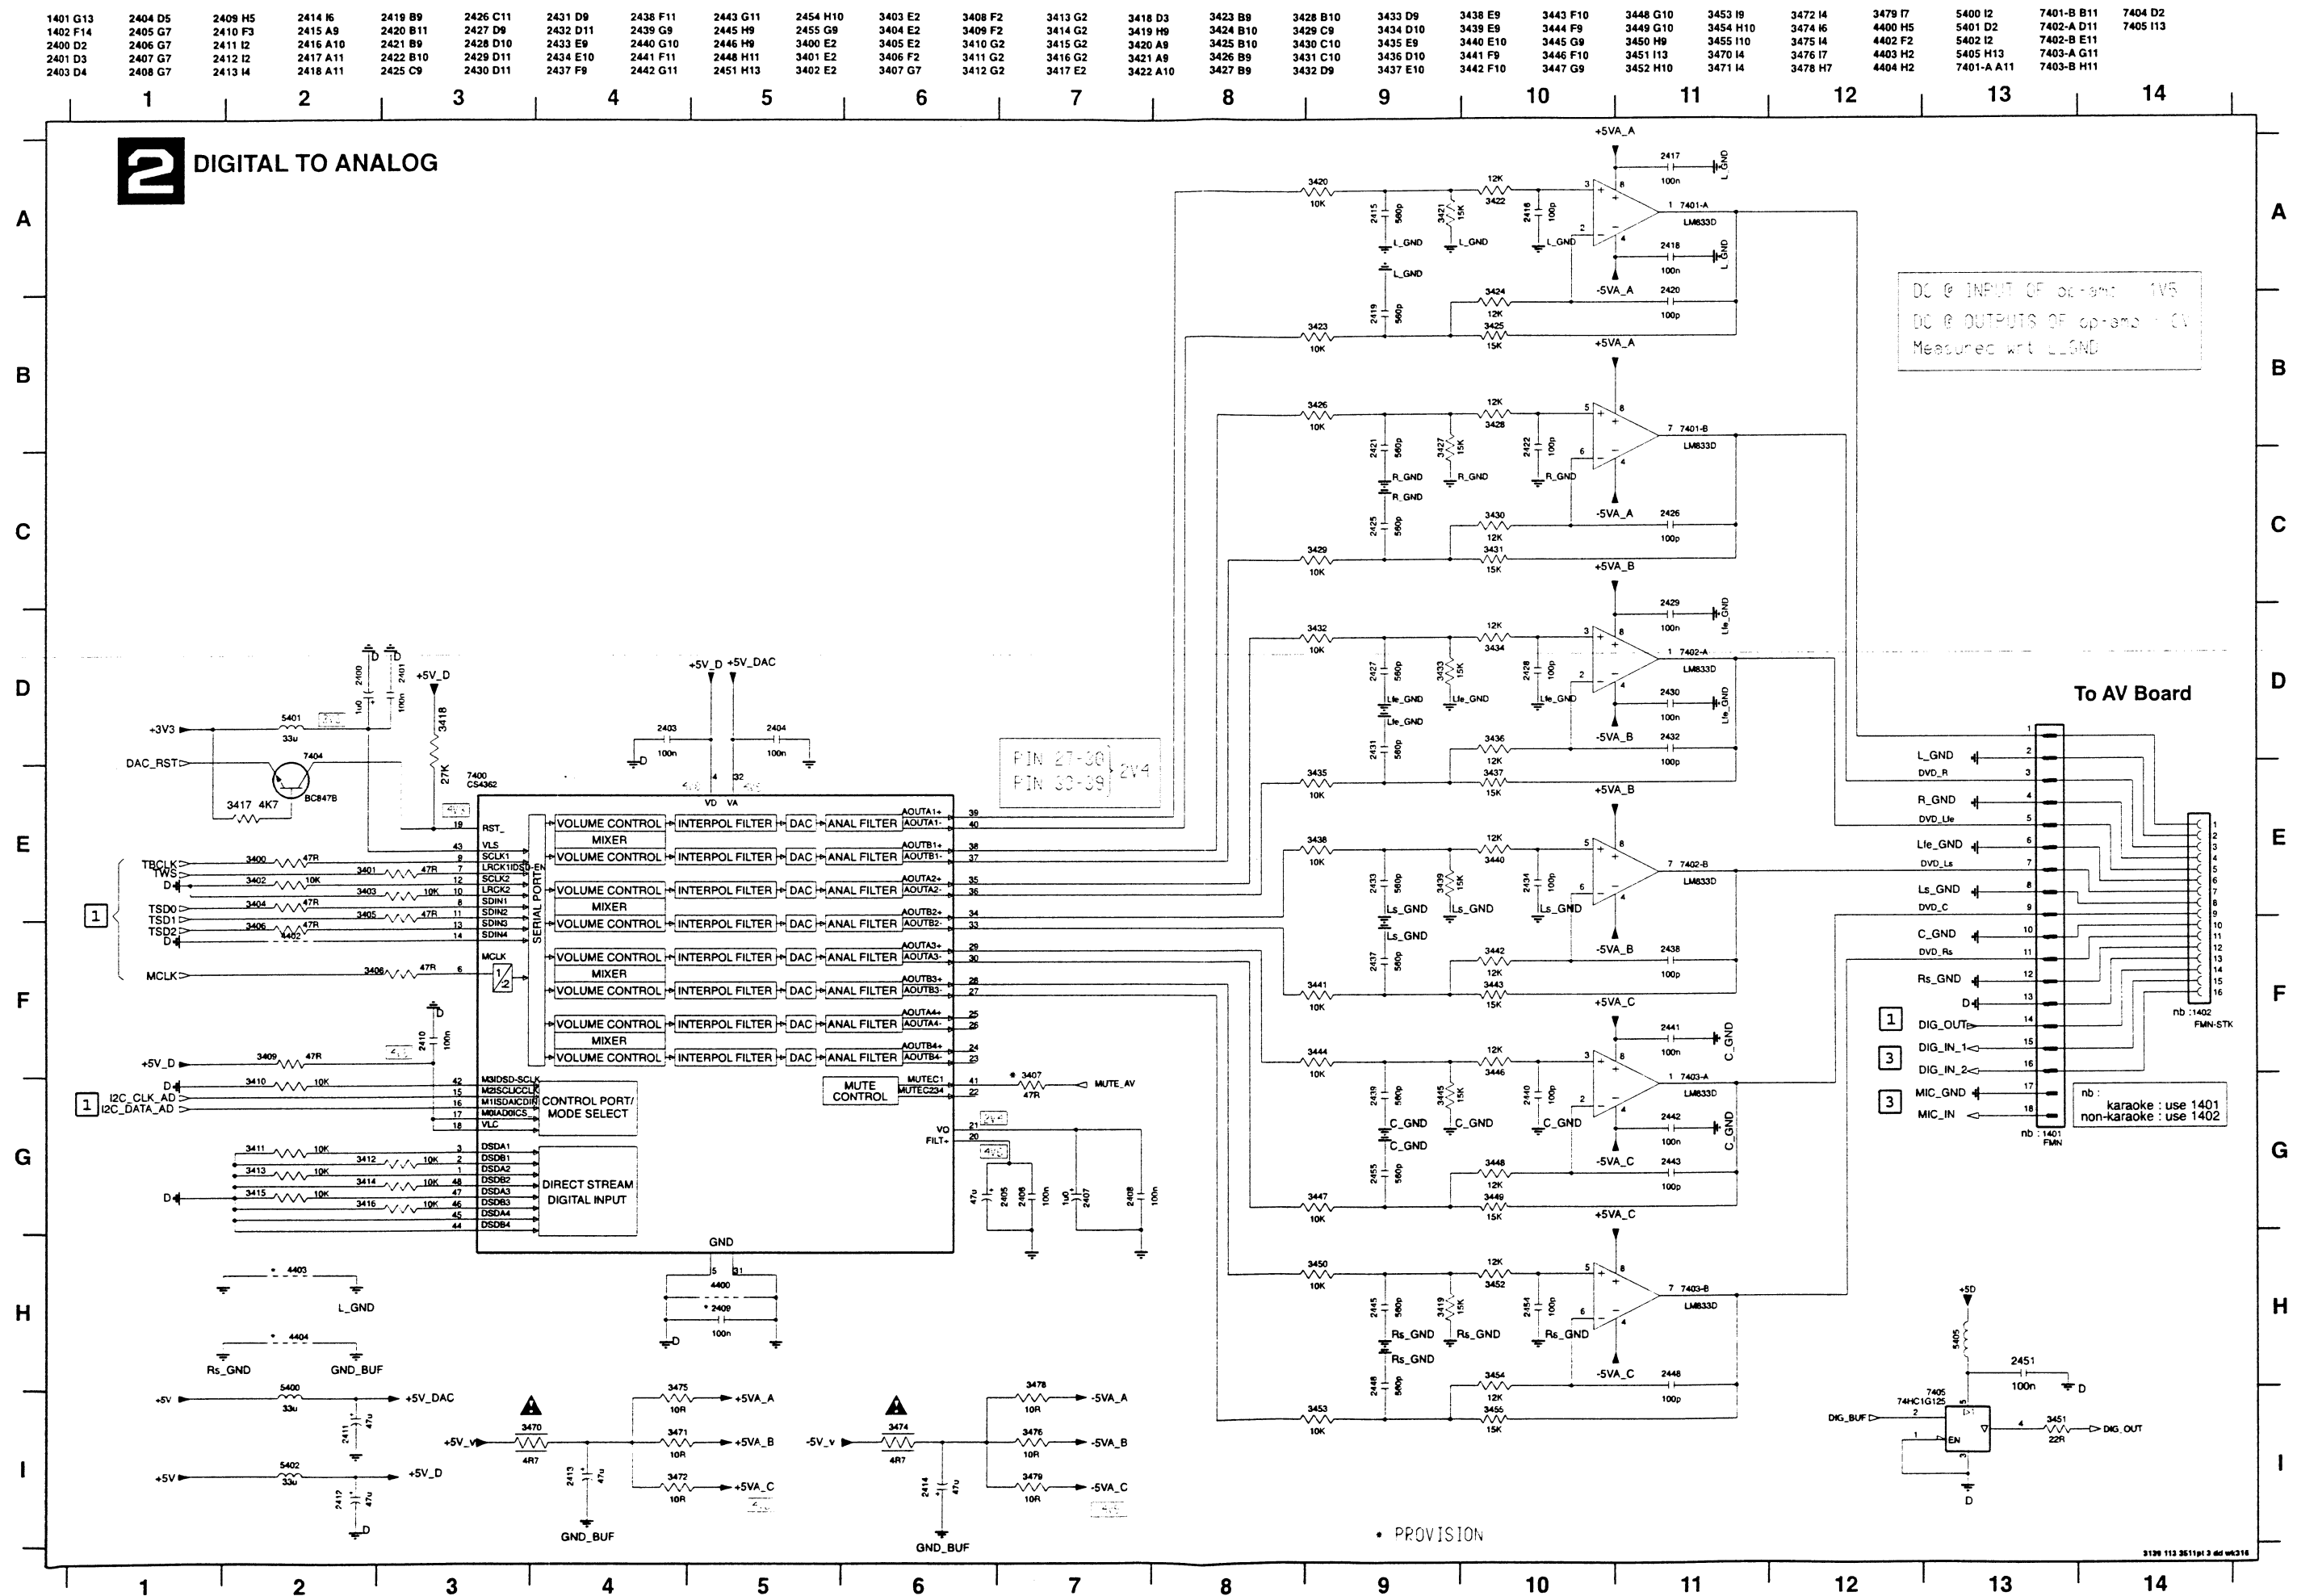

1501 A2
1503 A3
1504 F3
1505 G3
1501 A10
1503 C7
1504 C7
1505 B5
1506 B5
1507 E10
1508 G8
1509 H8
1511 F11
1511 F11
1512 G11
1513 G11
1514 G11
1515 G11
1516 H11
1517 I12
1518 E10
1519 D7
1520 H12
1500 D9
1501 C7
1502 C9
1503 E8
1505 E10
1508 G8
1509 G8
1510 G8
1511 H8
1512 E9
1513 E7
1514 E7
1521 D2
1522 D2
1523 D2
1524 D2
1525 D2
1526 D2
1527 D2
1528 E2
1529 E2
1530 E2
1531 E2
1532 E2
1533 E1
1534 E2
1535 F2
1536 F2
1537 F2
1538 F2
1539 F2
1540 D4
1541 D4
1543 D4
1544 D4
1545 D4
1546 E4
1547 E4
1548 F4
1549 F4
1551 F4
1551 G2
1562 G2
1563 G2
1564 G2
1565 G2
1566 H2
1567 H2
1568 H2
1569 H2
1570 H2
1571 H2
1572 I2
1574 I2
1575 I2
1576 I2
1577 I2
1578 I2
1579 I2
1580 G4
1581 G4
1582 G4
1583 G4
1584 G4
1585 H4
1586 H4
1587 H4
1588 I4
1589 I4
1590 I4
1591 I4
1592 I4
1593 C2
1594 H5
4521 E4
4522 H12
4523 I12
5501 A5
5502 A9
5503 A10
5504 F10
5505 F10
5506 D7
5507 H4
5501 C10
7502 G9
7503 D7
7504 E7
7505 E9



ELECTRICAL PARTS LIST - MONO-BE BOARD

MISCELLANEOUS

	3139 118 56481	Mono BE Board Assy CD222 P
	3139 118 56471	Mono BE Board Assy CD222 PM
	3139 118 56461	Mono BE Board Assy CD222 PMK
1300	2422 025 16587	Flex Socket 10P
1301	2422 025 16988	Flex Socket 8P
1302	2422 025 16792	Flex Socket 4P
1305	2422 543 01137	X'tal Resonator 27MHz
1401	2422 025 17196	Flex Socket 18P
1402	4822 267 11028	Flex Socket 16P
1501	2422 025 16591	Flex Socket 13P
1503	2422 025 17367	Flex Socket 7P
1504	2422 025 17763	Flex Socket 40P
1505	2422 025 17763	Flex Socket 40P

CAPACITORS

2300	2238 586 59812	100nF +80/-20% 50V
2301	4822 124 21732	10uF 20% 25V
2302	2238 586 59812	100nF +80/-20% 50V
2303	4822 124 21732	10uF 20% 25V
2304	2238 586 59812	100nF +80/-20% 50V
2305	4822 124 21732	10uF 20% 25V
2306	2238 586 59812	100nF +80/-20% 50V
2307	2238 586 59812	100nF +80/-20% 50V
2308	2238 586 59812	100nF +80/-20% 50V
2309	2238 586 59812	100nF +80/-20% 50V
2310	2238 586 59812	100nF +80/-20% 50V
2311	4822 124 21732	10uF 20% 25V
2312	4822 122 33752	15pF 5% 50V
2313	4822 122 33761	22pF 5% 50V
2315	2238 586 59812	100nF +80/-20% 50V
2316	2238 586 59812	100nF +80/-20% 50V
2317	2020 552 94427	100pF 5% 50V
2318	2020 552 94427	100pF 5% 50V
2319	2020 552 94427	100pF 5% 50V
2320	2020 552 94427	100pF 5% 50V
2321	3198 017 44740	470nF 10V
2322	3198 017 44740	470nF 10V
2330	2238 586 59812	100nF +80/-20% 50V
2331	2238 586 59812	100nF +80/-20% 50V
2332	2238 586 59812	100nF +80/-20% 50V
2334	2238 586 59812	100nF +80/-20% 50V
2335	2238 586 59812	100nF +80/-20% 50V
2336	2238 586 59812	100nF +80/-20% 50V
2337	4822 124 21732	10uF 20% 25V
2338	4822 124 21732	10uF 20% 25V
2339	4822 122 33752	15pF 5% 50V
2340	2238 586 59812	100nF +80/-20% 50V
2341	2238 586 59812	100nF +80/-20% 50V
2342	2238 586 59812	100nF +80/-20% 50V
2343	2238 586 59812	100nF +80/-20% 50V
2344	2238 586 59812	100nF +80/-20% 50V
2345	2238 586 59812	100nF +80/-20% 50V

2346	2238 586 59812	100nF +80/-20% 50V
2347	2238 586 59812	100nF +80/-20% 50V
2348	2238 586 59812	100nF +80/-20% 50V
2349	2238 586 59812	100nF +80/-20% 50V
2350	2238 586 59812	100nF +80/-20% 50V
2351	2238 586 59812	100nF +80/-20% 50V
2352	2238 586 59812	100nF +80/-20% 50V
2353	2238 586 59812	100nF +80/-20% 50V
2354	4822 124 21732	10uF 20% 25V
2355	4822 124 21732	10uF 20% 25V
2356	4822 124 21732	10uF 20% 25V
2357	4822 122 33741	10pF 10% 50V
2358	4822 122 33741	10pF 10% 50V
2361	3198 017 42230	22nF 50V
2362	4822 126 14226	82pF 5% 50V
2363	4822 126 14226	82pF 5% 50V
2364	4822 126 14226	82pF 5% 50V
2365	4822 126 14226	82pF 5% 50V
2400	4822 124 22651	1uF 20% 50V
2401	2238 586 59812	100nF +80/-20% 50V
2403	2238 586 59812	100nF +80/-20% 50V
2404	2238 586 59812	100nF +80/-20% 50V
2405	4822 124 80483	47uF 20% 6,3V
2406	2238 586 59812	100nF +80/-20% 50V
2407	4822 124 22651	1uF 20% 50V
2408	2238 586 59812	100nF +80/-20% 50V
2410	2238 586 59812	100nF +80/-20% 50V
2411	4822 124 80483	47uF 20% 6,3V
2412	4822 124 80483	47uF 20% 6,3V
2413	4822 124 80483	47uF 20% 6,3V
2414	4822 124 80483	47uF 20% 6,3V
2415	4822 126 14249	560pF 10% 50V
2416	2020 552 94427	100pF 5% 50V
2417	2238 586 59812	100nF +80/-20% 50V
2418	2238 586 59812	100nF +80/-20% 50V
2419	4822 126 14249	560pF 10% 50V
2420	2020 552 94427	100pF 5% 50V
2421	4822 126 14249	560pF 10% 50V
2422	2020 552 94427	100pF 5% 50V
2425	4822 126 14249	560pF 10% 50V
2426	2020 552 94427	100pF 5% 50V
2427	4822 126 14249	560pF 10% 50V
2428	2020 552 94427	100pF 5% 50V
2429	2238 586 59812	100nF +80/-20% 50V
2430	2238 586 59812	100nF +80/-20% 50V
2431	4822 126 14249	560pF 10% 50V
2432	2020 552 94427	100pF 5% 50V
2433	4822 126 14249	560pF 10% 50V
2434	2020 552 94427	100pF 5% 50V
2437	4822 126 14249	560pF 10% 50V
2438	2020 552 94427	100pF 5% 50V
2439	4822 126 14249	560pF 10% 50V

ELECTRICAL PARTS LIST - MONO-BE BOARD

2440	2020 552 94427	100pF 5% 50V
2441	2238 586 59812	100nF +80/-20% 50V
2442	2238 586 59812	100nF +80/-20% 50V
2443	2020 552 94427	100pF 5% 50V
2445	4822 126 14249	560pF 10% 50V
2446	4822 126 14249	560pF 10% 50V
2448	2020 552 94427	100pF 5% 50V
2451	2238 586 59812	100nF +80/-20% 50V
2454	2020 552 94427	100pF 5% 50V
2455	4822 126 14249	560pF 10% 50V
2501	2238 586 59812	100nF +80/-20% 50V
2502	2238 586 59812	100nF +80/-20% 50V
2503	2238 586 59812	100nF +80/-20% 50V
2504	2238 586 59812	100nF +80/-20% 50V
2505	4822 124 21732	10uF 20% 25V
2506	3198 017 41050	1uF 10V
2507	2238 586 59812	100nF +80/-20% 50V
2508	3198 017 41050	1uF 10V
2509	3198 017 41050	1uF 10V
2510	4822 124 42234	100uF 20% 6,3V
2511	2238 586 59812	100nF +80/-20% 50V
2512	4822 124 80483	47uF 20% 6,3V
2513	2238 586 59812	100nF +80/-20% 50V
2514	4822 124 80483	47uF 20% 6,3V
2515	4822 124 80483	47uF 20% 6,3V
2516	2238 586 59812	100nF +80/-20% 50V
2518	4822 126 13193	4,7nF 10% 63V
2519	2238 586 59812	100nF +80/-20% 50V
2520	2238 586 59812	100nF +80/-20% 50V

RESISTORS

3300	4822 051 30222	2k2 5% 0,062W
3301	4822 051 30472	4k7 5% 0,062W
3303	4822 051 30472	4k7 5% 0,062W
3305	4822 051 30472	4k7 5% 0,062W
3307	4822 051 30472	4k7 5% 0,062W
3309	4822 051 30339	33R 5% 0,062W
3311	4822 051 30472	4k7 5% 0,062W
3315	4822 051 30271	270R 5% 0,062W
3316	4822 051 30759	75R 5% 0,062W
3317	4822 051 30759	75R 5% 0,062W
3318	4822 051 30759	75R 5% 0,062W
3319	4822 051 30759	75R 5% 0,062W
3320	4822 051 30339	33R 5% 0,062W
3321	4822 051 30339	33R 5% 0,062W
3322	4822 051 30689	68R 5% 0,063W
3323	4822 051 30339	33R 5% 0,062W
3324	4822 051 30339	33R 5% 0,062W
3325	4822 051 30339	33R 5% 0,062W
3326	4822 051 30339	33R 5% 0,062W
3327	4822 051 30339	33R 5% 0,062W
3328	4822 051 30339	33R 5% 0,062W


3329	4822 051 30109	10R 5% 0,062W
3330	4822 051 30109	10R 5% 0,062W
3331	4822 051 30109	10R 5% 0,062W
3332	4822 051 30109	10R 5% 0,062W
3333	4822 051 30109	10R 5% 0,062W
3334	4822 051 30109	10R 5% 0,062W
3335	4822 051 30109	10R 5% 0,062W
3336	4822 051 30109	10R 5% 0,062W
3337	4822 051 30109	10R 5% 0,062W
3338	4822 051 30109	10R 5% 0,062W
3339	4822 051 30109	10R 5% 0,062W
3340	4822 051 30109	10R 5% 0,062W
3346	4822 117 13632	100k 1% 0,62W
3347	4822 051 30689	68R 5% 0,063W
3350	4822 051 30102	1k 5% 0,062W
3351	4822 051 30102	1k 5% 0,062W
3352	4822 051 30109	10R 5% 0,062W
3353	4822 051 30109	10R 5% 0,062W
3354	4822 051 30109	10R 5% 0,062W
3355	4822 051 30479	47R 5% 0,062W
3364	4822 051 30183	18k 5% 0,062W
3366	4822 051 30103	10k 5% 0,062W
3367	4822 051 30102	1k 5% 0,062W
3368	4822 051 30102	1k 5% 0,062W
3369	4822 051 30221	220R 5% 0,062W
3370	4822 051 30333	33k 5% 0,062W
3371	4822 051 30472	4k7 5% 0,062W
3372	4822 051 30103	10k 5% 0,062W
3373	4822 051 30102	1k 5% 0,062W
3400	4822 051 30479	47R 5% 0,062W
3401	4822 051 30479	47R 5% 0,062W
3402	4822 051 30103	10k 5% 0,062W
3403	4822 051 30103	10k 5% 0,062W
3404	4822 051 30479	47R 5% 0,062W
3405	4822 051 30479	47R 5% 0,062W
3406	4822 051 30479	47R 5% 0,062W
3408	4822 051 30479	47R 5% 0,062W
3409	4822 051 30479	47R 5% 0,062W
3410	4822 051 30103	10k 5% 0,062W
3411	4822 051 30103	10k 5% 0,062W
3412	4822 051 30103	10k 5% 0,062W
3413	4822 051 30103	10k 5% 0,062W
3414	4822 051 30103	10k 5% 0,062W
3415	4822 051 30103	10k 5% 0,062W
3416	4822 051 30103	10k 5% 0,062W
3417	4822 051 30472	4k7 5% 0,062W
3418	4822 051 30273	27k 5% 0,062W
3419	4822 051 30153	15k 5% 0,062W
3420	4822 051 30103	10k 5% 0,062W
3421	4822 051 30153	15k 5% 0,062W
3422	4822 051 30123	12k 5% 0,062W
3423	4822 051 30103	10k 5% 0,062W

ELECTRICAL PARTS LIST - MONO-BE BOARD

RESISTORS

3424	4822 051 30123	12k 5% 0,062W
3425	4822 051 30153	15k 5% 0,062W
3426	4822 051 30103	10k 5% 0,062W
3427	4822 051 30153	15k 5% 0,062W
3428	4822 051 30123	12k 5% 0,062W
3429	4822 051 30103	10k 5% 0,062W
3430	4822 051 30123	12k 5% 0,062W
3431	4822 051 30153	15k 5% 0,062W
3432	4822 051 30103	10k 5% 0,062W
3433	4822 051 30153	15k 5% 0,062W
3434	4822 051 30123	12k 5% 0,062W
3435	4822 051 30103	10k 5% 0,062W
3436	4822 051 30123	12k 5% 0,062W
3437	4822 051 30153	15k 5% 0,062W
3438	4822 051 30103	10k 5% 0,062W
3439	4822 051 30153	15k 5% 0,062W
3440	4822 051 30123	12k 5% 0,062W
3441	4822 051 30103	10k 5% 0,062W
3442	4822 051 30123	12k 5% 0,062W
3443	4822 051 30153	15k 5% 0,062W
3444	4822 051 30103	10k 5% 0,062W
3445	4822 051 30153	15k 5% 0,062W
3446	4822 051 30123	12k 5% 0,062W
3447	4822 051 30103	10k 5% 0,062W
3448	4822 051 30123	12k 5% 0,062W
3449	4822 051 30153	15k 5% 0,062W
3450	4822 051 30103	10k 5% 0,062W
3451	4822 117 12139	22R 5% 0,062W
3452	4822 051 30123	12k 5% 0,062W
3453	4822 051 30103	10k 5% 0,062W
3454	4822 051 30123	12k 5% 0,062W
3455	4822 051 30153	15k 5% 0,062W
3470	4822 052 10478	4R7 5% 0,33W
3471	4822 051 30109	10R 5% 0,062W
3472	4822 051 30109	10R 5% 0,062W
3474	4822 052 10478	4R7 5% 0,33W
3475	4822 051 30109	10R 5% 0,062W
3476	4822 051 30109	10R 5% 0,062W
3478	4822 051 30109	10R 5% 0,062W
3479	4822 051 30109	10R 5% 0,062W
3500	4822 051 30103	10k 5% 0,062W
3501	4822 051 30759	75R 5% 0,062W
3502	4822 051 30479	47R 5% 0,062W
3503	4822 051 30472	4k7 5% 0,062W
3505	4822 117 11817	1k2 1% 1/16W
3506	4822 051 30479	47R 5% 0,062W
3509	4822 051 30479	47R 5% 0,062W
3510	4822 051 30123	12k 5% 0,062W
3511	4822 051 30123	12k 5% 0,062W
3512	4822 051 30103	10k 5% 0,062W
3513	4822 051 30103	10k 5% 0,062W
3514	4822 051 30472	4k7 5% 0,062W

EXPLODED VIEW - MAIN UNIT

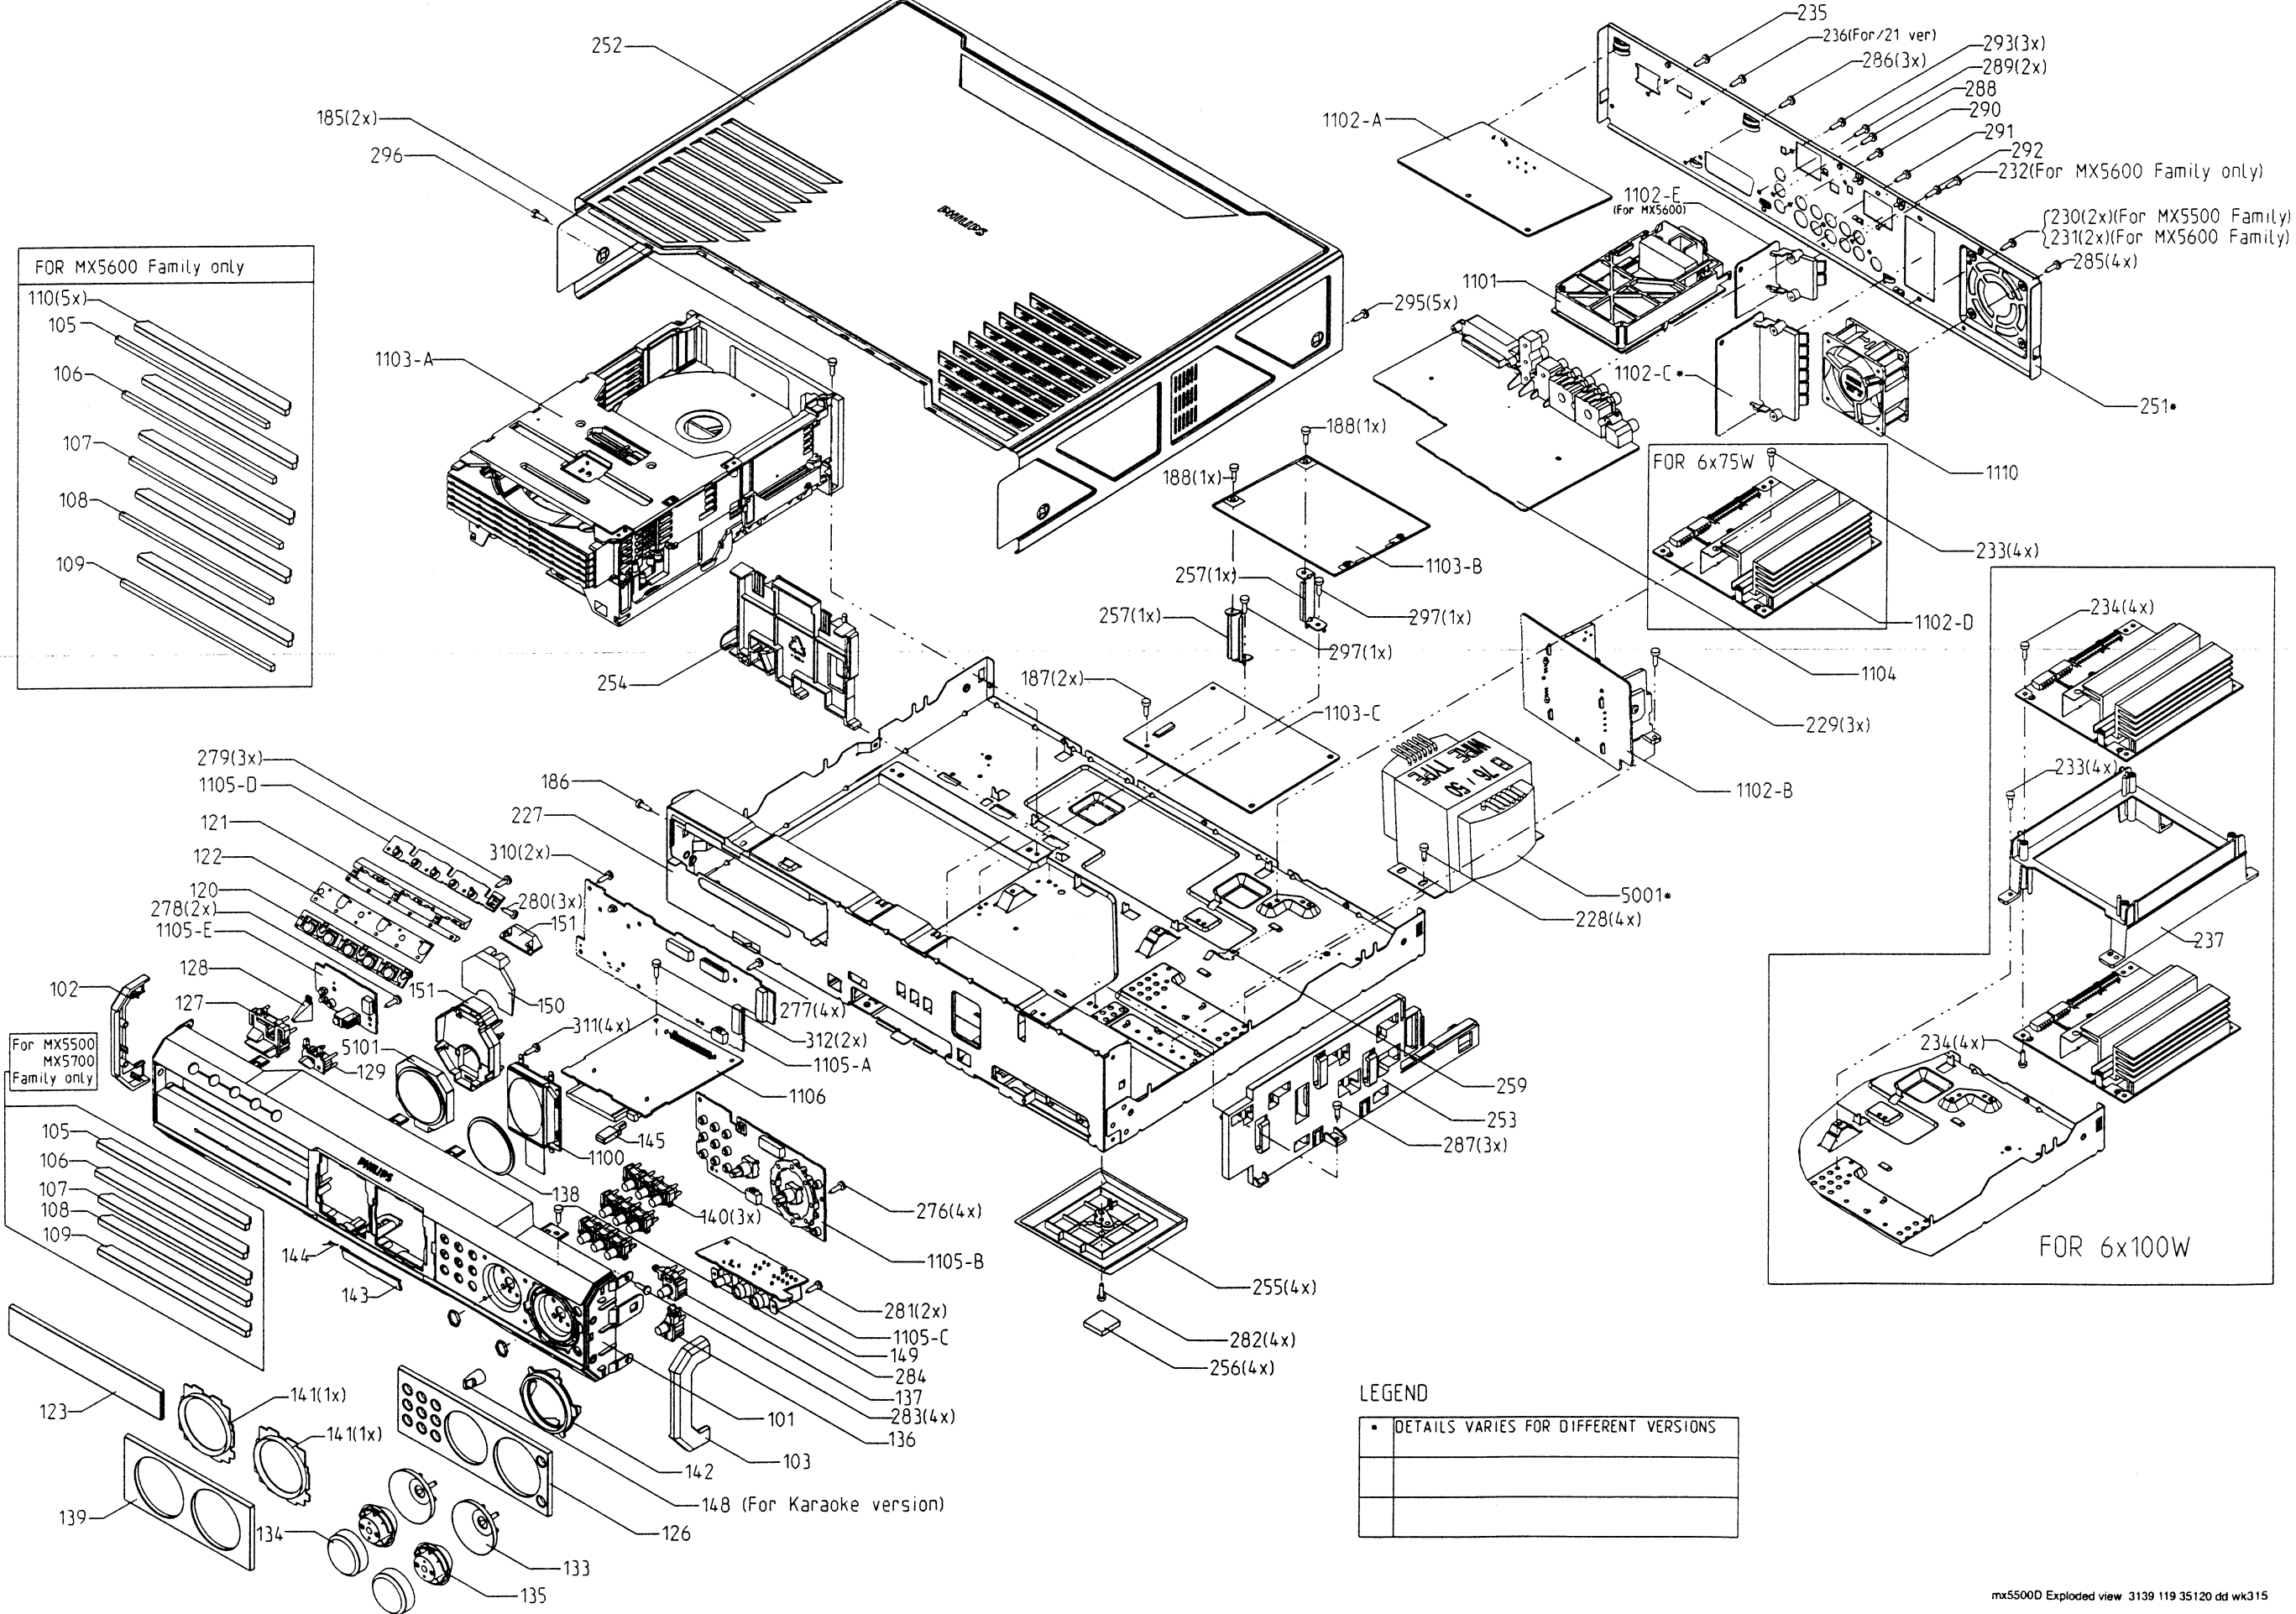

MECHANICAL & ACCESSORIES PARTS LIST - MAIN UNIT

101	3139 118 19351	Cabinet Front	MX5500D/21S	345	3139 119 00581	Satellite LS pack	MX5500D/21S
101	3139 118 19341	Cabinet Front	MX5500D/37	345	3139 119 00601	Satellite LS pack	not for MX5500D/21S
101	3139 257 50801	Cabinet Front	MX5600D/37	346	3139 119 00591	Subwoofer Box	MX5500D/21S
101	3139 257 51111	Cabinet Front	MX5700D/22S/25S	346	3139 119 00571	Subwoofer Box	MX5500D/37
101	3139 257 51361	Cabinet Front	MX5700D/21R/21S	346	3139 119 00611	Stand Subwoofer Box	MX5600D
102	3139 118 18801	Cover Cabinet Side Left		346	3139 119 00651	Stand Subwoofer Box	MX5700D
103	3139 118 18811	Cover Cabinet Side Right		351	4822 303 50063	FM Antenna	
105	3139 118 19361	Cover Tray Disc1	MX5500D/MX5700D	352	4822 303 50082	AM Loop Antenna	
105	3139 118 19961	Cover Tray Disc1	MX5600D	353	3139 228 61701	Remote Control RC19241001/01	
106	3139 118 19371	Cover Tray Disc2	MX5500D/MX5700D	356	2422 070 98151	Δ Mains Cord 2A5 1,5M	/21R/21S/22S
106	3139 118 19771	Cover Tray Disc2	MX5600D	356	9965 000 07586	Δ Mains Cord 2A5 1,5M	/25S
107	3139 118 19381	Cover Tray Disc3	MX5500D/MX5700D	356	2422 070 98246	Δ Mains Cord UL 7A 1,5M	/37
107	3139 118 19981	Cover Tray Disc3	MX5600D	357	3139 128 73010	Δ Adapter Plug 6A 250V	/21S
108	3139 118 19391	Cover Tray Disc4	MX5500D/MX5700D	358	4822 263 21206	Cinch Cable 1,7M Yel	not for /22S/25S
108	3139 118 19991	Cover Tray Disc4	MX5600D	361	2422 076 00374	Cinch Cable 1,5M 3P	not for /22S/25S
109	3139 118 19401	Cover Tray Disc5	MX5500D/MX5700D	362	3103 308 92610	Audio Cable 1,5M	not for /22S/25S
109	3139 257 50001	Cover Tray Disc5	MX5600D	363	2422 076 00528	Scarl Cable 1,5M 21P	/22S/25S
110	3139 114 78491	Cover Tray SDTC	MX5600D	370	3139 115 22261	Instr. For Use	MX5500D/21S
120	3139 118 19441	Button Set CD Open/Close Chrome		370	3139 115 22061	Instr. For Use	MX5500D/37
122	3139 113 27511	Cutsheet Shield CD Open/Close		370	3139 115 22121	Instr. For Use	MX5600D/37
123	3139 118 19411	Panel Left	MX5500D/MX5700D	370	3139 115 22281	Instr. For Use	MX5700D/22S/25S
123	3139 257 50011	Panel Left	MX5600D	370	3139 115 22681	Instr. For Use	MX5700D/21R/22S
126	3139 118 19431	Panel Control	MX5500D/MX5700D	371	3139 115 22551	Instr. For Use Book 2	MX5700D/22S
126	3139 257 50031	Panel Control	MX5600D	1100	3139 119 00831	LCD Module MX5500D-01	
127	3139 118 18871	Button Set Power Eco		1106	3139 118 56571	PCMCIA Board	
128	3139 114 77041	Lightguide Power Eco Stdby		1110	2822 031 01494	Fan 12Vdc 0,8W 3100rpm B	
133	3139 118 18941	Ring Ornamental		5001	3139 118 32641	Δ Mains Transfo 6x75W	MX5500D/21S
134	3139 118 18931	Cap Knob Rotary Chrome		5001	3139 118 32702	Δ Mains Transfo 6x100W	MX5600D/37
135	3139 118 18921	Knob Source/Vol Rotary		5001	3139 118 32631	Δ Mains Transfo 8x100W	MX5700D/22S/25S
136	3139 118 19481	Button Set Bass Chrome		5001	3139 118 32621	Δ Mains Transfo 8x100W	MX5700D/21R/21S
137	3139 118 19471	Button Set Treble Chrome		5101	3139 110 53431	VU Meter FG-PH16CATS00 Black	
138	3139 257 51531	Window Display		8000	3139 110 35031	Flex Cable 8P 14cm AD	
139	3139 118 19421	Panel Display	MX5500D/MX5700D	8001	3139 111 02001	Flex Cable 13P 40cm BD	
139	3139 257 50021	Panel Display	MX5600D	8002	3139 111 02461	Flex Cable 14P 40cm AD	
140	3139 118 19451	Button Set Ctrl Chrome		8003	3139 111 02211	Flex Cable 16P 10cm AD	
141	3139 118 19481	Ring Orn Display	MX5500D/MX5700D	8005	3139 111 02051	Flex Cable 7P 34cm AD	
141	3139 257 50891	Ring Orn Display	MX5600D	8006	3139 110 34431	Flex Cable 8P 34cm AD	/21R/21S
142	3139 114 77551	Lightguide Volume		8006	3139 110 34861	Flex Cable 4P 34cm AD	not for/21R/21S
143	3139 257 51541	Cover PCMCIA		8008	3139 111 02021	Flex Cable 4P 22cm AD	
144	3139 111 10011	Spring Cover PCMCIA		8009	3139 111 02281	Flex Cable 40P 28cm AD	
145	3139 257 50791	Knob Eject PCMCIA		8010	3139 111 01971	Flex Cable 18P 18cm AD	/21R/21S
148	3139 257 50141	Knob Karaoke	/21R/21S	8010	3139 111 02601	Flex Cable 16P 18cm AD	not for/21R/21S
256	3139 113 27220	Foot Rubber		8011	3139 111 02591	Flex Cable 10P 28cm AD	
259	3139 111 01470	Spring Grounding		8012	3139 111 02581	Flex Cable 13P 18cm AD	
296	3139 110 40691	Screw Cap Hd Soc Hex Mac M5x6		8013	3139 111 02571	Flex Cable 10P 18cm BD	for 75W

MECHANICAL & ACCESSORIES PARTS LIST - MAIN UNIT

8014	3139 111 02571	Flex Cable 10P 18cm BD
8016	3139 110 36140	Flex Cable 4P 18cm AD
8018	3139 111 02231	Flex Cable 5P 12cm AD
8025	3139 111 02401	Flex Cable 10P 22cm BD

Note: Only the parts mentioned in this list are normal service spare parts.

MECHANICAL PARTS LIST - LOUDSPEAKERS BREAKDOWN

Breakdown of Satellite LS Package (For MX5500D/21S only)		Breakdown of Subwoofer Box (For MX5500D family)	
9965 000 18060	Front Speaker Box Left	9965 000 18059	Front Metal Grille Assembly
9965 000 18061	Front Speaker Box Right	9965 000 17046	Philips Logo
9965 000 18065	Center Speaker Box		
9965 000 18062	Surr. Speaker Box Left	Breakdown of Subwoofer Box (For MX56../MX57.. family)	
9965 000 18063	Surr. Speaker Box Right	Refer to Exploded view on page 13-3	
9965 000 18064	Front/Surround Spk Front Grille Assy	9965 000 18406	2-Pins Terminal
9965 000 18066	Center Speaker Grille Assembly	9965 000 18407	Locking Top
9965 000 17046	Philips Logo	9965 000 18413	2-Spring
9965 000 18067	Base Plate Front/Surround Speaker	9965 000 18405	4" Woofer Speaker 8R 100W
9965 000 18068	Mounting Bracket + Screw Pack	9965 000 18411	4-Pins Terminal (White & Purple)
		9965 000 18412	4-Pins Terminal (Red & Purple)

Breakdown of Satellite LS Package (Not for MX5500D/21S)


9965 000 18070	Front Speaker Box Left
9965 000 18071	Front Speaker Box Right
9965 000 18074	Center Speaker Box
9965 000 18072	Surr. Speaker Box Left
9965 000 18073	Surr. Speaker Box Right
9965 000 18064	Front/Surround Spk Front Grille Assy
9965 000 18066	Center Speaker Grille Assembly
9965 000 17046	Philips Logo
9965 000 18067	Base Plate Front/Surround Speaker
9965 000 18068	Mounting Bracket + Screw Pack

Note: Only the parts mentioned in this list are normal service spare parts.

SCREW LISTS - MAIN UNIT

185	M3 x 6	234	D3 x 10	283	M3 x 6	295	M3 x 6
186	D3 x 10	235	D3 x 10	284	M3 x 6	296	M5 x 6 Hex W/Head
187	M3 x 6	236	D3 x 10	285	D3 x 10	297	M3 x 6
188	M3 x 6	276	D3 x 10	286	M3 x 6	310	D3 x 10
228	M3 x 6	277	D3 x 10	287	M3 x 6	311	D3 x 10
229	M3 x 6	278	D3 x 10	288	D3 x 10	312	M3 x 6
230	D3 x 10	279	D2 x 8	290	D3 x 10		
231	D3 x 10	280	D2 x 8	291	D3 x 10		
232	D3 x 10	281	D2 x 8	292	D3 x 10		
233	M3 x 6	282	M3 x 6	293	D3 x 10		

EXPLODED VIEW - STAND SUBWOOFER (For MX5600D & MX5700D only)

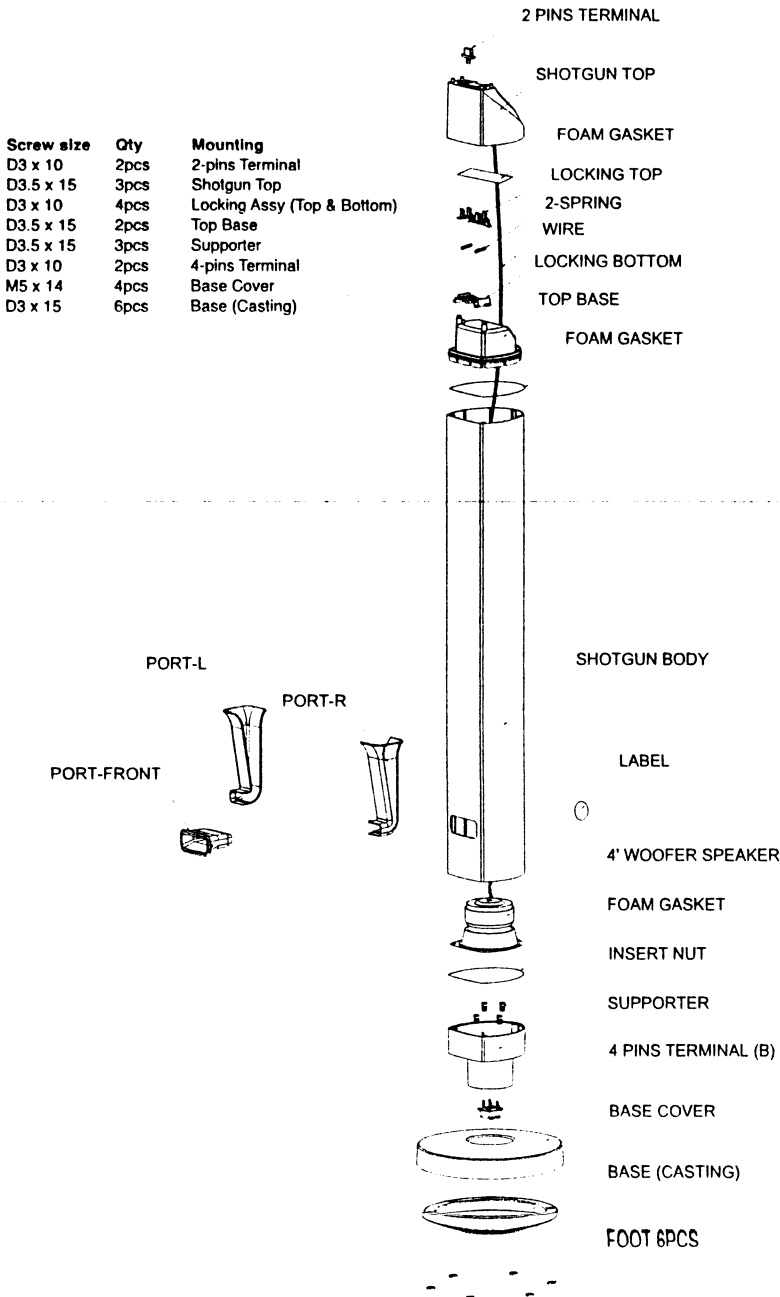

DOCUMENT HISTORY

- Version 1.0
- Initial release
- Version 1.1
- Add MX5700D/21R, MX5700D/21S and MX5700D/25S into existing service manual
 - Pages modified: Pg 1-1 to 1-3, 6-2, 6-16 to 6-17, 8-22, 9-16 to 9-18, 13-2